

TEREXLIFT

WORKSHOP MANUAL


Code 57.4400.7200 - 1st Edition 03/2005

Handler with telescopic boom

TELELIFT 3713 Elite (from serial n. 11376 to serial n. 14856)


TELELIFT 4017 (up to serial n. 14866)

TELELIFT 4514 (up to serial n. 15124)

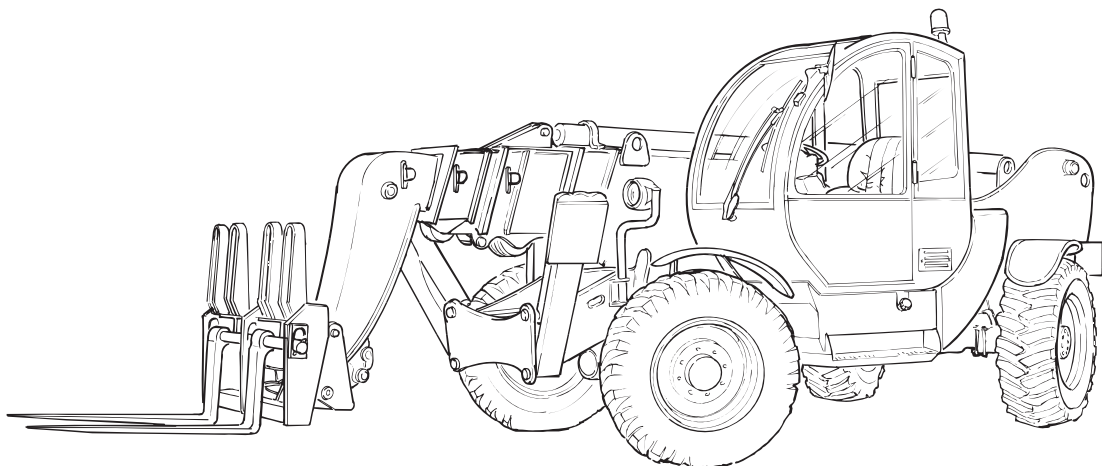

English
Edition

INDEX

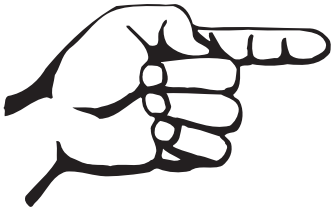

Intentionally blank page

WORKSHOP MANUAL

Code 57.4400.7200 - 1st Edition 03/2005

Number:

Consigned to:

DECLARATION

I, the undersigned.....
declare that I have received the **Workshop manual for TEREXLIFT lifts series Telelift 3713 Elite - 4017 - 4514.**

Copies consigned: n° on paper
 n° on CD-Rom

The undersigned is obliged to use the manual in their workshop, without disclosing the information in the same in any way, to unauthorised workshops and third parties in general, and not to photocopy or reproduce this manual or parts of the same in any way without the prior written authorisation of TEREXLIFT to do so.

If business relations between the undersigned and TEREXLIFT should come to an end, the undersigned is obliged to return the copies received without charges for TEREXLIFT.

Yours sincerely

Date

For acceptance

The consignee

Company stamp
and signature of the Legal representative

.....

Copy to return stamped and signed for acceptance by the
Legal representative of the company receiving the copies of the manual.



WORKSHOP MANUAL

Code 57.4400.7200 - 1st Edition 03/2005

Number:

Consigned to:

DECLARATION

I, the undersigned.....
declare that I have received the **Workshop manual for TEREXLIFT lifts series Telelift 3713 Elite - 4017 - 4514.**

Copies consigned: n° on paper
 n° on CD-Rom

The undersigned is obliged to use the manual in their workshop, without disclosing the information in the same in any way, to unauthorised workshops and third parties in general, and not to photocopy or reproduce this manual or parts of the same in any way without the prior written authorisation of TEREXLIFT to do so.

If business relations between the undersigned and TEREXLIFT should come to an end, the undersigned is obliged to return the copies received without charges for TEREXLIFT.

Yours sincerely

Date

For acceptance

The consignee

Company stamp
and signature of the Legal representative

.....

Revision No.	Revision date	Revised pages	Notes	Issued by
1	03-2005		Publication	
2				
3				
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				
26				
27				
28				
29				
30				
31				
32				
33				
34				
35				
36				

MANUAL CONTENTS**INTRODUCTION****Sect. 1 SAFETY RULES****Sect. 2 TECHNICAL SPECIFICATIONS****Sect. 3 SCHEDULED MAINTENANCE INSPECTIONS****Sect. 4 SCHEDULED MAINTENANCE PROCEDURES****Sect. 5 TROUBLESHOOTING****Sect. 6 SCHEMES****Sect. 7 REPAIR PROCEDURES**

Machine denomination	Literature valid up to serial number
TELELIFT 3713 Elite	from serial n. 11376 to serial n. 14856
TELELIFT 4017	up to serial n. 14866
TELELIFT 4514	up to serial n. 15124

INTRODUCTION

Important

Read, understand and obey the safety rules and operating instructions in the Telexift 3713 Elite - 4017 - 4514 Operator's Handbook before attempting any maintenance or repair procedure.

This manual provides the machine owner and user with detailed information on the scheduled maintenance. It also provided qualified service technicians with information on troubleshooting and repair procedures. Basic mechanical, hydraulic and electrical skills are required to perform most procedures. However, several procedures require specialized skills, as well as specific tools and equipment.

In these instances, we strongly recommend letting service and repair the machine at an authorized TEREXLIFT service center.

Technical Publications

No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means without prior written permission from TEREXLIFT srl.

In pursuing a policy of constant quality improvement, TEREXLIFT srl reserves the right to make changes at any time and without undertaking to give prior notice; therefore, also this publication may be subject to modifications.

Contact Us

<http://www.terexlift.it>

e-mail: info@terexlift.it

DESCRIPTION OF THE MACHINE OPERATION

The source of mechanical energy of this machine is a Perkins turbo-compressed diesel engine (**pos. 1**), model 1104C-44T, which supplies 74.5 kW at 2300 rev/min and with a max torque of 412 Nm at 1400 rev/min.

On the flywheel side of the engine, and connected to this engine by a Technodrive coupler with elastic joint and with a 1-to-1 ratio, there is Bosch-Rexroth closed-loop pump for hydrostatic drives, model A4VG71 (**pos. 2**) with adjustment valve of DA type. The max displacement of this swashplate pump is 71 cm³ and the max calibration pressure is 420 bar. This pump is used to supply hydraulic power under form of pressure and flow rate which is then used for moving the machine. On the through-shaft of such drive pump there is a Casappa open-loop gear pump (with fixed displacement) (**pos. 3**) with priority valve integrated in the housing. The displacement of this pump is 43 cm³. Its function is to provide hydraulic power, under form of pressure and flow rate, to the steering cylinder of the machine (priority side) and to the telescopic boom movement cylinder (secondary side).

The assembly of the two pumps involves they have a rotation velocity equal to the speed of the diesel engine. A third Casappa open-loop gear pump (with fixed displacement) (**pos. 4**) with a displacement of 25 cm³, is installed on the PTO of the engine located to the distribution side. This pump feeds the servo-assisted braking system (**pos. 24**), the control block operating the outriggers and the sway function (**pos. 28**) and the cooling fan (**pos. 34**) of the heat exchanger (**pos. 33**) used to cool down the diesel engine and the hydraulic circuit.

The suction lines of the open-loop pumps (**pos. 3**) and (**pos. 4**) are protected by an immersed filter (**pos. 9**), placed inside the hydraulic fluid tank (**pos. 10**) whose capacity is 120 litres.

The drive pump (**pos. 2**) is protected by another cartridge-filter (**pos. 8**), located on the suction line of the boost pump, such pump being integral part of the drive pump.

The one-way valve (**pos. 11**) set at 2.5 bar protects the pump housing against high pressures and guarantees a certain circulation of the drain oil to the hydrostatic motor reducing, in this way, the temperature.

From port "G" of the drive pump (**pos. 2**) low-pressure oil is taken (25-30 bar) and used for the anti-cavitation circuit of the automatic levelling system of the forks and for feeding the control circuit of the electro-proportional distributor (**pos. 16**) which controls the movements of the telescopic boom.

The hydraulic energy produced by the drive pump (**pos. 2**) is converted into mechanical power by a closed-loop hydrostatic motor, model Bosch-Rexroth A6VM80 (**pos. 5**) equipped with adjustment valve of DA1 type and with flush valve for reducing the max temperatures inside the drive circuit.

The motor is flanged to a two-speed mechanical gearbox, model 357 (**pos. 6**) manufactured by Dana. Speeds are engaged by a special oil-dynamic cylinder located inside the gearbox, while the selection of the first and second speed is controlled by a 4-way/3-position solenoid valve (**pos. 7**) of the on/off type.

The mechanical torque at the gearbox output is transmitted to the front axle (**pos. 26**) and the rear axle (**pos. 25**), both model 212 manufactured by Dana, through Cardan shafts.

The hydraulic drive (**pos. 12**) of "load sensing" type with a displacement of 315 cm³, receives oil from the priority line of the pump (**pos. 3**) in relation to the "load sensing" signal sent by the hydraulic drive and connected to such pump with function of pilot signal. In this way, the input flow to the hydraulic drive will be exactly the one needed for the instantaneous steering functions; any excess flow of the pump will be available for the functions of the telescopic boom.

The steering circuit is protected against input overpressures by a pressure reducing valve set at 140 bar. On the two delivery lines, there are other two reducing valves with anti-shock function set at 200 bar. The scope of these two valves is limiting possible shocks on the steering wheel due to overstress on the steering cylinders. The three pressure reducing valves are installed in the hydraulic drive (**pos. 12**) and cannot be regulated from the outside.

The steering circuit is completed by the front steering cylinder (**pos. 14**), the rear steering cylinder (**pos. 15**) [these cylinders being integral part of the front axle (**pos. 26**) and the rear axle (**pos. 25**) respectively] and by a 4-way/3-position solenoid valve (**pos. 13**) for the selection of the three different steer modes (rear wheels straight, co-ordinate front/rear steering and independent front/rear steering). When the solenoid valve (**pos. 13**) is not energised, the front steering cylinder is fed by the hydraulic drive and the rear cylinder is blocked. When one magnet or the other of the solenoid valve (**pos. 13**) is energised, the chambers of the cylinders are connected in a different manner thus causing the desired effect on the steering mode.

The Bucher/Tecnord electro-proportional distributor (**pos. 16**), with 4 modular sections, receives oil from the secondary line of the pump (**pos. 3**) and feeds all of the movements of the telescopic boom.

This distributor consists of an input head with 3-way pressure compensator used as a flow regulator for the user which works at max load (load sensing), and as a discharge valve when the pump flow is not used for the boom movements, and of 4 modules each one of them controlling a specific function of the telescopic boom, that is lifting/lowering, attachment holding plate rotation, boom extension/retraction, attachment locking/unlocking.

In the head there is a pressure relief valve set at 280 bar which, acting on the line of the "load sensing" signal, limits the maximum pressure at the inlet of the distributor through such 3-way compensator.

On the main inlet head of the distributor, there is the pilot line head which includes an inlet safety filter, a pressure relief valve acting on the pilot line, and a safety solenoid valve which, when de-excited, discharges the input pilot pressure, thus preventing the distributor from working. This solenoid valve is used as a "dead man" control and is activated by the relevant button on the joystick in the driving cab. The pilot head delivers oil at pressure to the 4 control modules of the distributors, such modules operating the relevant main sliders in relation to the command signal they receive from such joystick via the control unit.

Module 1 of the distributor controls the telescopic boom lifting cylinder (**pos. 17**). This cylinder has one single-acting compensation valve with safety function. The control module of element 2 of the distributor is the electro-proportional type with electrical feed-back and integrated electronics. The 0.33-lt. accumulator prefilled at 50 bar (**pos. 18**) and located on the line of the differential chamber of the lifting cylinder (**pos. 17**), allows for damping the boom swings when the same boom is moved down.

Module 2 of the distributor controls the cylinder operating the attachment holding plate of the telescopic boom (**pos. 19**). This cylinder is equipped with a double-acting compensation valve with safety function. Paralleled to this cylinder we find the fork levelling cylinder (**pos. 20**) (or balancing cylinder) equipped with a special double-acting compensation valve. Inside this valve, the one-way valves are installed in a reverse manner with respect to the normal position to avoid the pressurisation of the cylinder when the rotation command of the attachment holding plate is operated. Again inside this valve, there are other two one-way valves set at 5 bar with anti-cavitation function. These are used to deliver oil, sucked from the low pressure line coming from the drive pump (**pos. 2**), to the compensation circuit of the fork levelling function, when such circuit cannot do it alone.

The control module of element 2 of the distributor is the electro-proportional type with electrical feed-back and integrated electronics. On the two control lines of the cylinder (**pos. 19**), and integral to module 2, there are two pressure relief valves set at 295 bar which protect the automatic levelling system of the forks when the boom is moved up and down and in case of overload on the attachment holding plate (ex. use of the bucket). Module 3 of the distributor controls the boom telescopes extension cylinder (**pos. 21**). This cylinder is equipped with a double-acting compensation valve with safety function. The control module of this element of the distributor is the electro-proportional type with electrical feed-back and integrated electronics.

On the control line of the circular chamber of the cylinder (**pos. 21**) and integral to module 3, there is a pressure relief valve set at 150 bar which limits the load when the boom is extended in those working zones where the electronic overturning control system cannot detect overload conditions with respect to the load chart of the machine.

Module 4 of the distributor controls the attachment locking cylinder (**pos. 22**). This cylinder has a double one-way valve with hydraulic release and safety function. The control module of this element of the distributor is the ON/OFF electrical type with integrated electronics.

On the feeding lines of this cylinder, there are two quick-fit connectors (**pos. 23**) for the connection of the hydraulic lines to the optional attachments which need hydraulic power for their operation (ex. hydraulic winch and maintenance jib, mixing bucket, etc.).

The SAFIM S6 servo-assisted braking system with pedal (**pos. 24**) receives oil from the pump (**pos. 4**) and uses this oil to pressurise 3 hydraulic accumulators connected to the same system. The oil at pressure contained in these accumulator is then used to operate the service brakes of the two axles (**pos. 25**) and (**pos. 26**) and to release the parking brake located inside the front axle (**pos. 26**).

The fill valve inside the braking system takes the flow from the feeding line so the pressure on the line of the accumulators reaches the calibration value of the cutout valve set at 150 bar. When this pressure is reached, the valve gradually releases all the flow to line B for other uses.

The brake pedal located in the driving cab, which is an integral part of the braking system S6, is connected to two proportional sliders which control the two separated lines of the service brake, one for each axle. In relation to the stroke of these sliders, a gradual communication between the feeding line, connected to two accumulators which, at their turn, are connected to ports R1 and R2 (the accumulators have 0.5-lt. capacity and

50bar fill pressure), and the service brake lines is established so the flow is distributed to such lines and the discharge line increasing, in this way, the pressure (and as a result the braking force) on the lines of the service brakes. When the sliders are in the rest position, the lines of the service brakes are connected to the discharge.

The pressure switch set at 2-10 bar, paralleled to one of the two lines of the service brake, sends an electrical signal when this brake is engaged.

The pressure switch set at 70 bar and connected to port F, sends an electrical warning signal when the pressure inside the feeding circuit of the brake lines is too low to guarantee the minimum braking efficiency.

The accumulator with 1.5-lt. capacity and 35bar fill pressure is connected to port R of system S6 and is used to unlock the parking brake of the front axle (**pos. 26**).

The command of the parking brake is controlled by a special valve with lever control (**pos. 27**) located in the driving cab. In relation to the position of the lever, the release line of the parking brake is connected to the pressure line (parking brake unlocked) or the discharge line (parking brake locked).

The two pressure switches set at 10-20 bar send an electrical warning signal when the parking brake is activated (brake locked).


The Bucher electro-hydraulic modular distributor of the ON/OFF type for open loops (**pos. 28**) drives the movements of the outriggers and the sway function of the machine. It receives oil from port B of the braking system (**pos. 24**) and uses this to operate the cylinder of the left outrigger (**pos. 29**), the cylinder of the right outrigger (**pos. 30**) and the right and left sway cylinders (**pos. 31**) and (**pos. 32**). These two cylinders (**pos. 31**) and (**pos. 32**) are cross-connected, say the annular chamber of one cylinder is connected to the annular chamber of the other and vice versa. This connection is consistent with the operation of the cylinder which move out and in an opposite way one respect to the other. All of these cylinders are equipped with double-acting compensation valves with safety function.

On the inlet head of this control block there is a pressure relief valve set at 220 bar. The oil flow which is not used by the control block to operate the outriggers and the machine sway function, is sent to the Casappa 20 cm³ hydraulic gear motor (**pos. 34**) for the operation of the cooling fan of the heat exchanger (**pos. 33**). Inside the motor housing, there are an anti-cavitation valve and a pressure relief valve with by-pass function set at 140 bar.

The heat exchanger (**pos. 33**) is divided in two sectors; one absorbs heat from the cooling circuit of the diesel engine and the other absorbs heat from the hydraulic circuit of the machine. The flows of pumps (**pos. 3**) and (**pos. 4**) are conveyed in the latter. The oil cooled down by the heat exchanger is sent back to the tank (**pos. 10**).

When the machine is equipped with man-platform, a motor-driven pump (**pos. 36**) powered by the battery, is installed to be used in an emergency when the main circuit of the telescopic boom is faulty. To work correctly, this circuit uses one-way valves (**pos. 37**) with different opening pressures.

Hydraulic scheme

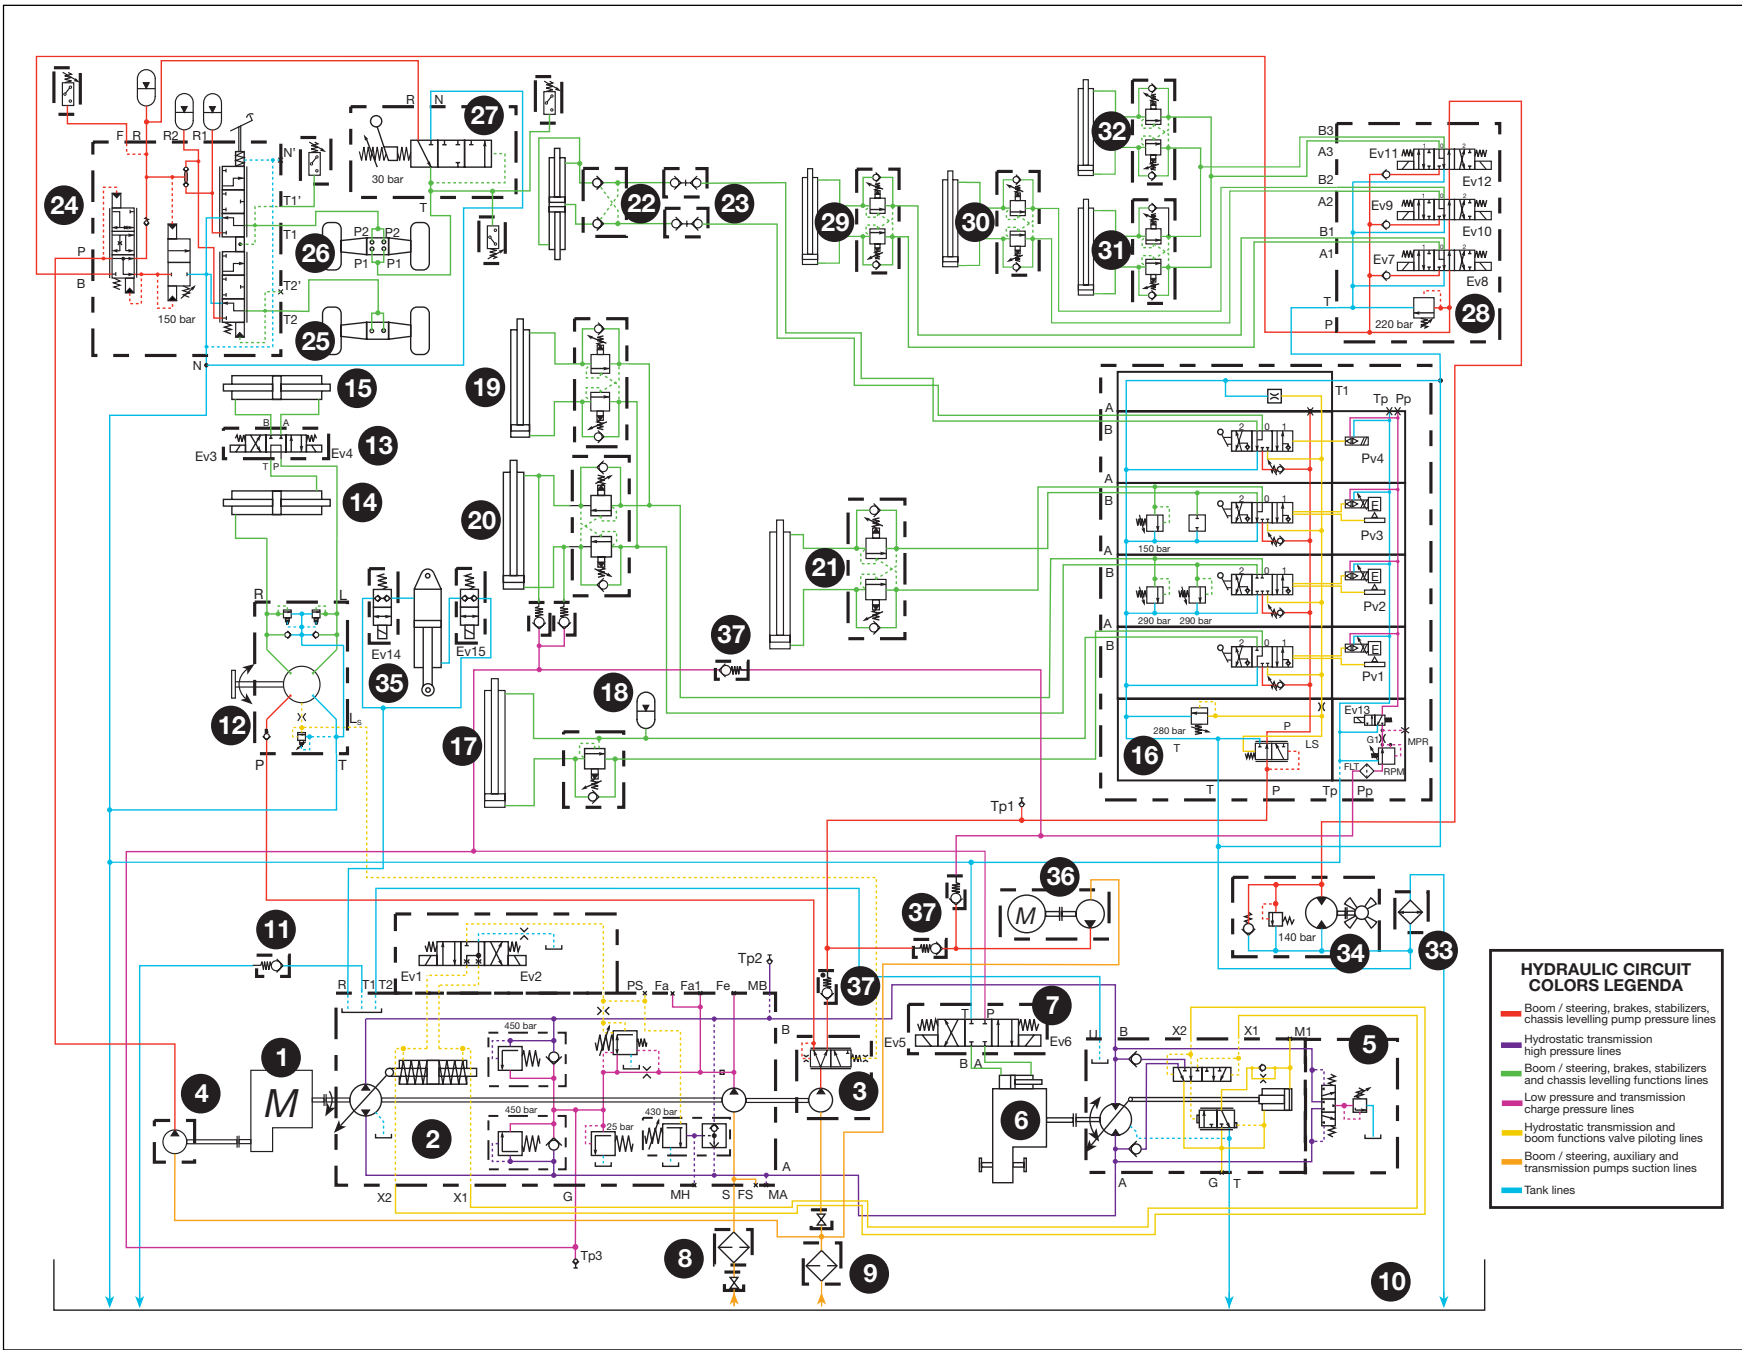

HYDRAULIC CIRCUIT COLORS LEGENDA

- Boom / steering, brakes, stabilizers, chassis levelling pump pressure lines
- Hydrostatic transmission high pressure lines
- Boom / steering, brakes, stabilizers and chassis levelling functions lines
- Low pressure and transmission charge pressure lines
- Hydrostatic transmission and boom functions valve pilot lines
- Boom / steering, auxiliary and transmission pumps suction lines
- Tank lines

Section 1

SAFETY INFORMATION

SECTION INDEX

1.1	Safety rules	page	2
1.1-1	Personal safety		2
1.1-2	Workplace safety		2
1.2	General remarks		4
1.3	Servicemen's requisites		4
1.3-1	Personal protective equipment.....		5
1.4	General safety precautions		5
1.4-1	Working areas.....		5
1.4-2	Precautions during work		5

1.1 SAFETY RULES

1.1-1 Personal Safety

In this manual, any important information is preceded by a **SPECIAL SYMBOL**.

All operators who work or service the machine must know the exact meaning of these safety symbols.

There are six special (or safety) symbols in this manual, always combined with keywords that class the situations according to their danger degree.

The symbols are always followed by a text explaining the situation taken into account, the attention to be paid to such situation, the method and the behaviour to be adopted. When necessary, it stresses prohibitions or supplies instructions to prevent dangers.

Sometimes, it can be followed by illustrations.

We list below the special (or safety) symbols according to the relative seriousness of the hazard situation:



Draws the attention to situations that involve your own as well as the others' safety and that can result in serious or lethal injury.

⚠ DANGER

Draws the attention to situations that involve your own as well as the others' safety and that can result in serious or lethal injury.

⚠ WARNING

Draws the attention either to situations that involve your own as well as the others' safety and that can result in minor or moderate injury or to situations that involve the machine efficiency.

⚠ CAUTION

Draws the attention either to situations that involve your own as well as the others' safety and that can result in minor or moderate injury or to situations that involve the machine efficiency.

CAUTION

Draws the attention to important technical information or practical advice that allows for a safer and more efficient use of the machine.

NOTICE

Draws the attention to important environment-related information.



Be sure to wear protective eye wear and other protective clothing if the situation warrants it.



Be aware of potential crushing hazards such as moving parts, free swinging or unsecured components when lifting or placing loads. Always wear approved steel-toed shoes.

1.1-2 Workplace Safety

Be sure to keep sparks, flames and lighted tobacco away from flammable and combustible materials like battery gases and engine fuels. Always have an approved fire extinguisher within easy reach.



Be sure that all tools and working areas are properly maintained and ready for use. Keep work surfaces clean and free of debris that could get into machine components and cause damage.



Be sure that your workshop or work area is properly ventilated and well lit.



Be sure any forklift, overhead crane or other lifting or supporting device is fully capable of supporting and stabilizing the weight to be lifted. Use only chains or straps that are in good condition and of ample capacity.



Be sure that fasteners intended for one time use (i.e., cotter pins and self-locking nuts) are not reused. These components may fail if they are used a second time.



Be sure to properly dispose of old oil or other fluids. Use an approved container. Please be environmentally safe.

1.2 GENERAL REMARKS

Most accidents occurring while working, servicing or maintaining operation machines, are caused by not complying with the basic safety precautions.

Therefore, it is necessary to pay steady attention to the potential hazards and the effects that may come of operations carried out on the machine.

CAUTION

If you recognise hazardous situations, you can prevent accidents!

For instance, this handbook makes use of special **safety symbols** to highlight potentially hazardous situations.

⚠ CAUTION

The instructions given in this handbook are the ones established by TEREXLIFT. They do not exclude other safe and most convenient ways for the machine commissioning, operation and maintenance that take into account the available spaces and means.

If you decide to follow instructions other than those given in this manual, you must:

- be sure that the operations you are going to carry out are not explicitly forbidden;
- be sure that the methods are safe and in compliance with the indications given in this section;
- be sure that the methods cannot damage the machine directly or indirectly or make it unsafe;
- contact TEREXLIFT Assistance Service for any suggestion and the necessary written permission.

CAUTION

Do not hesitate to pose questions if you are in doubt! Contact TEREXLIFT: the assistance service is at your disposal. Addresses, phone and fax numbers are given in the cover and in the title-page of this manual.

1.3 SERVICEMEN'S REQUISITES

The operators who use the machine regularly or occasionally (e.g. for maintenance or transport) shall have the following requisites:

health:

before and during any operation, operators shall never take alcoholic beverages, medicines or other substances that may alter their psycho-physical conditions and, consequently, their working abilities.

physical:

good eyesight, acute hearing, good co-ordination and ability to carry out all required operations in a safe way, according to the instructions of this manual.

mental:

ability to understand and apply the rules, regulations and safety precautions. They shall be careful and sensible for their own as well as for the others' safety and shall desire to carry out the work correctly and in a responsible way.

emotional:

they shall keep calm and always be able to evaluate their own physical and mental conditions.

training:

they shall read and familiarise with this handbook, its enclosed graphs and diagrams, the identification and hazard warning plates. They shall be skilled and trained about the machine use.

CAUTION

It is recommended to take part in at least one technical training course organised by TEREXLIFT Assistance Office.

CAUTION

Ordinary and extraordinary maintenance of the machine are quite complex from a technical point of view and should be performed by an authorised service centre.

1.3-1 PERSONAL PROTECTIVE EQUIPMENT

During work, but especially when maintaining or repairing the machine, operators must wear suitable protective clothing and equipment:

- Overalls or any other comfortable garments. Operators should wear neither clothes with large sleeves nor objects that can get stuck in moving parts of the machine
- Protective helmet when working under or in the vicinity of suspended load
- Protective gloves
- Working shoes
- Breathing set (or dust mask)
- Ear-protectors or equivalent equipment
- Goggles or facial screen.

CAUTION

Use only type-approved protective equipment in good condition.

1.4 SAFETY PRECAUTIONS**⚠ DANGER**

Read and understand the following safety instructions before servicing the machine.

The following list contains safety rules which must absolutely be obeyed to prevent accidents and injuries.

1.4-1 WORKING AREA

- Make sure the area all around the machine is safe. Always be aware of potential risks.
- During work, keep the working area in order. Never leave objects scattered: they could hinder the machine movements and represent a danger for personnel.

1.4-2 PRECAUTIONS DURING WORK

- Do not walk or stop under raised loads or machine parts supported by hydraulic cylinders or ropes only.
- Keep the machine handholds and access steps always clean from oil, grease or dirt to prevent falls or slips.
- When entering/leaving the cab or other raised parts, always face the machine; never turn the back.
- When carrying out operations at hazardous heights (over **3 meters** from the ground), always use type-approved safety belts or fall preventing devices.
- Do not enter/leave the machine when it is running.
- Before servicing the engine, let its parts cool down.
- Do not leave the driving place when the machine is running.
- Neither stop nor carry out interventions under or between the machine wheels when engine is running. When maintenance in this area is needed, stop the engine, engage the parking brake and chock the wheels to prevent accidental movements.
- Do not carry out maintenance or repair works without a sufficient lighting.
- When using the machine lights, the beam should be oriented in order not to blind the personnel at work.
- Before applying voltage to electric cables or components, ensure they are properly connected and efficient.
- Do not carry out interventions on electric components with voltage over 48V.

- Do not connect wet plugs or sockets.
- Signs and stickers shall never be removed, hidden or become unreadable.
- Except for maintenance purposes, do not remove safety devices, covers, guards,. Should their removal be necessary, stop the engine, remove them with the greatest care and always remember to refit them before starting the engine and using the machine again.
- Always stop the engine and disconnect the batteries before maintenance or service.
- Do not lubricate, clean or adjust moving parts.
- Do not carry out operations manually when specific tools are provided for this purpose.
- Absolutely avoid to use tools in bad conditions or in an improper way.
- Before carrying out operations on hydraulic lines under pressure (hydraulic oil, compressed air) and/or before disconnecting hydraulic components, ensure the relevant line has been previously depressurised and does not contain any hot fluid.

⚠ DANGER

Any intervention on the hydraulic or pneumatic circuit must be carried out by authorised personnel. Before any operation on lines under pressure, release any residual pressure from the circuit. Do not use your fingers to check for pressure leaks. Fine jets of air, oil or fuel can injure you.

- Neither smoke nor use open flames if there is a risk of fire or close to fuel, oil or batteries.
- Do not leave fuel cans or bottles in unsuitable places.
- Do not empty catalytic mufflers or other vessels containing burning materials without taking the necessary precautions.
- Carefully handle all flammable or dangerous substances.
- After any maintenance or repair work, make sure that no tool, cloth or other object has been left within compartments with moving parts or in which suction and cooling air circulates.
- Never give orders to several people at a time. Instructions and signs must be given by one person only.
- Always pay the due attention to the instructions given by the foreman.
- Never distract the operator during working phases or crucial manoeuvres.
- Do not call an operator suddenly, if unnecessary.
- Do not frighten an operator or throw objects by no means.
- After work, never leave the machine under potentially dangerous conditions.

NOTICE

Treatment and disposal of used oils is subject to federal, national and local laws and regulations. Collect and deliver these wastes to authorised centres.


- Use the assistance of a second person to handle loads weighing 30 to 50 kg.
- For loads over 50 kg, the use of special hoisting equipment in good condition and equipped as per enforced regulations is mandatory.

Section 2

TECHNICAL SPECIFICATIONS

SECTION INDEX

2.1	Main dimensions	page	2
2.2	Tyres		2
2.3	Limit of use		3
2.4	Weight		3
2.5	Speed		3
2.6	Payload and reach		3
2.7	Forks (floating type)		4
2.8	Diesel engine		4
2.9	Electrical system		4
2.10	Machine sound levels		4
2.11	Vibration levels		5
2.12	Refuelling		5
2.13	Tightening torques		6
2.14	Drill diameters for threads		8
2.15	Standard tightening torques for fitting seals		9
2.16	Locking material		11
2.17	Hoisting instructions		12
2.18	Advice to renew flexible hoses		13
2.19	Lists of recommended spare parts		14
2.20	Machine paint colour		18
2.21	Checking the cylinder movement times		19
2.22	Hydraulic settings		21
2.23	Calibrating the DLE load limiter		31
2.24	Checking the TECNORD control unit		34
2.25	DLE system		41

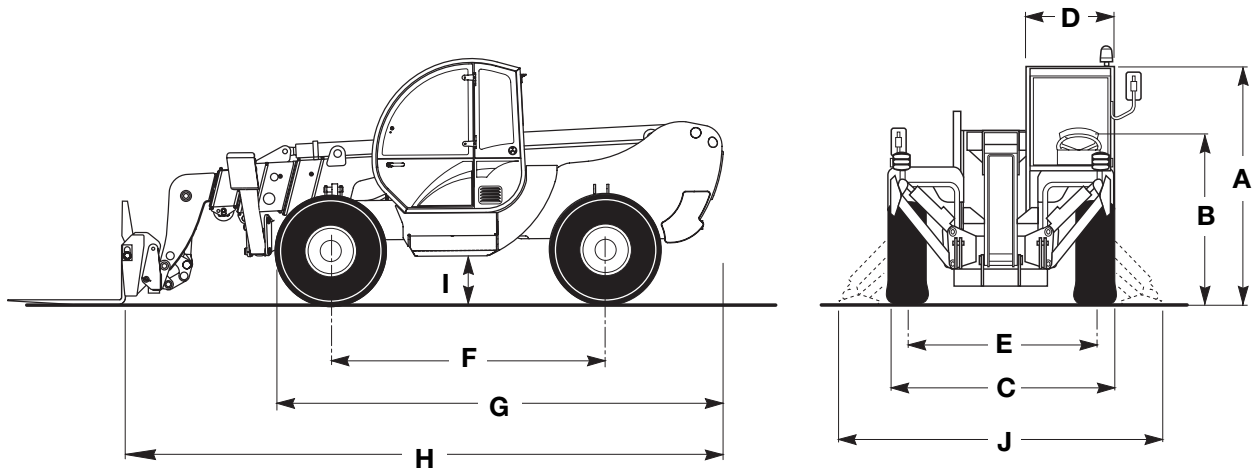2.1 MAIN DIMENSIONS


TELELIFT		3713Elite	3713T Elite	4017	4514	
A	Overall height	mm ft	2550	2550	2550	2630
B	Height to the steering wheel	mm ft	1920	1920	1920	1980
C	Overall width	mm ft	2330	2330	2330	2330
D	Cab width	mm ft	850	850	850	850
E	Track	mm ft	1920	1920	1920	1920
F	Wheel-base	mm ft	2850	2850	2850	2850
G	Length to the front tyres	mm ft	3910	3910	3910	3910
H	Length to the attachment holding plate	mm ft	5610	5610	5610	6290
I	Ground clearance	mm ft	460	460	460	460
J	Max width with extended outriggers	mm ft	2930	2930	2930	2930
•	Internal steering radius	mm ft	1300	1300	1300	1300
•	External steering radius	mm ft	3990	3990	3990	3990

2.2 TYRES

ALL TELELIFT		Standard	Opzionali 3713 Elite	Opz. 4017-4514	
-	Dimensions (front and rear)	400/70-20	400/80-24	18-19.5	405/70-24
-	P.R. (or load index)	14 pr	153B	16	14 pr / 151 D
-	Rim	13x20	13x24	13x19.5	13x24
-	Wheel disc	8 holes DIN 70361			
-	Pressure	bar/Psi	4/58	4.5/65.2	4.25/61.6

2.3 LIMIT OF USE

TELELIFT		3713Elite	3713T Elite	4017	4514
• Angle of approach (with/without outriggers)		39°	39°	39°	39°
• Departure angle		45°	45°	45°	45°
• Min/max ambient temperature	°C	-20°/+40°	-20°/+40°	-20°/+40°	-20°/+40°

2.4 WEIGHT

TELELIFT		3713Elite	3713T Elite	4017	4514
• Weight in working order	kg lbs	9500	9500	11900	10900

2.5 SPEED

TELELIFT		3713Elite	3713T Elite	4017	4514
- Working speed (*)	km/h	8	8	8	8
- Travel speed (*)	km/h	37	37	37	35
- Max. slope with full load	%	54	54	54	50

(*) = either forward or reverse motion.

2.6 PAYLOAD AND REACH

TELELIFT		3713Elite	3713T Elite	4017	4514
- Max lifting height: with outriggers	mm ft	12640	12640	12640	16700
- Max lifting height: without outriggers	mm ft	12470	12470	12470	16600
- Reach at max height without outriggers	mm ft	1290	1290	1290	1320
- Max reach forward with outriggers	mm ft	8740	8740	8740	12700
- Attachment holding plate rotation		145°	145°	145°	145°
- Maximum payload with outriggers	kg	3700	3700	3700	3500
- Payload at max height with outriggers	kg	2500	2500	2500	2200
- Payload at max reach with outriggers	kg	700	700	700	100

2.7 FORKS (floating type)

TELELIFT		3713Elite	3713T Elite	4017	4514
- Dimensions	mm ft	1200x130x50	1200x130x50	1200x130x50	1200x130x50
- Weight	kg lbs	70	70	70	70
- Fork holding frame - class		FEM III	FEM III	FEM III	FEM III

2.8 DIESEL ENGINE

TELELIFT		3713Elite	3713T Elite	4017	4514
- Make		PERKINS	PERKINS	PERKINS	PERKINS
- Model/Type		1004.42	1104C-44T	1104C-44T	1104C-44T
- Features:		Diesel	Diesel	Diesel	Diesel
		4 cylinders in line 4 strokes direct injection	4 cylinders in line 4 strokes direct injection	4 cylinders in line 4 strokes direct injection	4 cylinders in line 4 strokes direct injection
- Bore x Stroke	mm ft	103 x 127	105 x 127	105 x 127	105 x 127
- Total displacement	cc	4232	4400	4400	4400
- Power at 2300 giri/min	kW	63	74,4	74,4	74,4

2.9 ELECTRICAL SYTEM

TELELIFT		3713Elite	3713T Elite	4017	4514
- Voltage	V	12	12	12	12
- Starter (power)	kW	3	3	-	-
- Battery	Ah	92	92	100	100

2.10 MACHINE SOUND LEVELS

TELELIFT		3713Elite	3713T Elite	4017	4514
- Guaranteed sound power level (in accordance with the Directive 2000/14/CE)	dB	Lwa = 109	Lwa = 109	Lwa = ...	Lwa = ...
- Measured sound pressure level (in accordance with the Directive 98/37/CE)	dB	Lpa = 78	Lpa = 78	Lpa = 84	Lpa = 84

2.11 VIBRATION LEVELS

TELELIFT		3713Elite	3713T Elite	4017	4514
- Mean assessed vibration level transmitted to arms	m/s ²	< 2.5	< 2.5	< 2.5	< 2.5
- Mean assessed vibration level transmitted to body	m/s ²	< 0.5	< 0.5	< 0.5	< 0.5

Values calculated in accordance with standard prEN13059

CAUTION

This is a Class A device. In a residential environment, such device can cause radio disturbance. In such cases, the operator is required to take suitable measures.

2.12 REFUELLING

TELELIFT		3713Elite	3713T Elite	4017	4514
- Diesel engine	l	11,5	11,5	11,5	11,5
- Engine cooling system	l	15	15	15	15
- Fuel tank	l	135	135	135	135
- Hydraulic system tank	l	150	150	150	150
- Gearbox	l	1,5	1,5	1,5	1,5
- Differential gears	l	8,7	8,7	8,7	8,7
- Wheel reduction gears	l	0,75	0,75	0,75	0,75





Products:





Engine oil: **SHELL RIMULA SAE 15W-40 (API CH-4/ CG-4/ CF-4/CF, ACEA E3, MB 228.3)**

Power divider-Differential gears-Reduction gears: **FUCHS TITAN GEAR LS 85 W-90 (API GL-5 LS / GL-5)**

Hydraulic system and brakes: **SHELL TELLUS T 46 (DENISON HF-1 DIN 51524 part. 2 e 3)**

2.13 TIGHTENING TORQUES

Thread diameter <i>mm</i>	Pitch <i>mm</i>	Wrench measure <i>mm</i>				Tightening torques <i>Material class</i>					
						8.8		10.9		12.9	
		UNI 5931/32	UNI 5933÷36	UNI 5923÷30	Normal Nm	Galvanized Nm	Normal Nm	Galvanized Nm	Normal Nm	Galvanized Nm	
4	0.7	7	3	2.5	2	3.2	2.8	4.4	3.9	5.3	4.8
5	0.8	8	4	3	2.5	6.1	5.5	8.7	7.8	10.3	9.3
6	1	10	5	4	3	10.6	9.5	14.8	13.3	17.8	16.0
8	1.25	13	6	5	4	25.1	22.5	35.4	31.8	42.5	30.2
	1	13	6	5	4	26.5	23.8	37.3	33.5	44.7	40.3
10	1.5	17	8	6	5	51.1	46.0	71.9	64.7	86.3	77.6
	1.25	17	8	6	5	53.4	48.1	75.1	67.5	90.2	81.1
12	1.75	19	10	8	6	86.5	77.8	121.4	109.2	145.9	131.3
	1.25	19	10	8	6	92.4	83.2	129.5	116.6	156.1	140.5
14	2	22	12	10	6	137.7	123.9	193.8	174.4	232.6	209.3
	1.5	22	12	10	6	145.9	131.3	206.1	185.5	246.9	222.0
16	2	24	14	10	8	209.1	188.2	293.8	264.4	353.0	317.7
	1.5	24	14	10	8	218.3	196.5	308.1	277.3	369.3	332.4
18	2.5	27	14	12	8	288.7	259.8	406.1	365.5	487.7	436.9
	1.5	27	14	12	8	314.2	282.8	442.8	398.5	530.6	477.5
20	2.5	30	17	12	10	408.1	367.3	573.4	516.1	687.7	618.9
	1.5	30	17	12	10	439.7	395.8	619.3	557.4	742.8	662.5
22	2.5	32	17	-	12	542.3	488.5	763.2	686.9	915.3	823.7
	1.5	32	17	-	12	582.6	524.3	819.3	737.4	983.6	885.3
24	3	36	19	-	12	705.1	634.5	990.8	891.7	1193.3	1074.4
	2	36	19	-	12	745.3	671.3	1051.0	945.9	1255.1	1129.5
27	3	41	19	-	-	1036.0	927.5	1448.9	1304.0	1734.6	1561.2
	2	41	19	-	-	1091.8	982.6	1530.6	1377.5	1836.7	1653.0
30	3.5	46	22	-	-	1307.9	1258.1	1989.3	1772.4	2357.1	2121.4
	2	46	22	-	-	1510.2	1359.1	2122.4	1910.2	2540.8	2286.7
33	3.5	50	24	-	-	2000.0	1800.0	2800.0	2520.0	3400.0	3060.0
	2	50	24	-	-	1610.0	1450.0	2300.0	2070.0	2690.0	2420.0
36	4	55	27	-	-	2600.0	2340.0	3700.0	3330.0	4300.0	3870.0
	3	55	27	-	-	2800.0	2520.0	3900.0	3510.0	4600.0	4140.0
39	4	60	27	-	-	3400.0	3060.0	4800.0	4320.0	5600.0	5040.0
	3	60	27	-	-	3600.0	3240.0	5100.0	4590.0	5900.0	5310.0

Thread diameter	Pitch	Standard nuts		Low nuts	
		 Nm	 Nm	 Nm	 Nm
4	0.7	5.5		3.5	
5	0.8	5.5		3.5	
6	1	9.5	13.0	6.0	8.0
8	1.25	23.0	32.0	14.0	20.0
	1	25.0	35.0	16.0	22.0
10	1.5	46.0	64.0	29.0	40.0
	1.25	49.0	68.0	31.0	42.0
12	1.75	80.0	110.0	50.0	69.0
	1.25	88.0	125.0	55.0	78.0
14	2	125.0	180.0	78.0	110.0
	1.5	140.0	195.0	88.0	120.0
16	2	195.0	275.0	120.0	170.0
	1.5	210.0	295.0	130.0	185.0
18	2.5	270.0	390.0	170.0	245.0
	1.5	305.0	425.0	190.0	265.0
20	2.5	305.0	540.0	190.0	340.0
	1.5	425.0	600.0	260.0	375.0
22	2.5	510.0	720.0	320.0	450.0
	1.5	570.0	800.0	360.0	500.0
24	3	660.0	930.0	410.0	580.0
	2	720.0	1000.0	450.0	630.0
27	3	980.0	1400.0	610.0	880.0
	2	1050.0	1500.0	660.0	940.0
30	3.5	1350.0	1850.0	850.0	1160.0
	2	1450.0	2050.0	910.0	1280.0
33	3.5	1650.0	2310.0	1050.0	1470.0
	2	1980.0	2770.0	1270.0	1780.0
36	4	2120.0	2970.0	1360.0	1900.0
	3	2550.0	3570.0	1630.0	2280.0
39	4	2730.0	3820.0	1750.0	2450.0
	3	3250.0	4550.0	2080.0	2910.0

2.14 DRILL DIAMETERS FOR THREADS

<i>Thread x pitch</i>	<i>DRILL DIAMETER LIMITS</i>		<i>DRILL BIT DIAMETER</i>
	<i>max</i>	<i>min</i>	
M 4 x 0.7	3.42	3.24	3.30
x 0.5	3.60	3.46	3.50
M 5 x 0.8	4.33	4.13	4.20
x 0.5	4.60	4.46	4.50
M 6 x 1	5.15	4.92	5.00
x 0.75	5.38	5.19	5.20
M 8 x 1.25	6.91	6.65	6.80
x 1	7.15	6.92	7.00
M 10 x 1.5	8.87	8.38	8.50
x 1.25	9.38	9.19	9.20
M 12 x 1.75	10.44	10.10	10.20
x 1.5	10.68	10.38	10.50
M 14 x 2	12.21	11.83	12.00
x 1.5	12.68	12.38	12.50
M 16 x 2	14.21	13.84	14.00
x 1.5	14.68	14.38	14.50
M 18 x 2.5	15.74	15.29	15.50
x 1.5	16.68	16.38	16.50
M 20 x 2.5	17.74	17.29	17.50
x 1.5	18.68	18.38	18.50
M 22 x 2.5	19.74	19.29	19.50
x 1.5	20.68	20.38	20.50
M 24 x 3	21.25	20.75	21.00
x 2	22.21	21.83	22.00
M 27 x 3	24.25	23.75	24.00
x 2	25.21	24.83	25.00
M 30 x 3.5	26.77	26.21	26.50
x 3	27.25	26.75	27.00
M 33 x 3.5	27.77	29.21	29.50
x 2	31.21	30.83	31.00
M 36 x 4	32.27	31.65	32.00
x 3	33.25	32.75	33.00
M 39 x 4	35.27	34.67	35.00
x 3	36.25	35.75	36.00

2.15 STANDARD TIGHTENING TORQUES FOR FITTING SEALS
■ 60° CONICAL SEALS

Thread diameter		TIGHTENING TORQUES (0+10%)
		60° CONICAL SEALS
<i>inc.</i>	<i>mm</i>	Nm
G 1/8"		15
G 1/4"	M 10 x 1	20
9/16"-18		25
11/16"-16		40
13/16"-16		55
3/4"-16		62
1"-14		80
7/8"-14		80
1.1/16"-12		110
1.3/16"-12		115
1.5/16"-12		160
1.7/16"-12		130
1.11/16"-12		190
1.5/8"-12		225
1.7/8"-12		270
2"-12		245
2.1/4"-12		360

■ FRONT O-LOK (Parker) SEALS

Thread diameter		TIGHTENING TORQUES (0+10%)
		FRONT O-LOK (Parker) SEALS
<i>inc.</i>	<i>mm</i>	Nm
9/16"-18		25
11/16"-16		40
13/16"-16		55
1"-14		80
1.3/16"-12		115
1.7/16"-12		130
1.11/16"-12		190
2"-12		245

■ 37° COUNTER-SUNK CONICAL SEALS (JIC)


Thread diameter		TIGHTENING TORQUES (0+10%)
		37° CONICAL SEALS (JIC)
<i>inc.</i>	<i>mm</i>	Nm
7/16"-20	M10x1	15
1/2"-20	M12x1.5	20
9/16"-18	M14x1.5	28
	M16x1.5	62
3/4"-16	M18x1.5	62
7/8"-14	M22x1.5	80
1.1/16"-12	M27x2	110
1.3/16"-12		141
1.5/16"-12	M33x2	160
1.5/8"-12	M42x2	225
1.7/8"-12	M48x2	270
2.1/4"-12	M10x1	360

SEALS WITH GRIP-RING


Thread diameter		Fitting Series	Pipe ϕ mm	TIGHTENING TORQUE (0+10%) SEALS WITH GRIP-RING Nm
inc.	mm			
G 1/8"	M10x1	LL	4	10
G 1/8"	M10x1	LL	6	10
G 1/8"	M10x1	L	6	25
G 1/4"	M12x1.5	L	8	50
G 1/4"	M14x1.5	L	10	50
G 1/8"	M20x1.5	L	12	130
G 1/8"	M20x1.5	L	15	190
G 1/8"	M20x1.5	L	18	245
G 1/8"	M20x1.5	L	22	130
G 1/8"	M20x1.5	L	28	190
G 1/8"	M20x1.5	L	35	245
G 1/8"	M20x1.5	L	42	245
G 1/4"	M12x1.5	S	6	50
G 1/4"	M14x1.5	S	8	50
G 3/8"	M16x1.5	S	10	80
G 3/8"	M18x1.5	S	12	80
G 1/2"	M22x1.5	S	16	105
G 3/4"	M27x2	S	20	220
G 1"	M33x2	S	25	370
G 1.1/4"	M42x2	S	30	500
G 1.1/2"	M48x2	S	38	600

FITTING ASSEMBLY

Thread diameter		TIGHTENING TORQUES (0+10%)	
inc.	mm	JOINTS	
		A Nm	B Nm
G 1/8"	M10x1	25	12
	M12x1.5	30	18
G 1/4"		40	18
	M14x1.5	50	20
	M16x1.5	60	35
G 3/8"	M18x1.5	80	50
		95	40
	M20x1.5	140	60
G 1/2"	M22x1.5	140	75
	M26x1.5	220	85
G 3/4"		250	110
	M27x2	250	100
G 1"		400	190
	M33x2	400	150
G 1.1/4"		600	240
	M42x2	600	260
G 1.1/2"		800	300
	M48x2	800	350

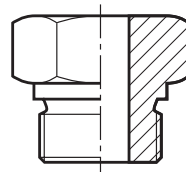
A

A Male face
Mechanical seal or copper washer

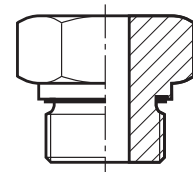
B

B Male face
Soft seal with O-ring

2.16 LOCKING MATERIAL
THREADLOCKERS

Product	APPLICATION	Characteristics		Locking speed	Resistance
		Temp. °C	Thread		
Loctite 290	Thread locking	to 150°	M 12	Rapid	Medium
Loctite 222	Thread locking	to 150°	M 20	Moderate	Low
Loctite 243	Thread locking	to 150°	M 20	Rapid	Medium
Loctite 262	Thread locking	to 150°	M 20	Moderate	High
Loctite 270	Thread locking	to 150°	M 20	Moderate	Very high
Loctite 277	Thread locking	to 150°	M 36	Slow	High
Loctite 272	Thread locking	to 200°	M 36	Slow	High

THREAD SEALANT *For hermetic sealing. Not suitable for thermoplastic materials*

Product	APPLICATION	Characteristics			Locking speed	Disassembly difficulty
		max °C	Thread max	type		
Loctite 511	Fitting sealant	150°	M80	Con./Cyl.	Rapid	Low
Loctite 542	Fitting sealant	150°	M36	Con./Cyl.	Rapid	Moderate
Loctite 545	Fitting sealant	150°	M36	Con./Con.	Moderate	Low
Loctite 565	Fitting sealant	150°	M80	Con./Cyl.	Instantaneous	Low
Loctite 572	Fitting sealant	150°	M80	Con./Cyl.	Moderate	Low
Loctite 577	Fitting sealant	150°	M80	Con./Cyl.	Rapid	Moderate

GASKETS *Total sealing in 24-72 hours*

Product	APPLICATION	Characteristics		Formation time	Resistance to fluids
		max °C	Play max mm		
Loctite 518	Formed-in-place gasket	150°	0,5	Moderate	Excellent
Loctite 509	Formed-in-place gasket	150°	0,2	Moderate	Excellent
Loctite 573	Formed-in-place gasket	150°	0,2	Slow	Excellent
Loctite 574	Formed-in-place gasket	150°	0,5	Rapid	Excellent
Loctite 510	Formed-in-place gasket	200°	0,2	Moderate	Excellent
Loctite 5699	Formed-in-place gasket	200°	6,0	Rapid	Excellent
Loctite 5999	Formed-in-place gasket	200°	6,0	Instantaneous	Excellent
Loctite 5910	Formed-in-place gasket	200°	6,0	Rapid	Excellent
Loctite 5900	Formed-in-place gasket	200°	6,0	Instantaneous	Excellent
Loctite 5920	Formed-in-place gasket	250°	M 36	Slow	Good

2.17 HOISTING INSTRUCTIONS

⚠ DANGER

All parts weighing more than 25 kg **MUST COMPULSORILY** be handled with suitable hoisting means.

In the Disassembly and Assembly section there is a clear indication of the weight of the part to handle, while chapter A.12 contains a summary table with the weight of the single components.

Before removing parts of the machine, make sure that:

- all fixing bolts have been removed
- all hydraulic and electrical parts have been disconnected
- the part to be removed is not blocked.


STRANDED ROPES

- Use ropes or other hoisting accessories suitable to the weight of the part to be handled. For ropes, refer to the following table:


STRANDED ROPES	
Rope diameter mm	Max admissible load kg
10	1000
11.2	1400
12.5	1600
14	2200
16	2800
18	3600
20	4400
22.4	5600
30	10000
40	18000
50	28000
60	40000

The value of the admissible load has been considered as equal to 1/6 the rope breaking load.

- Attach the load to the natural seat of the hook. Attaching a load to an end can cause the load to fall down during raising and result in serious injury.

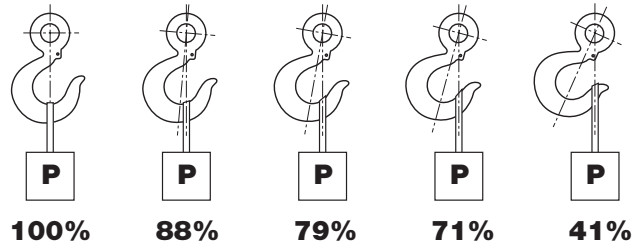

- Do not attach a heavy load to ropes forming a wide suspension angle. The total capacity of the ropes reduces proportionally to the angle as shown in the following chart.

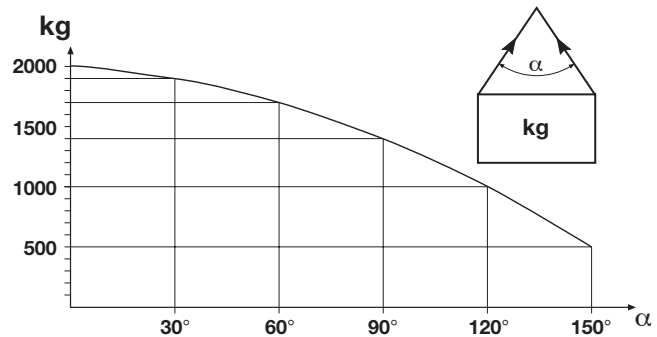

2.18 ADVICE TO RENEW FLEXIBLE HOSES

NOTICE

Before disconnecting a hydraulic pipe, place containers of suitable size underneath to prevent oil spillage.

CAUTION

Plug all disconnected parts to prevent dust or impurities from entering the circuit. They can cause serious damage.

⚠ DANGER


Before disconnecting the hydraulic pipe, check that there is no residual pressure. In case, eliminate the pressure operating the control levers with the engine stopped.

In any case, disconnect the hydraulic pipe with extreme caution and always wear suitable personal protection equipment -e.g. goggles, gloves, facial screen, etc.

Wrap up the end of the pipe to be disconnected with some rags and slowly loosen the pipe connector so that air comes out as slow as possible.

- 1 Before disconnecting or refitting a flexible hose, carefully clean the area all around.
- 2 Blow some compressed air to remove any impurity.
- 3 For an easier renewal of the hoses, whose run is not clearly visible, proceed as follows:
 - disconnect the hose to be replaced from both sides
 - tie a cord to one end of the hose
 - remove the hose pulling the cord until it comes out completely
 - untie the cord and tie it to the new hose
 - pull the cord from the other side to refit the hose until reaching the connecting point to the line.

Useful advice for mounting flexible hoses:

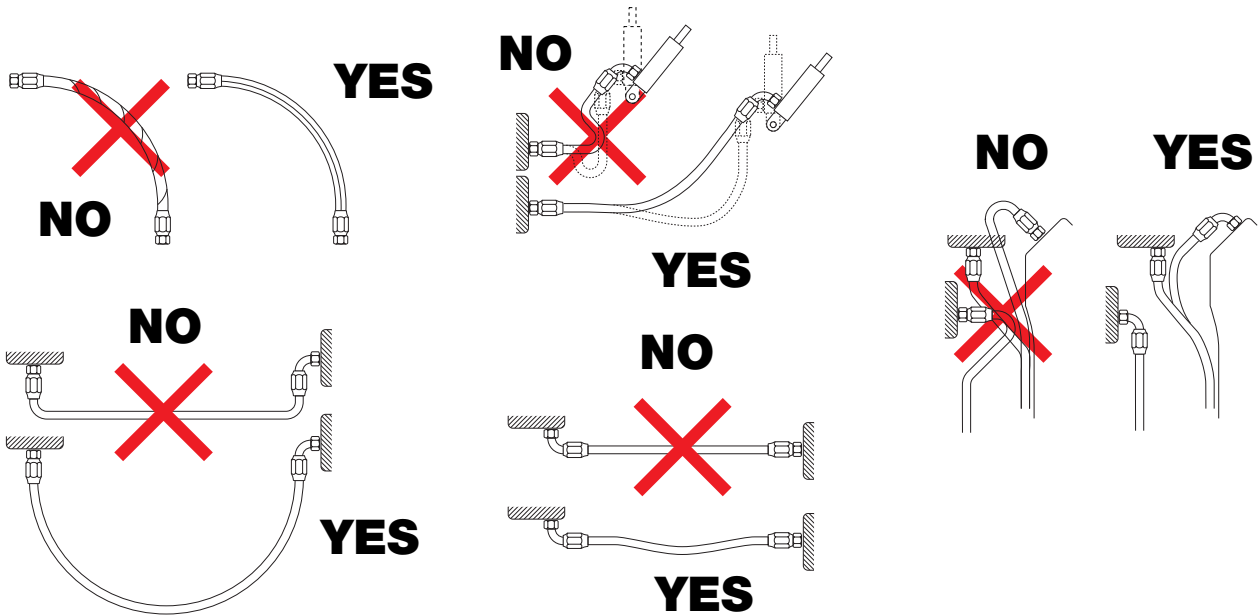

2.19 LISTS OF RECOMMENDED SPARE PARTS
Telelift 3713 Elite

Code	Description	Q.ty
07.0741.0000	Solenoid for outriggers and sway control block	1
56.0012.0009	Outrigger limit switch	1
54.0702.0000	Boom section sliding pad	4
54.0702.0001	Boom section sliding pad	2
54.0200.0000	Pad locking bushing on boom sections	4
54.0200.0001	Pad locking bushing on boom sections	4
04.0603.0110	Internal boom hose for fork pitching cylinder	1
04.0603.0111	Internal boom hose for attachment locking cylinder	1
07.0740.0157	Rear wiper blade	1
07.0740.0089	Front windscreen wiper blade	1
640536	Fork pitching cylinder kit	1
640100	Seals kit for boom lifting cylinder	1
640101	Telescoping cylinder kit	1
640102	Seals kit for internal telescoping cylinder	1
640270	Seals kit for steering cylinder	1
06.0401.0219	Pump and drive motor O-ring	2
53.3001.0900	Exhaust manifold	1
632696	Solenoid valves solenoid	1
07.0738.0000	Cardan joint spider	1
05.4329.0000	Accumulator for boom lowering line cylinder	1
05.4329.0001	Pressure switch	1
636455	Seals kit for balancing cylinder	1
09.4645.0022	Cable	1
637452	Seals kit for sway cylinder	1
09.4661.0014	Hydraulic oil tank and diesel tank cap	1
56.0013.0001	Fuel gauge	1
09.4661.0014	Hydraulic oil tank and diesel tank cap	1
639395	Attachment cylinder kit	1
637452	Seals kit for compensation cylinder	1
07.0740.0066	Cab ventilation system filter	1
07.0703.0485	Ciam board relay	2
637650	Fuse - 3A	3
07.0703.0193	Fuse - 5A	2
634972	Fuse - 7,5 A	2
634973	Fuse - 15 A	2
07.0703.0148	Fuse - 10 A	5
07.0703.0531	NC contact	1
07.0703.0532	Mount + NO contact	1
07.0703.0533	NC contact	1
07.0703.0183	Telemecanique NC contact	2
07.0703.0419	Outriggers and compensation switch	1
07.0703.0060	50A maxi fuse	1
56.0012.0000	Proximity sensor	1
07.0741.0015	Seals kit for outriggers control block	1
640537	Outirigger cylinders kit	1

Code	Description	Q.ty
07.0741.0016	Seals kit for main control block	1
07.0741.0004	Bucher control block electrical module	1
54.0001.0001	Attachment latching cylinder pin	1
07.0700.0000	Hydromatik oil filter cartridge	1
09.4604.0000	Tank internal filter	1
Aspirated engine		
639399	Internal engine air filter cartridge	1
639400	External engine air filter cartridge	2
638243	Engine oil filter	2
07.4501.0057	Fuel filter	2
Turbo engine		
638243	Engine oil filter	2
639399	Internal engine air filter cartridge	1
639400	External engine air filter cartridge	2
07.4501.0057	Fuel filter	2
07.0700.0000	Hydromatik oil filter cartridge	2

Telelift 4017

Code	Description	Q.ty
06.0401.0219	Pump and drive motor O.R.	2
54.0702.0021	Boom section sliding pad	2
695959	Boom section sliding pad	2
695970	Boom section sliding pad	2
695971	Boom section sliding pad	4
54.0200.0000	Pad locking bushing on boom sections	10
695957	Boom section sliding pad	2
695960	Boom section sliding pad	2
07.4529.0093	Seals kit - rear axle locking cylinder	1
07.4529.0063	Seals kit - balancing cylinder	1
07.4529.0065	Seals kit - extension cylinder	1
07.4529.0092	Seals kit - lifting cylinder	1
07.0741.0016	Seals kit - main control block	1
639395	Seals kit - attachment locking cylinder	1
53.3000.8100	Exhaust manifold	1
637452	Seals kit - balancing cylinder	1
07.0738.0000	Cardan joint spider	1
640537	Outrigger cylinder kit	1
07.0741.0000	Outriggers and sway control block solenoid	1
56.0012.0009	Outriggers limit switch	1
640536	Seals kit - fork pitching cylinder	1
637650	Fuse - 3A	2
07.0709.0419	Steering cylinder kit	1
07.0703.0193	Fuse - 5A	2
634972	Fuse - 7,5 A	2
634973	Fuse - 15 A	2
07.0703.0148	Fuse - 10 A	5
07.0703.0060	Maxi fuse 50 A	1
07.0703.0485	Ciam board relay	2
632696	Valve solenoid	1
07.0703.0531	NC contact	1
07.0703.0532	Mount + NO contact	1
07.0703.0533	NC contact	1
07.0703.0183	Telemecanique NC contact	1
07.0703.0419	Outriggers and balancing switch	1
07.0700.0000	Hydromatik oil filter cartridge	1
09.4604.0000	Tank internal filter	1
07.0740.0066	Cab ventilation filter	1
07.0741.0015	Seals kit - outriggers control block	1
07.0741.0004	Bucher control block electrical module	1
54.0001.0001	Attachment locking cylinder pin	1
05.4239.0000	Boom lowering line cylinder accumulator	1
56.0012.0000	Proximity sensor	1
Turbo engine		
638243	Engine oil filter	2
639399	Internal engine air filter cartridge	1
639400	External engine air filter cartridge	2
07.4501.0057	Fuel filter	2
07.0700.0000	Hydromatik oil filter cartridge	2

Telelift 4514

Code	Description	Q.ty
637452	Seals kit - balancing cylinder	1
07.4529.0093	Seals kit - rear axle locking cylinder	1
56.0012.0009	Outriggers limit switch	1
640537	Outrigger cylinder kit	1
07.0741.0000	Outriggers and sway control block solenoid	1
07.0741.0015	Outriggers and sway control block kit	1
54.0200.0000	Pad locking bushing on boom sections	6
695971	Boom section sliding pad	4
54.0702.0023	Boom section sliding pad	2
695970	Boom section sliding pad	2
695959	Boom section sliding pad	2
06.0401.0219	Pump and drive motor O.R.	2
695960	Boom section sliding pad	2
54.0702.0019	Boom section sliding pad	2
04.0602.0501	Boom internal flex hose for attachment locking cylinder	1
04.0602.0502	Boom internal flex hose for fork pitching cylinder	1
640536	Seals kit - forks pitching cylinder	1
07.4529.0063	Seals kit - balancing cylinder	1
07.4529.0094	Seals kit - boom extension cylinder	1
07.4529.0092	Seals kit - lifting cylinder	1
07.0741.0016	Seals kit - main control block	1
05.4329.0000	Boom lowering line cylinder accumulator	1
05.4329.0001	Pressure switch	1
639395	Seals kit - attachment locking cylinder	1
53.3000.8100	Exhaust manifold	1
637650	Fuse - 3A	3
07.0703.0193	Fuse - 5A	2
634972	Fuse - 7,5 A	3
634973	Fuse - 15 A	3
07.0703.0148	Fuse - 10 A	6
07.0703.0485	Ciam board relay	2
632696	Valve solenoid	1
07.0741.0000	Coil	1
07.0741.0004	Bucher control block electrical module	1
07.0703.0060	Maxi fuse 50 A	1
07.0703.0531	NC contact	1
07.0703.0532	Mount + NO contact	1
07.0703.0533	NC contact	1
07.0703.0183	Telemecanique NC contact	1
638004	Seal kit - braking pump	1
05.4239.0004	Parking brake pressure switch	1
07.0709.0419	Steering cylinder kit	1
07.0738.0000	Cardan joint spider	1
638243	Engine oil filter	2
639399	Internal engine air filter cartridge	1
639400	External engine air filter cartridge	2
07.4501.0057	Fuel filter	2
07.0700.0000	Hydromatik oil filter cartridge	2
07.0700.0000	Hydromatik oil filter cartridge	1
09.4604.0000	Tank internal filter	1
07.0740.0066	Cab ventilation filter	1
54.0001.0001	Attachment locking cylinder pin	1
56.0012.0000	Proximity sensor	1

2.20 MACHINE PAINT COLOUR

STANDARD machines

GREY RAL 7012

WHITE RAL 1013

MAT BLACK RAL 9005 (from June 2004 for cylinders)

AUSA machines

ORANGE RAL 2004

GENIE machines

BLUE MERCEDES 5928

MZ IMER machines

ORANGE RAL 2010

2.21 CHECKING THE CYLINDER MOVEMENT TIMES

CAUTION

The check of the movement times of the cylinders shall be done with the hydraulic oil at a temperature of 60°.

CAUTION


To check the engine speed, the area easy to reach is the external pulley of the output shaft.

BOOM LIFTING/LOWERING

Telelift 3713 Elite	Time (s)	
	up	down
Max engine speed	16"	8"
Min. engine speed	33"	20"

Telelift 4017	Time (s)	
	up	down
Max engine speed	16"	13"
Min. engine speed	41"	29"

Telelift 4514	Time (s)	
	up	down
Max engine speed	16"	12"
Min. engine speed	40"	30"

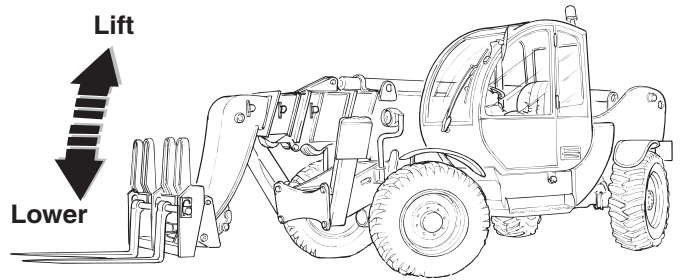


BOOM EXTENSION/RETRACTION

Telelift 3713 Elite	Time (s)	
	out	in
Max engine speed	19"	17"
Min. engine speed	45"	21"

Telelift 4017	Time (s)	
	out	in
Max engine speed	26"	15"
Min. engine speed	55"	35"

Telelift 4514	Time (s)	
	out	in
Max engine speed	24"	17"
Min. engine speed	60"	37"

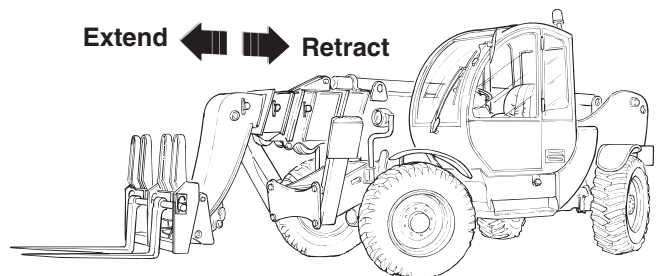


ATTACHMENT DUMPING

Telelift 3713 Elite	Time (s)	
	dumping	roll-back
Max engine speed	4"	4"
Min. engine speed	9"	7"

Telelift 4017	Time (s)	
	dumping	roll-back
Max engine speed	4"	4"
Min. engine speed	9"	7"

Telelift 4514	Time (s)	
	dumping	roll-back
Max engine speed	4"	4"
Min. engine speed	9"	6"

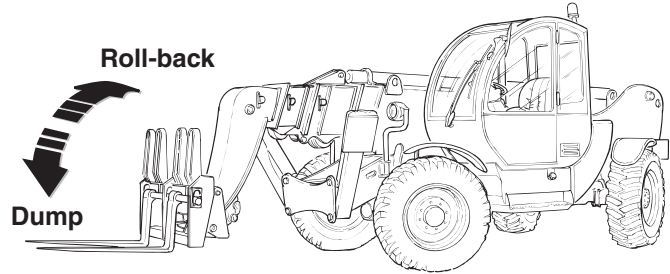


OUTRIGGERS MOVEMENT

Telelift 3713 Elite	Time (s)	
	up	down
Max engine speed	5"	5"
Min. engine speed	11"	14"

Telelift 4017	Time (s)	
	up	down
Max engine speed	6"	7"
Min. engine speed	13"	16"


Telelift 4514	Time (s)	
	up	down
Max engine speed	5"	6"
Min. engine speed	10"	14"

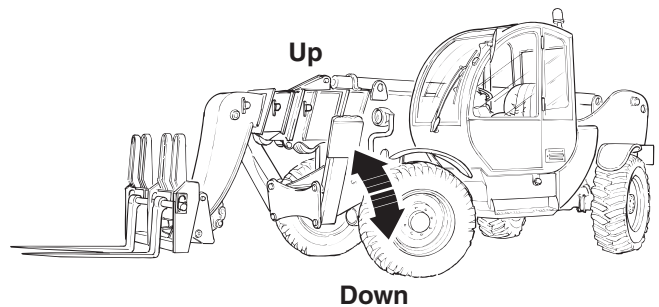

MACHINE SWAY

Telelift 3713 Elite	Time (s)	
	right to left	left to right
Max engine speed	10"	10"
Min. engine speed	11"	11"

Telelift 4017	Time (s)	
	right to left	left to right
Max engine speed	10"	10"
Min. engine speed	11"	11"

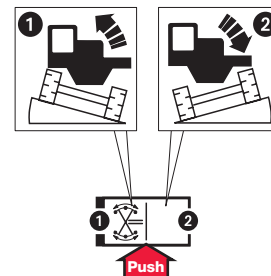

Telelift 4514	Time (s)	
	right to left	left to right
Max engine speed	9"	9"
Min. engine speed	12"	12"

2.22 HYDRAULIC SETTINGS

1. PRELIMINARY OPERATIONS

Warm up the hydraulic oil to 60°C by keeping one of the elements of the boom distributor to full stroke under pressure.

To reach this temperature in a faster way, cover the oil core of the radiator with a carton in the case of a water-oil combined cooler, or the oil radiator if the machine is equipped with a separate oil radiator.

2. SETTING THE BOOM DISTRIBUTOR

Find the manometer mini-socket **ref. 2** on the **Bucher** distributor.



2.1 SETTING THE DISTRIBUTOR PRESSURE CONTROL VALVE


Connect a 0-400 bar manometer to the mini-socket **ref. 2**. Fully raise the boom to stroke end.

Calibrate valve **A** (annexes 1) of the Tecnord distributor to 280 bar while keeping the lifting cylinder at end of stroke and under pressure and the thermal engine fully accelerated.

In order to check the setting of the safety valve of the bucket tilting cylinder **B** (annexes 1), proceed as follows:

- By means of valve **A** set the distributor pressure to 300 bar while moving one of the cylinders to stroke end.
- With the engine running at maximum speed, tilt the forks to one direction by means of the joystick and act on one of the two valves **B** until reaching a pressure of 290 bar.
- Proceed in calibrating the second valve **B** by tilting the forks to the opposite direction.

- When both fork inclination safety valves have been calibrated, reset the pressure control valve **A** to 280 bar by adjusting the register.

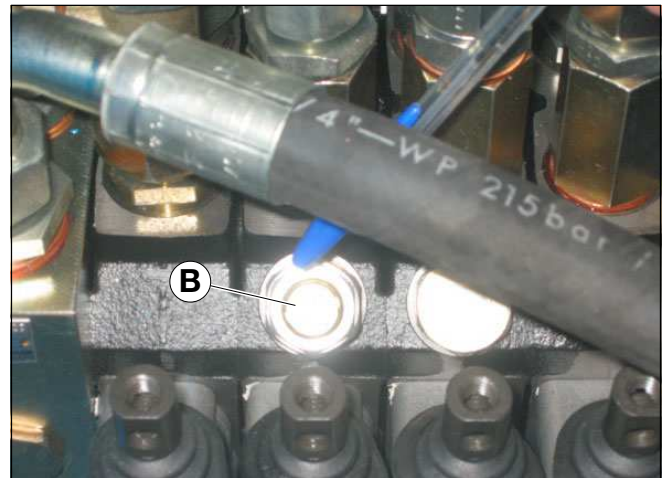


3. SETTING THE BLOCK VALVES OF THE FORK BALANCE CYLINDER (annexes 2)

- Loosen the lock nuts of the valve and tighten the two registers of cartridges **S**.
- Re-loosen of one turn and a half both valves and re-tighten the lock nuts.

4. SETTING THE HYDROMATIK PUMP HYDROSTATIC TRANSMISSION

Do the calibration of the hydrostatic transmission with the hydraulic oil at a temperature of 80°C and with the 2nd mechanical speed engaged.

- Connect a 0-60 bar manometer to the mini-socket **ref. C** (annexes 3) to read the low-pressure value.
- Connect a 0-600 bar manometer to the mini-socket **ref. D** to read the high-pressure value.

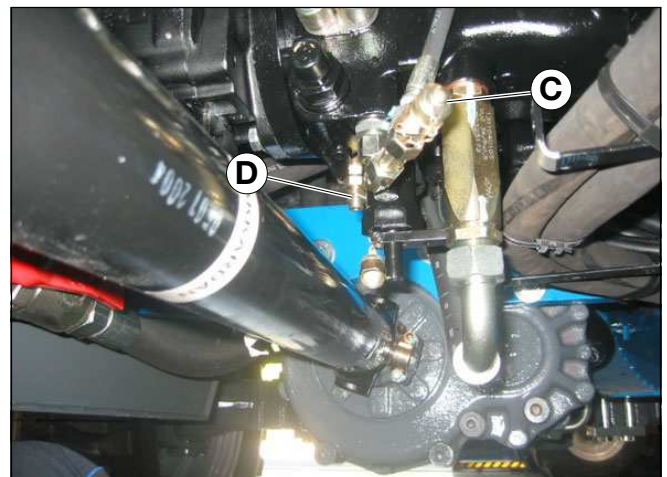

- Hold the selector to neutral position and make sure the maximum speed of the engine does not exceed 2500 rpm. The engine must run at a idle speed of 900 rpm. Otherwise, adjust the minimum speed.
- Measure the boost pressure and ensure it is 30 bar with the engine running at max speed (2400 rpm). If this value is not reached, act on valve **M**.
Note: In these machines, the low pressure is also used for the re-sequencing cylinder and for the distributor.
- Engage the 2nd mechanical speed and fully depress the brake pedal with the left foot to bring the machine to a stop. Do not use the parking brake.

STARTING THE CALIBRATION


- Set the forward-neutral-reverse selector to the forward position.
- Run the engine at 1000 rpm. Check the value on the tachometer.
- Adjust the shutter **E** by means of the register until reading a value of 50 bar on the high-pressure manometer **D**.



4.1 CALIBRATION OF THE "DA" CURVE

Do this operation with extreme caution. The proper functioning of pump and transmission depends on this calibration.

- Set the forward-neutral-reverse selector to the forward position.
- Run the engine at maximum speed and check the high-pressure value. If this value is less than 430 bar, increase the pressure to 425-430 bar by means of the pressure cut-off valve **F**.

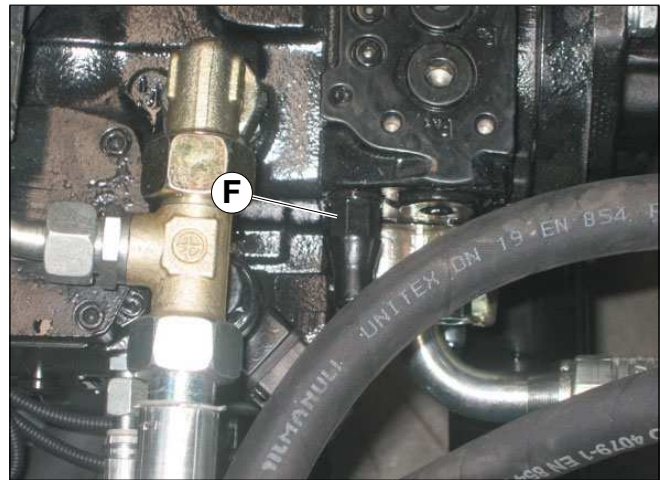

- Gradually increase the engine rpm and steadily check the high-pressure manometer. As soon as the value of 400 bar is reached, hold the gas pedal fully depressed and attempt to keep the pressure on this value.
- If, with the engine running at 1950 rpm, the value of 400 bar is not reached, adjust the spark advance valve **G** (annexes 3).

⚠WARNING


The spark advance screw must never be rotated beyond the vertical axis of the pump (observe the reference mark on the screw).

Model	Pump pressure	Diesel engine rpm
TELELIFT 3514	400 BAR	2000
TELELIFT 3013	400 BAR	2000
LIFT 4020	400 BAR	1600
LIFT 3513	400 BAR	2300
TELELIFT 3517	400 BAR	2000
TELELIFT 3713 Elite	400 BAR	2000
TELELIFT 3713 SX	400 BAR	2000
TELELIFT 4017	400 BAR	1950
TELELIFT 4514	400 BAR	1950

4.2 CHECKING THE SAFETY VALVE

- With the engine running at maximum speed and the forward speed engaged, adjust the pressure cut-off valve **F** to 430 bar.

The two pressure control valves **H** must not be calibrated since they are of cartridge type and already set to 450 bar by Rexroth.

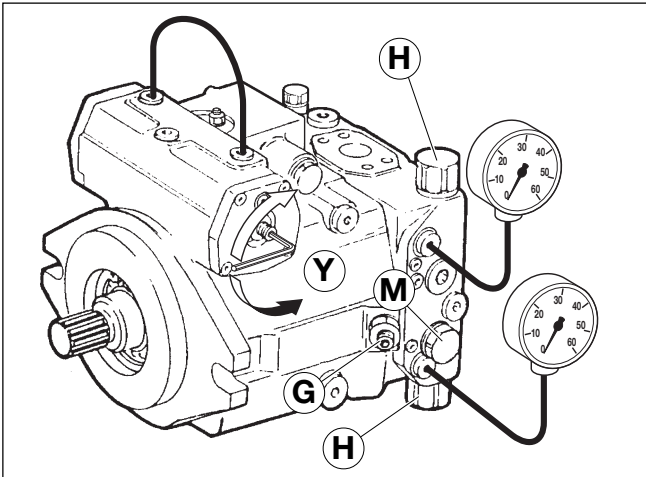

4.3 CALIBRATION OF THE MECHANICAL ZERO

The calibration of the mechanical zero **I** is required if the machine is set to neutral position with the forward-reverse speed lever.

- Set the forward-neutral-reverse selector to neutral position.
- With the engine running at idle speed, adjust the mechanical zero screw **Y** by rotating it until the high-pressure manometer reads the same value measured by the boost pressure manometer.

5. SETTING THE BRAKING SYSTEM PRESSURE (annexes 4)

- Connect a 0-250 bar manometer to position **T** (annexes 4).
- Depress the foot brake some times until the manometer starts increasing. When it stops, the value shown is the calibration value of valve **R** which must be 140 bar. If the displayed value is inferior, loosen valve **R**; if the value is greater, tighten the valve.

Note: To check the pressure, it is necessary to depress the foot brake some times until the manometer restarts increasing; when it stops in stable position, it shows the calibration value.

Pay special attention while disconnecting the hose from the accumulator. Oil can splash all around. First of all, release any residual pressure from the accumulators.


6. SETTING THE POWER STEERING

- Connect a 0-250 bar manometer to position **Z** (annexes 5).
- Select the front axle steering mode.
- Move the steering cylinder to stroke end and make sure the value of the power steering **A** is 140 bar. If the value is less, tighten valve **X**; if the value is greater, loosen the valve.


Note: To gain access to valve **X**, remove the protection cap (annexes 5).

7. SETTING THE STABILIZERS DISTRIBUTOR

- Connect a 0-400 bar manometer to position **V** (annexes 6).
- Run the diesel engine to max speed and make sure that the pressure reaches 220 bar with the stabilizer to end of stroke.
- If the pressure value isn't correct, act on valve **L** of the distributor.

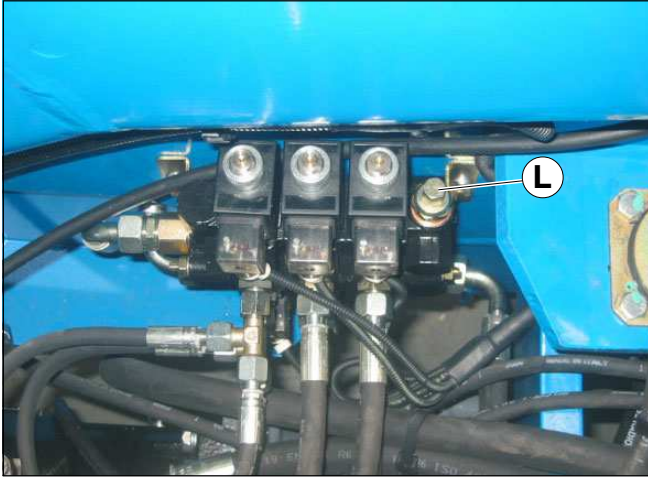
**8. CHECKING THE ADJUSTMENT SCREW OF THE DRIVE MOTOR GEARBOX**

- Check that the bottom face of the adjustment screw **W** of the drive motor gearbox protrudes 5.75 mm with respect to the bottom face of the relevant locknut.

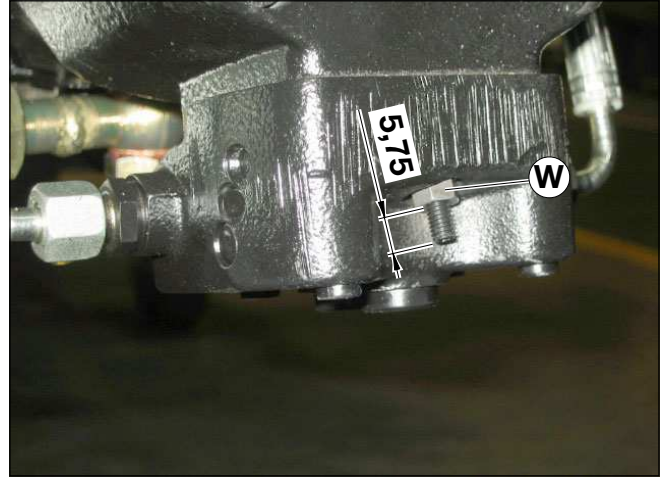


HYDRAULIC SYSTEM - LIFTING

annex 1

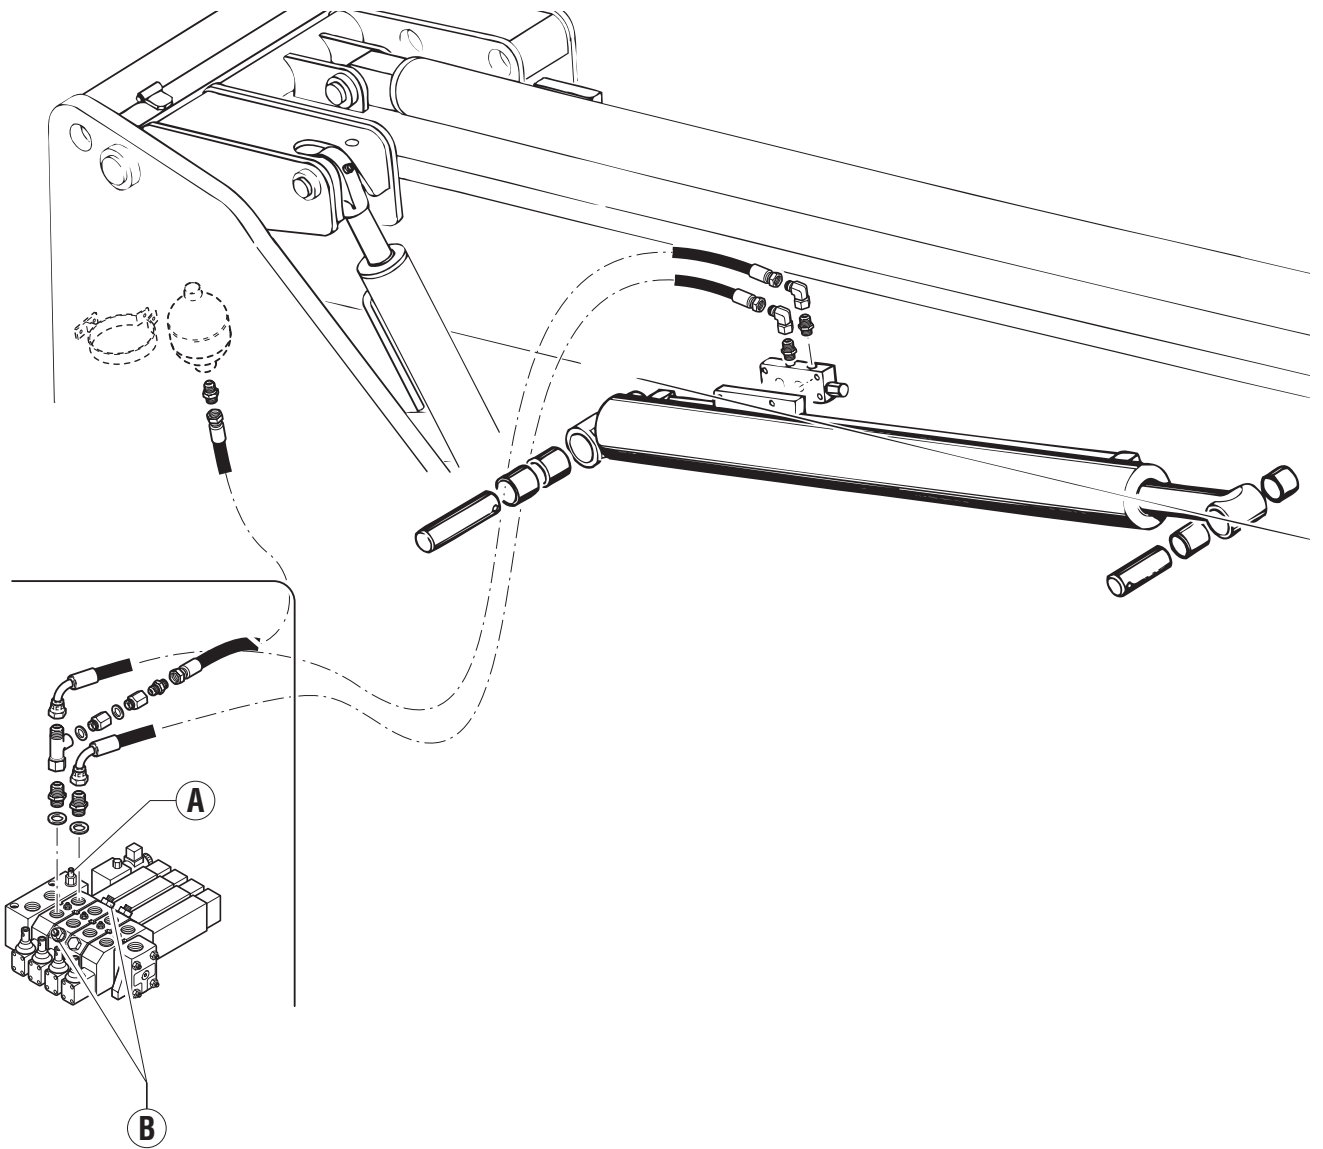


HYDRAULIC SYSTEM - FORK BALANCE

annex 2

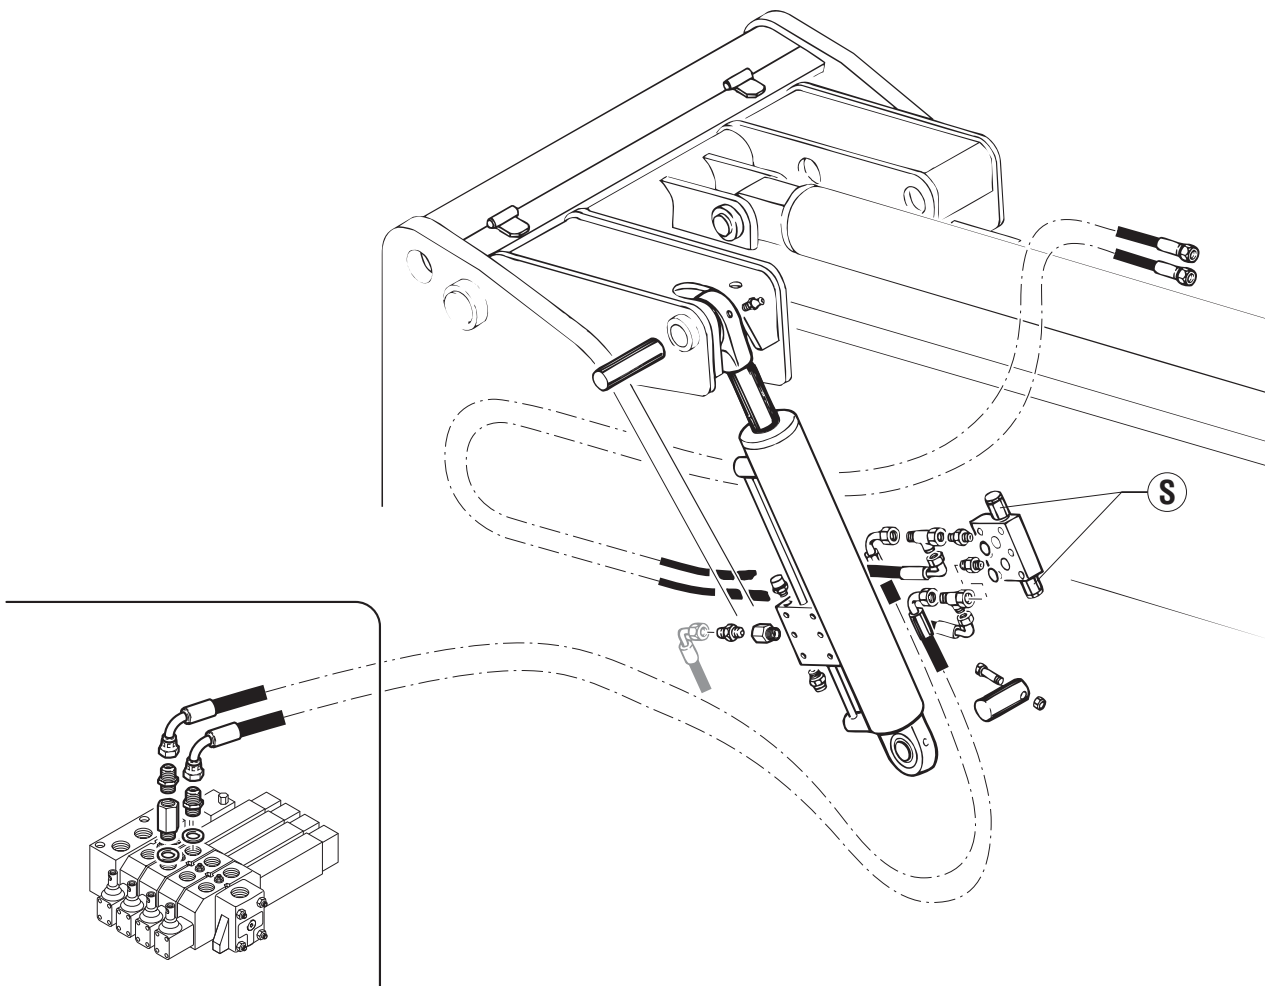


HYDRAULIC SYSTEM - TRANSMISSION

annex 3

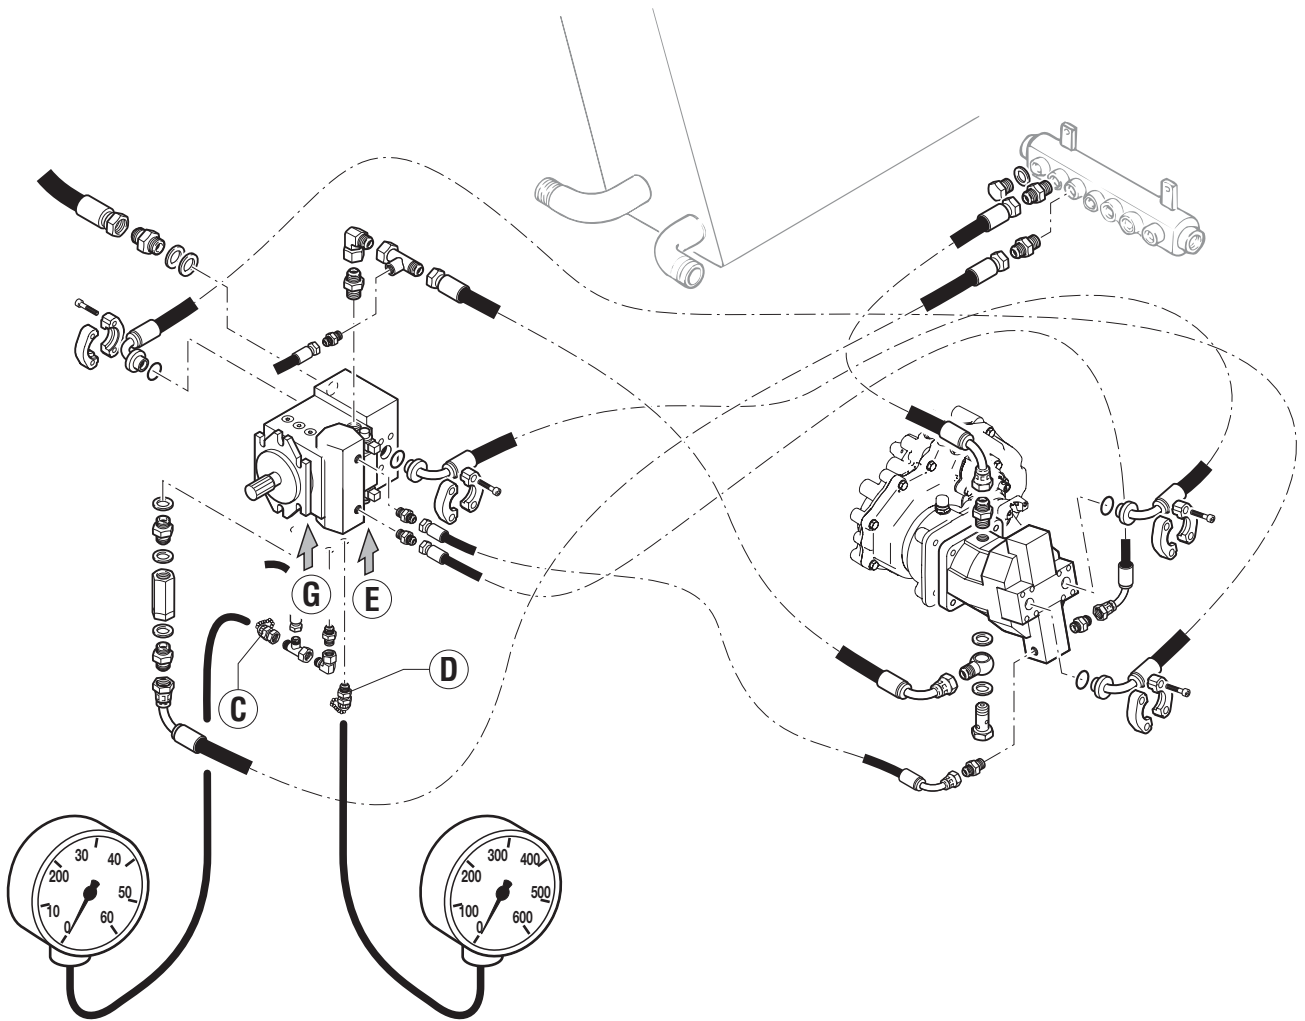


**HYDRAULIC SYSTEM - SERVICE AND
PARKING BRAKES**

annex 4

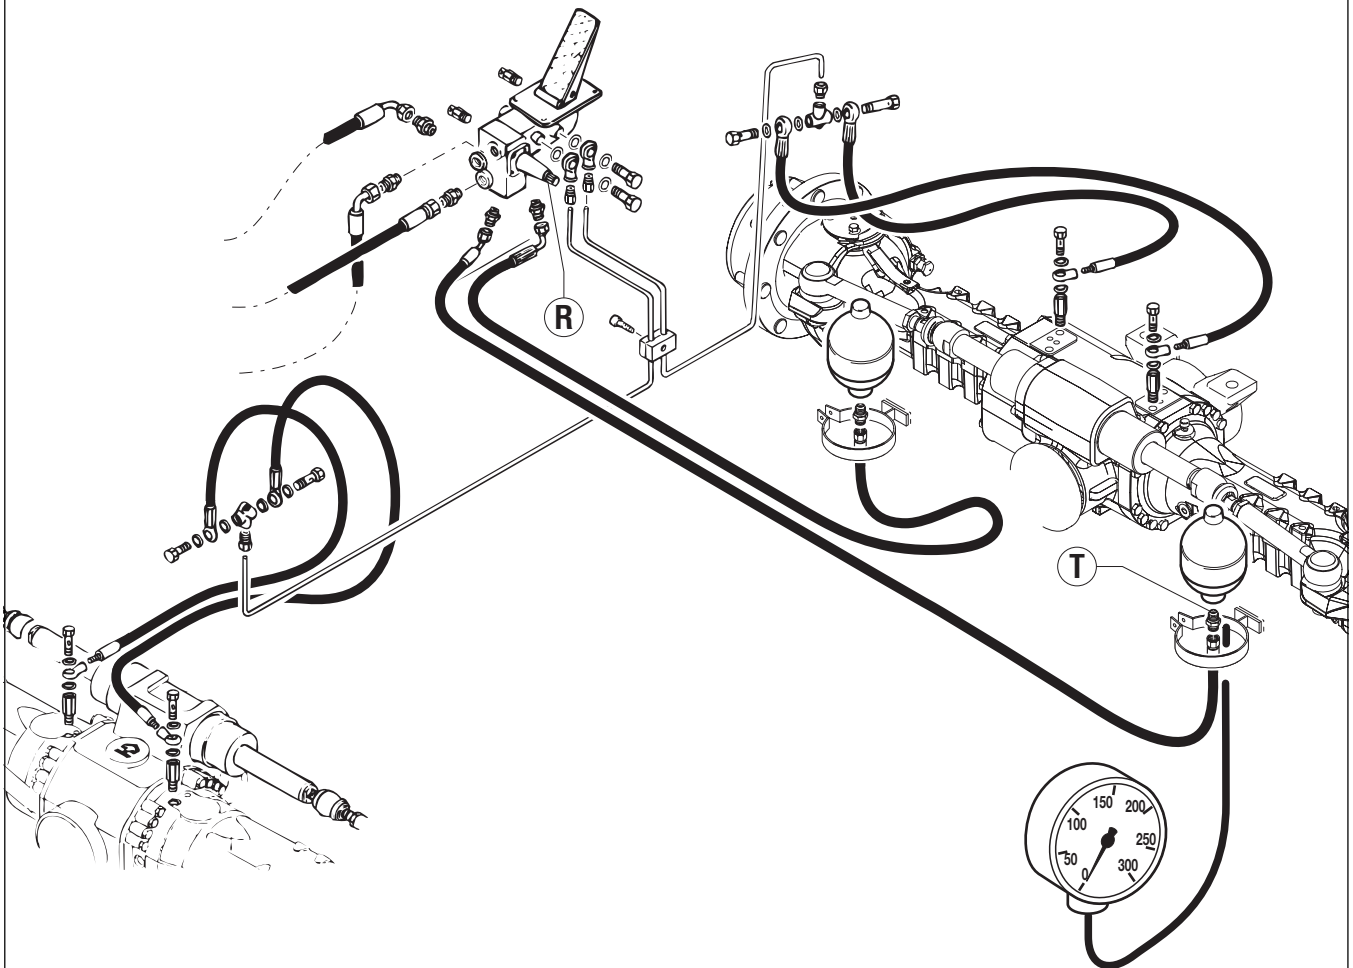


HYDRAULIC SYSTEM - POWER STEERING

annex 5

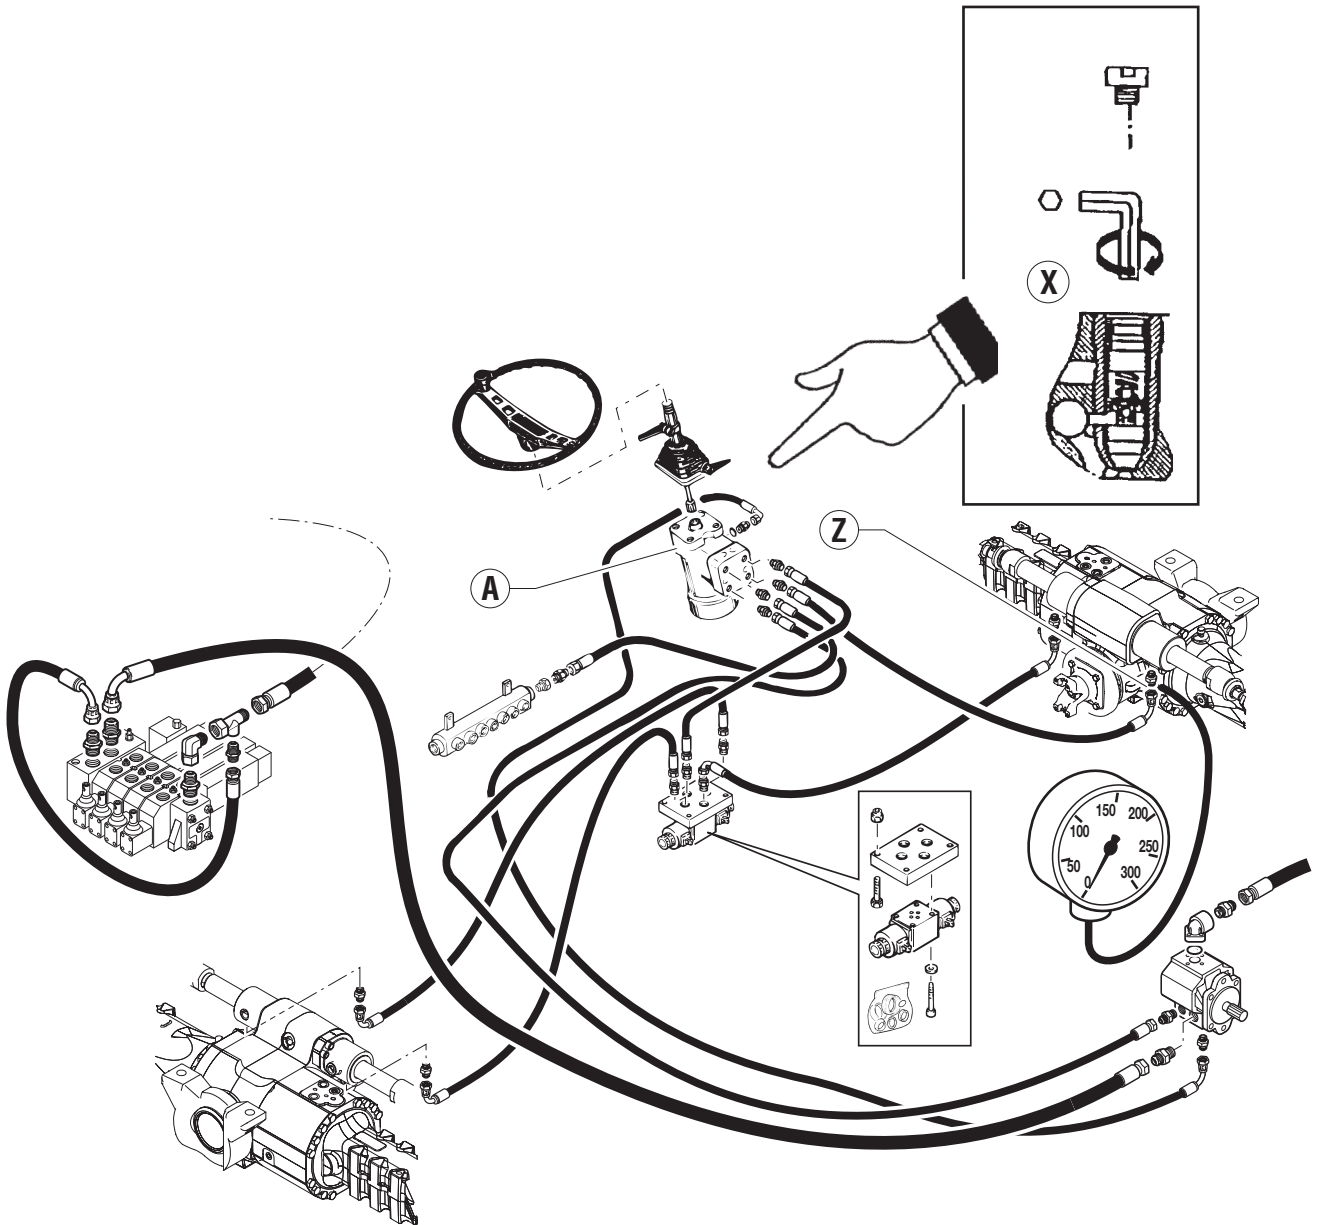

HYDRAULIC SYSTEM - STABILIZERS

annex 6

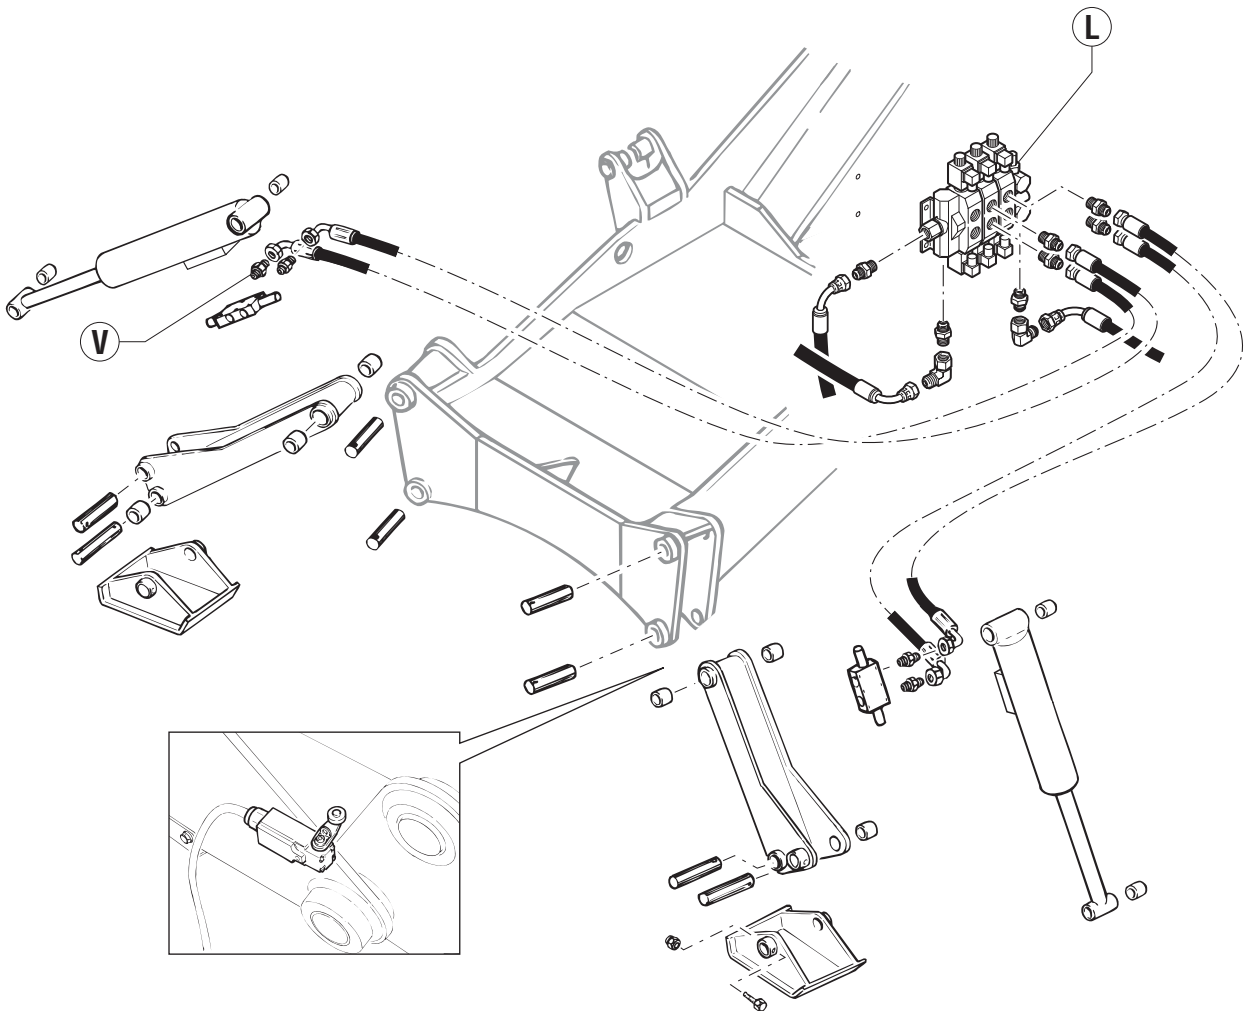

2.23 CALIBRATING THE DLE LOAD LIMITER


CAUTION


- *During the calibration mode the limiter device doesn't block any manoeuvres so the calibration can be done.*
- *If the machine has stabilisers, you have to do the calibration empty and loaded with the stabilisers resting fully on the ground. Therefore we recommend having the known load in the range of action of the machine.*
- *The calibration of the machine should be done after a few minutes of use, in other words with the machine "warm".*


- Enter the calibration mode:

Within 5 seconds from when the instrument is activated (even if the display is still off) you should press the keys on the front panel in the right sequence.

The keys to use and the relevant meaning are shown below:


Press  to enter number 0

Press  to enter number 1


Press  to confirm the sequence entered.

The access code currently used is **1001**. Therefore you should enter the following sequence:

CONFIRM

If the sequence is correct the confirmation of the instrument functioning in the calibration mode is given by the LED near  lighting with a fixed light.

The display shows a number that ISN'T blinking, starting from "0".

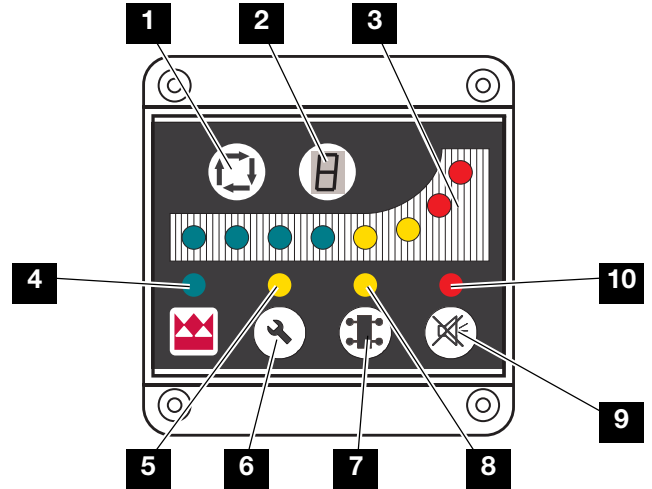
















- Description of the controls:




- 1 Calibration selection button
- 2 Display
- 3 Stability indicator with LED-bar
- 4 Green light - power OK
- 5 Yellow light - calibration mode
- 6 Calibration confirmation button
- 7 Not used
- 8 Yellow light - outrigger position
- 9 Buzzer ON/OFF pushbutton
- 10 Red light - overload pre-alarm / alarm

The digit on display 2 shows the selected attachment. The user can choose among:

- 0: Generic**
- 1: Platform**

The system recognises the attachment fitted to the machine automatically.

DISPLAY	FUNCTION
<p>0</p>	<p>The LED bar indicates the type of machine in use: 2 LEDs on - T3713 Elite/T4017/T4514</p> <p>Press  or  to select the machine to calibrate.</p> <p>If you are doing the first calibration, press  to reset the system and load the default parameters of the selected machine.</p> <p>Press  to proceed to the next point (1).</p>
<p>1</p>	<p>Lower the outriggers, fully close the boom and hold it slightly above the horizontal with respect to the ground. DON'T lift loads.</p> <p>Press  to confirm the EMPTY calibration of the machine.</p> <p>Press  to proceed to the next point (2).</p>
<p>2</p>	<p>Place a load on the forks with a weight corresponding to the table on next page - in relation to the model -, extend the boom while holding it horizontal till reaching the overturning limit (ex. Telelift 3713 Elite with outriggers down 1000 kg at 7.50 m referred to the front part of the wheels).</p> <p>Press  to confirm the LOADED calibration of the machine and check that the alarm triggers.</p> <p>Hold the load on the forks, raise the outriggers and extend the boom up to 5.35 calculated from the front part of the wheels to the centre of the load on the fork. Hold this position till the end of the procedure explained in point 3.</p> <p>Press  to proceed to the next point (3).</p>
<p>3</p>	<p>Press  a few times so that only the green LED's remain lit (the first 4 LED's on the display), then press  so that the first red LED lights up (the last one on the display).</p> <p>Press  to proceed to the next point (4).</p>
<p>4</p>	<p>Calibration of the machine when working with the NACELLE. Move to a limit point of the load table with stabilizers down.</p> <p>Press  or  to decrease/increase the operational % until the first red LED of the bar lights up. It is recommended to move the bar to the green/yellow zone and to increase later on.</p> <p>Press  to proceed to the next point: the system goes automatically to point A. If the calibration is okay, go on pressing  to proceed to point F.</p>

DISPLAY	FUNCTION
F	<p>Press  to exit calibration and SAVE the changes made (the zero flashes).</p> <p>The limiter is no longer in the calibration mode. The LED  is not lit fixed any more.</p> <p>You should turn the machine off and then on again to eliminate any alarm messages (display blinking). When the instrument is turned on, a flashing "0" should appear on the display if the auto-confirmation via software is not programmed, and you should confirm pressing .</p>

Once the machine has been calibrated, proceed with some tests using the following weights and lengths (the latter are the distance between the front part of the wheels and the centre of the load on the forks):

		load (kg)	activation of the overload warn.system (m)
Telelift 3713 Elite	on outriggers	1000	7.50
	on wheels	1000	5.35
Telelift 4017	on outriggers	1000	8.60
	on wheels	1000	6.30
Telelift 4514	on outriggers	1500	8.70
	on wheels	1500	5.50

2.24 CHECKING THE TECNORD CONTROL UNIT

To check the operation data of the TECNORD control unit, proceed as follows:

- Go to the driving place and remove the cover located at the left bottom with respect to the steering wheel.
- Prepare the electrical cable code 55.0602.0203.



- Find socket X90.



- Remove the socket's protection cap and connect the end of the cable for the connection of the PC.



- Connect the other end of the cable to the special socket on the PC.



- Proceed with the checks and settings using the control and management program.



POWER UNIT CHARACTERISTICS

The electronic power unit is turned on by turning the ignition key to ON.

It reads the following analog signals:

- X-axis position of the cab joystick
- Y-axis position of the cab joystick
- Position of the proportional pushbutton located on the handle of the cab joystick

- Position of the joystick on the platform buttons panel used for the control of the boom movement
- Position of the joystick on the platform buttons panel used for the control of the boom telescopes

It reads the following ON/OFF buttons:

- Dead man on the handle of the cab joystick
- Activation button for the locking/unlocking function
- Activation button for the up-movement of the left outrigger
- Activation button for the down-movement of the left outrigger
- Activation button for the up-movement of the right outrigger
- Activation button for the down-movement of the right outrigger
- Left sway activation button
- Right sway activation button

- Dead man on the platform buttons panel

It reads the following alarm and state signals:

- Overturning moment
- Boom up
- Stabilised machine
- Jobsite position of the Jobsite/OFF/Platform selector

- Platform position of the Jobsite/OFF/Platform selector
- Overload on platform

It drives the following outputs:

- ON/OFF solenoid valve for up-movement of the left outrigger
- ON/OFF solenoid valve for down-movement of the left outrigger
- ON/OFF solenoid valve for up-movement of the right outrigger
- ON/OFF solenoid valve for down-movement of the right outrigger
- ON/OFF solenoid valve for left sway
- ON/OFF solenoid valve for right sway
- ON/OFF solenoid valve for locking function
- ON/OFF solenoid valve for unlocking function

- Activation of the control module for the boom movement
- Activation of the control module for the boom telescopes movement
- Activation of the control module for the forks movement (up/down pitching)


- Warning buzzer on platform
- Warning light on platform

The control unit also supplies the 5VDC power signal to the joystick/proportional button (+/- 5%).

When the joystick/proportional button is in the central neutral position, the relevant analog signal is 50% of the power signal.

The dynamics of the joystick signal changes from max 87.5% (joystick/pushbutton to one end) to min. 12.5% (the opposite end) for the joystick installed in the driving cab, and from max 90% to min. 10% for the joystick installed on the platform's buttons panel (the percentages are referred to the power signal of the joysticks/proportional button).

During normal operation (no anomalous condition detected), the red LED of the control unit flashes with a sequence of 3 seconds ON and 0.25 seconds OFF (say it switches off for a short instant every 3 seconds).

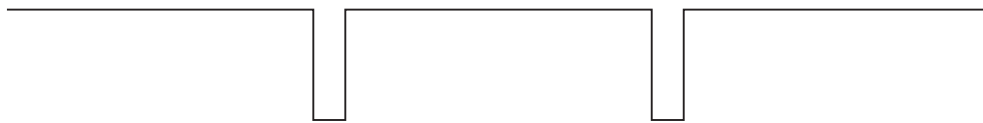

The control unit can detect the following malfunctions:

- Joystick and/or proportional button not in the central neutral position when the Jobsite/OFF/Platform selector is on Jobsite or Platform **(Alarm code 1)**
- ON/OFF buttons in the ON position when the Jobsite/OFF/Platform selector is on Jobsite or Platform **(Alarm code 1)**

Such conditions would activate the manoeuvres associated to the button without control if the signal were not OFF when the Jobsite or Platform mode is selected. Therefore, until the control unit does not detect a neutral position, the function is inhibited and the malfunction is signalled.


- Joystick and/or proportional button with analog signal below the minimum threshold (this case also includes the disconnection of the joystick/proportional button connection or the short circuit to ground of the proportional signal or the short circuit to ground of the power signal of the joysticks/proportional button) **(Alarm code 2)**
- Joystick and/or proportional button with analog signal above the maximum threshold (this case includes the short circuit to VBATT of the power signal or the ground disconnection in the joystick or proportional button connector) **(Alarm code 3)**

The malfunctions detected by the power unit are signalled by the red LED which remains OFF for about 2 seconds then flashes for a number of times equal to the code number associated to the detected alarm. The more the LED flashes, the more serious is the alarm and serious alarms have priority with respect to the "soft" alarms. In presence of more alarms, the most serious one is displayed first and, as soon as this is solved, the next one (whose seriousness was lower) is displayed.

Alarm code 1




Alarm code 2

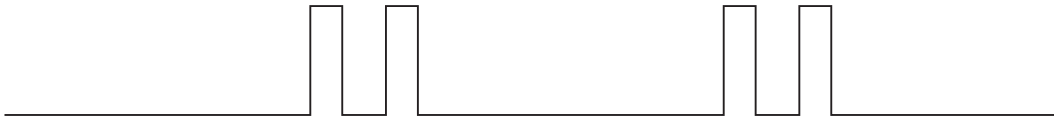

Alarm code 3



The analog command signals of the control modules of the boom, telescopes and inclination movements are signals between 0.9V (-84.2%) and 4.1V(+84.2%) with rest position at 2.5V (0%).

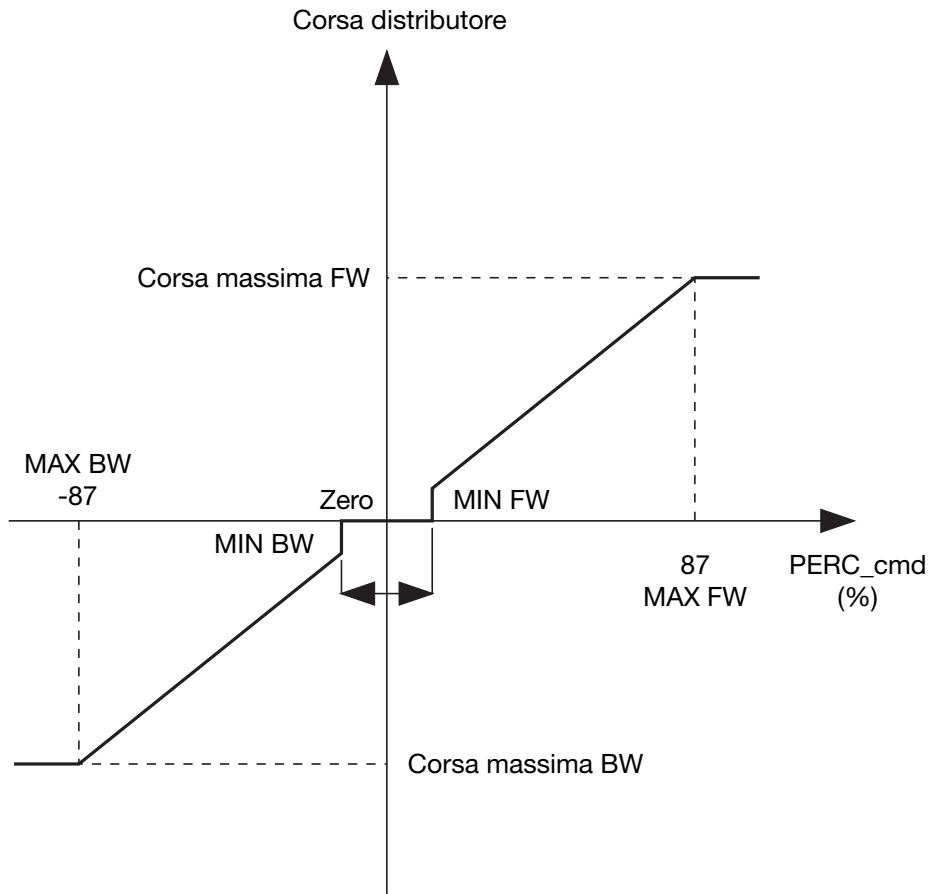

REMARK

- $PERC_cmd = (V_{control} - 2.5)/1.9$
- Corsa MASSIMA FW e BW mean the maximum stroke in one direction and the maximum stroke in the opposite direction
- With the calibration program, you can change the piloting percentages of MAX FW, min FW, MAX BW and min BW for the three proportional manoeuvres.

DIAGNOSTIC CONTROL PROGRAM

Starting the application, you'll find the following window and a dialog box which says to push the CONNECT button after choosing a serial port.

CAUTION

Please note that this software doesn't work in offline.

In fig.1 you can see the setting windows. In the "movements selector" box you can choose the movement you want to set among "braccio" (boom raising and lowering), "telescopico" (boom extension and retraction) and "movim. forche" (fork forward/back pitching).

Once you've chosen the movement, you can set in the "MIN" and "MAX" boxes the value (in percentage) of the movement speed you desire:
 MIN means the minimum speed you can have for that movement
 MAX means the maximum speed.

"RAMP UP" and "RAMP DOWN" represent the acceleration in increasing and decreasing the movement speed.

As you can see from the pictures, using the man platform you can set different values from standard use in jobsite.

The "LOAD SETTINGS FROM FILE" is the button used to load in the machine a previous setting configuration saved in the PC and "STORE SETTINGS INTO FILE" button is the button used to save the current machine configuration in the PC.

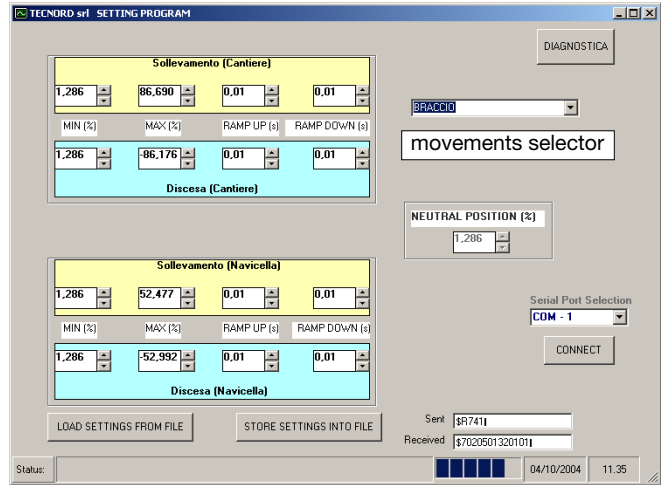


Fig. 1

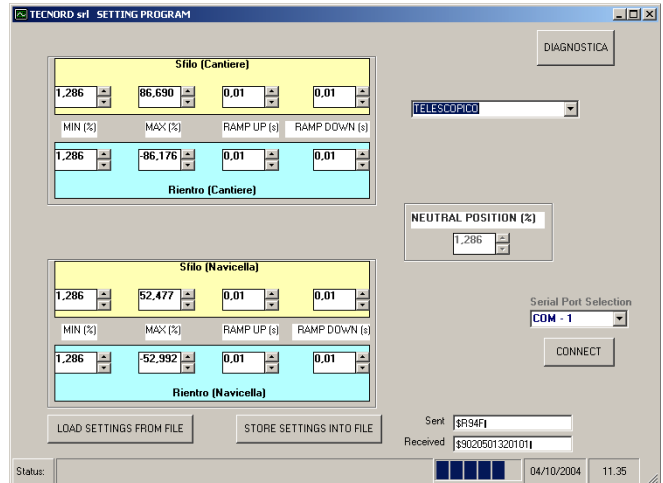


Fig. 2

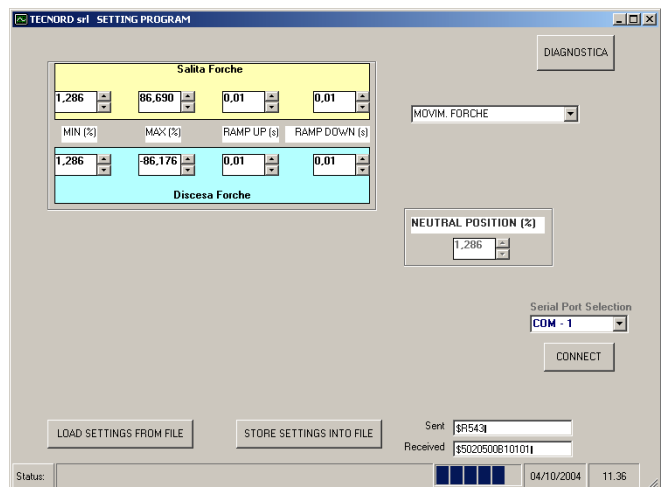


Fig. 3

In fig. 4 you'll find the window showed when you push the "DIAGNOSTICA" button.

In this page you'll find the system signals diagnostic. The graduated bars show you the movements of the boom and forks in real time, according to their effective speed.

The joystick control button and the 4th function button become ON and OFF depending if they are pushed or not.

The same is for outriggers and leveling UP and DOWN movements.

Regarding the Alarms, CHIUSO means OFF, APERTO means ON, in fig.4 you have, for example, an overload alarm while the outriggers are down.


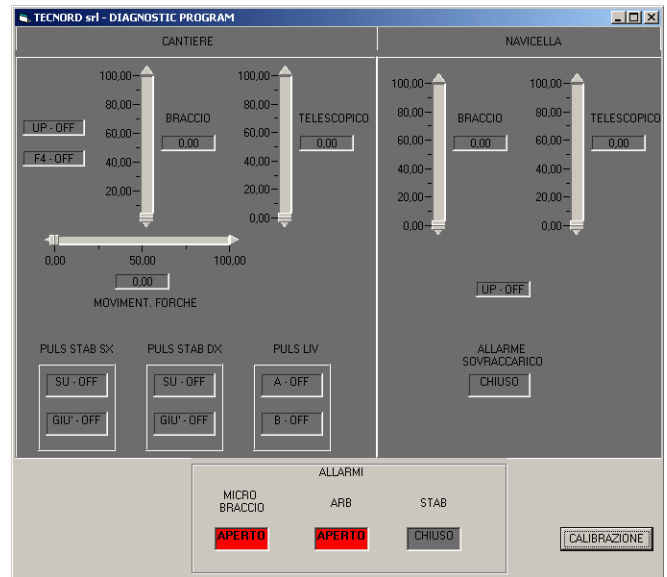


Fig. 4

2.25 DLE SYSTEM

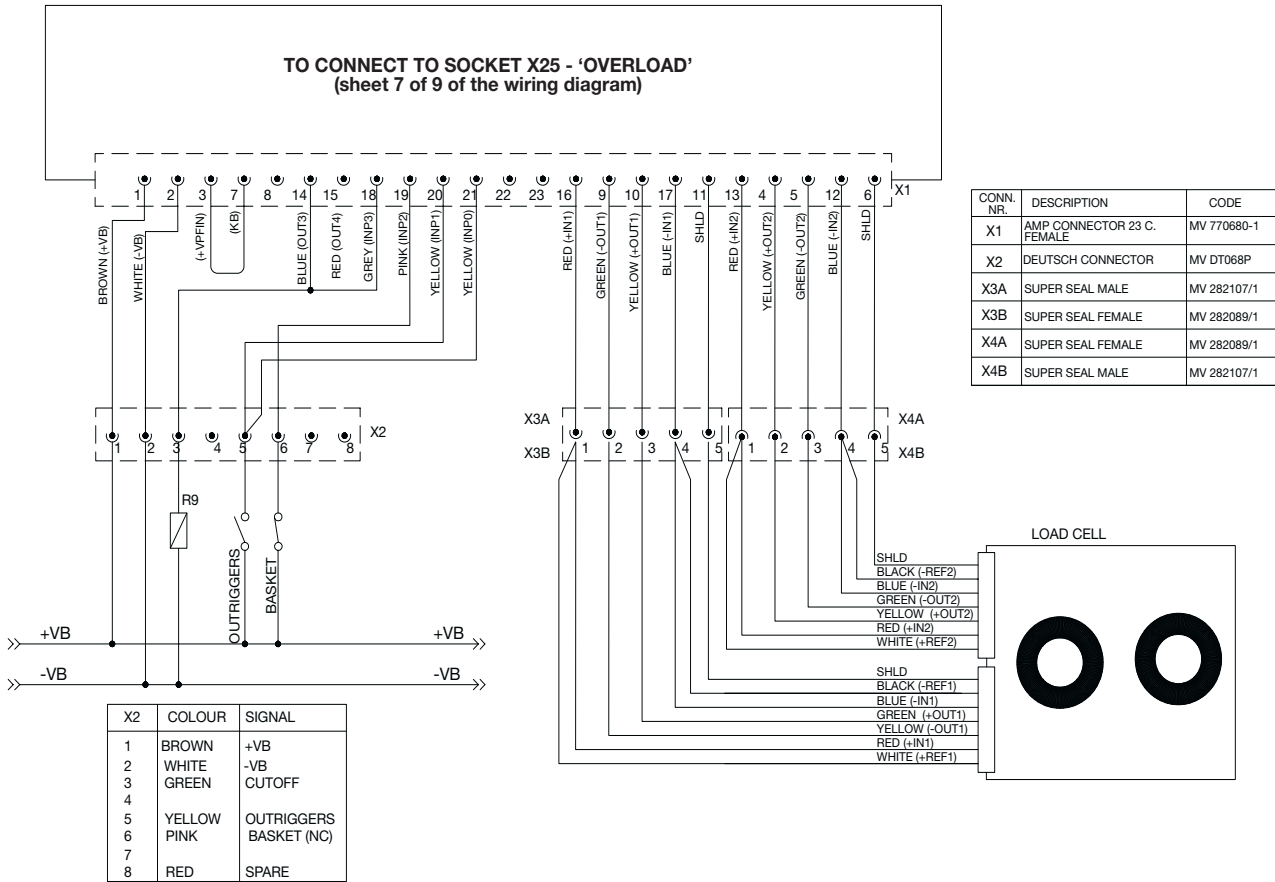

CONNECTOR X1 FOR CHECKS WITH TESTER

Electrical power to control unit (DLE)

Pin 1: 12 V
Pin 2: ground

Overload signal

Pin 14: 12 V normal conditions, 0 V alarm overload
Pin 18: re-reading overload signal

Cab/platform switch signal

Pin 19: 0 V if switch is on "platform", 12 V if switch is on "cab"

Stabilizers signal


Pin 20/21: 12 V if the machine is on stabilizers, 0 V if it is on wheels

Electrical power to load cell equal to 5 V

Channel 1: Pin 16: positive Pin 17: negative
Channel 2: Pin 13: positive Pin 12: negative

Load cell signal in range 0,1 - 2,5 mV

Channel 1: Pin 10: positive Pin 9: negative
Channel 2: Pin 4: positive Pin 5: negative

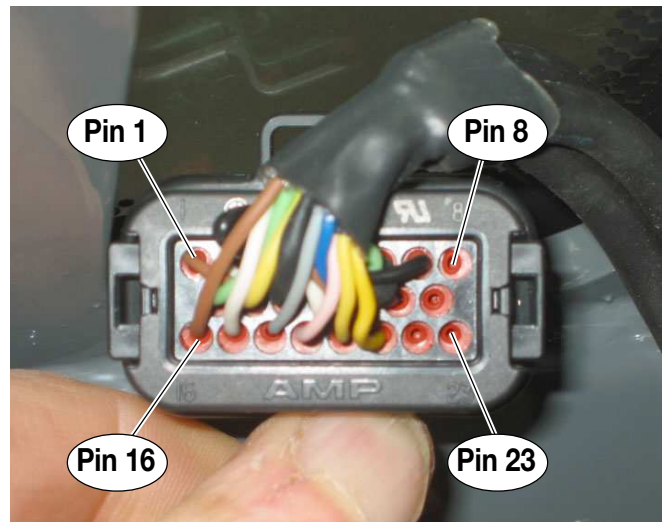

SETTINGS

FUNCTION	DISPLAY
A-B	<p>Display of the value read by the ADC converter-cell channel 1 (A) and cell 2 (B). This diagnosis function allows you to check proper reading of the load cell. As you move the boom, you can see the LEDs of the load bar progressively go on/off. If the function A is setted, the LEDs of the load bar progressively have to go off, moving out the boom while in the function B the same LEDs progressively have to go on. If it is completely ON or OFF, there could be a problem with the connection or in the cell thereof. If it is partly lit but there is no movement in the boom, make sure the cell is fixed.</p>
C	<p>Digital Inputs display: this function allows you to see if the following signals are properly delivered to the DLE device according to the lighted LEDs of the load bar: LED1 and LED2: ON when the machine is stabilized. LED3: the 4514/4017 will be active if the nacelle is not installed. LED4: ON if the interlock relay is active (machine safe without alarms).</p>
D	<p>Software version existing in the DLE unit: this function allows you to see the software version included in the DLE unit according to the lighted LEDs of the load bar No LED: software 0 One LED: software 1..... Four LEDs: software 4</p>
E	<p>No function.</p>
F	<p>Press to escape from the calibration and SAVE all changes. (the buzzer and the LED activate to confirm storage). The limiter has now escaped from the calibration mode. The LED is no longer ON steadily. It is necessary to turn off and turn on the machine to eliminate all alarm messages (display flashing).</p>


ALARM CODES

Alarm code	1
Description	E2PROM Error. Internal comparison of data read from E2PROM failed.
Action	Switch off and switch on the machine. If the alarm continues, recalibrate the machine, otherwise replace DLE.
Alarm code	2
Description	CELL 1 reading out of range.
Action	Check if the load cell is fixed well. Check the connection between DLE and sensor for short circuits or signal interruptions due to a broken cable. Check the DLE connector for signs of oxidation, short circuits or absence of electrical contact in some pins. If the alarm persists, check if the cell is intact.


Alarm code	3
Description	CELL 2 reading out of range.
Action	Similar to alarm 2, but referred to the second analog channel (Cell 2).
Alarm code	4
Description	Block Relay check error during work. Check through.re-reading of the block output of the congruence with the current state of the limiter. The alarm triggers even in the absence of malfunctions if the load limiter cutout key is usedo.
Action	The relay or the cable can be shorted; check. The limiter's outputs do not deactivate. Switch off and on the machine and run a complete test of the outputs. If the alarm persists, replace the DLE.
Alarm code	5-6-7-8
Description	Block Relay check error at start. When the instrument is started, the re-reading of the block output is always OFF except when the two outputs of the DLE are connected in series. 5 - output 1 off and output 2 off 6 - output 1 off and output 2 on 7 - output 1 on and output 2 off 8 - output 1 on and output 2 on The alarm triggers even in the absence of malfunctions if the load limiter cutout key is used when the instrument is started.
Action	The relay or the cable can be shorted; check. The limiter's outputs do not deactivate. Switch off and on the machine and run a complete test of the outputs. If the alarm persists, replace the DLE.
Alarm code	9
Description	CELL1 and CELL2 reading correspondence. From the continuous comparison of the value read from analog channel 1 and analog channel 2, an alarm is triggered if the difference exceeds the preset threshold.
Action	Check the integrity and fastening of the load sensor and the relevant connections. If the alarm persists, attempt to re-calibrate or replace the load sensor.
Alarm code	A
Description	RAM data error. Checks that the parameters load in the RAM at start-up remain unaltered.
Action	Switch off and on the limiter.
Alarm code	B
Description	Outtrigger congruence. During operation, the signal of stabilised machine is congruent between the two inputs used for reading.
Action	Check connections and DLE connector. If the alarm continues, replace DLE.
Alarm code	C
Description	A.D.C. reading control error. If the analog/digital converter works fine after special re-reading of the DLE board.
Action	Switch off and on the limiter. If the alarm continues, replace DLE.

DLE - MONITORING WITH 3B6 WINSCOPE - PARAMETERS

Simulation of the parameters

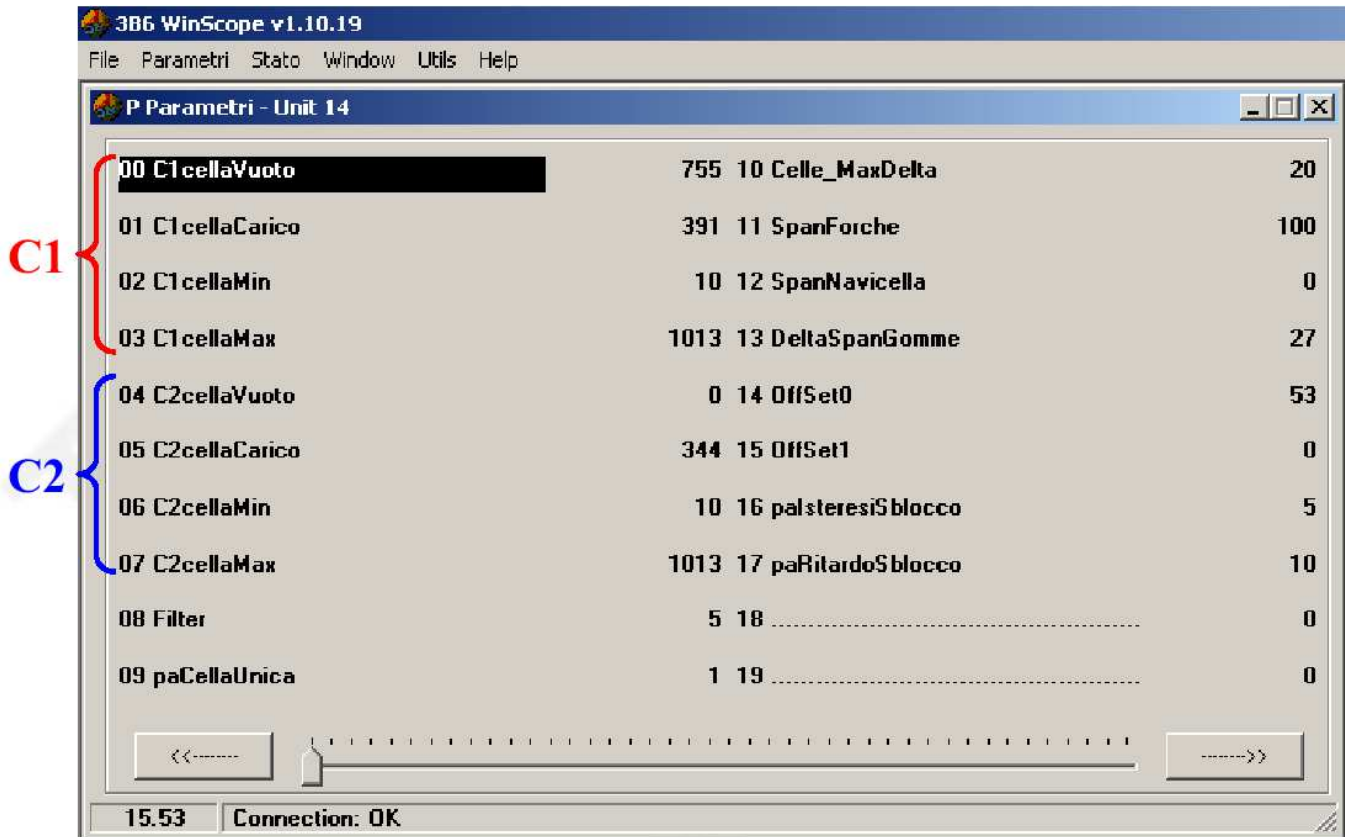

Simulation of the variables

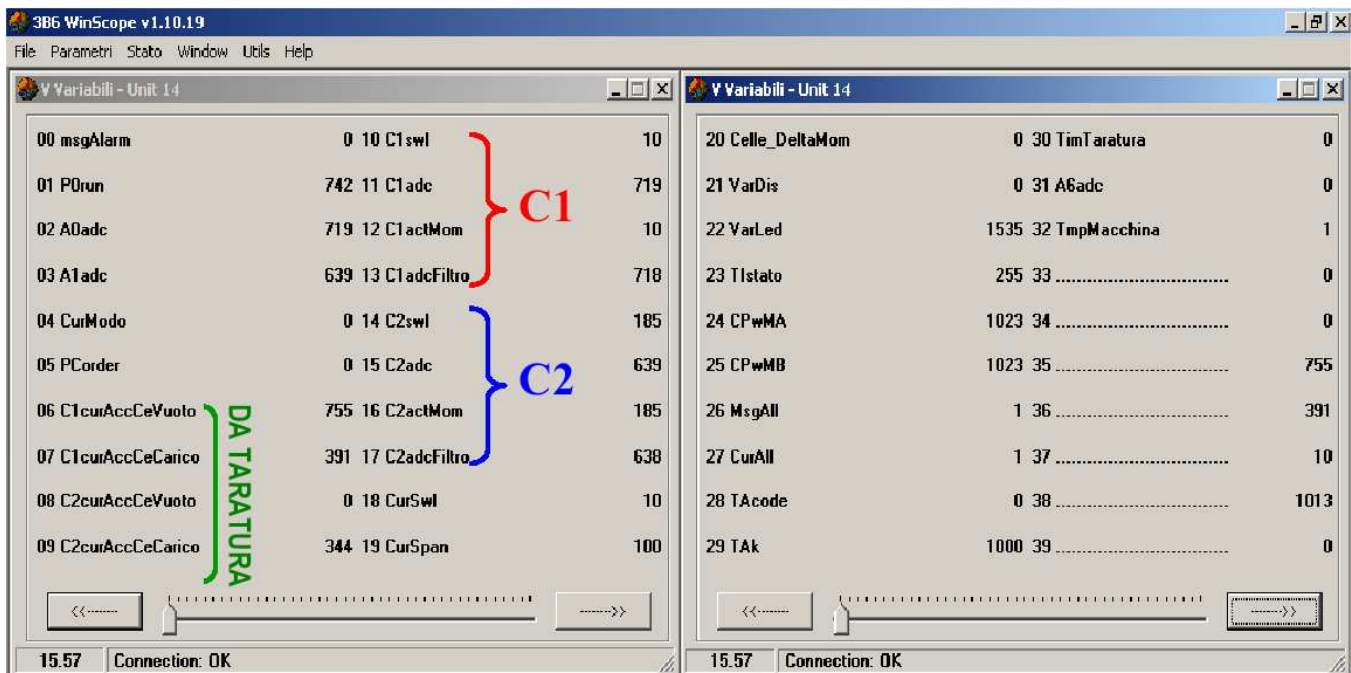

SAVING OR UPLOADING SETTINGS WITH WINSCOPE

When you launch the program the first time, you have to configure some options to guarantee a correct dialogue with the hardware (the machine) used.

Turn on the board to connect the PC and the unit aboard the machine.


From the “**Utils**” menu, select “**Prj Selection**”.



Type in the correct path of file **CFG.IT** or look for the same in the Windows folders using the "Browse" function. The file must not necessarily be in the path shown in the following example as it is at the user's discretion.

It contains the menus and the name of the parameters corresponding to the hardware (and therefore to the machine) in use. Presently, we have the following folders, each of them corresponding to specific configuration files:


- DLE_00 (first DLE version)
- DLE_01 (current DLE version)

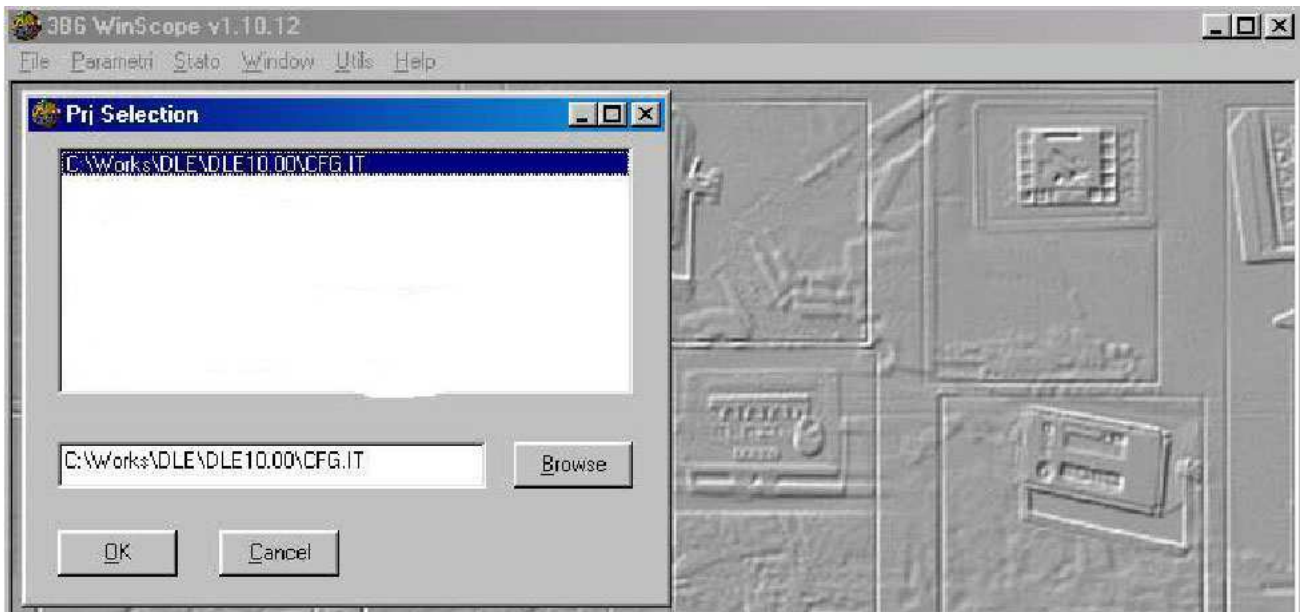


Press OK to close the window.



Now highlight "Hardware Configuration" in the "Utils" menu.

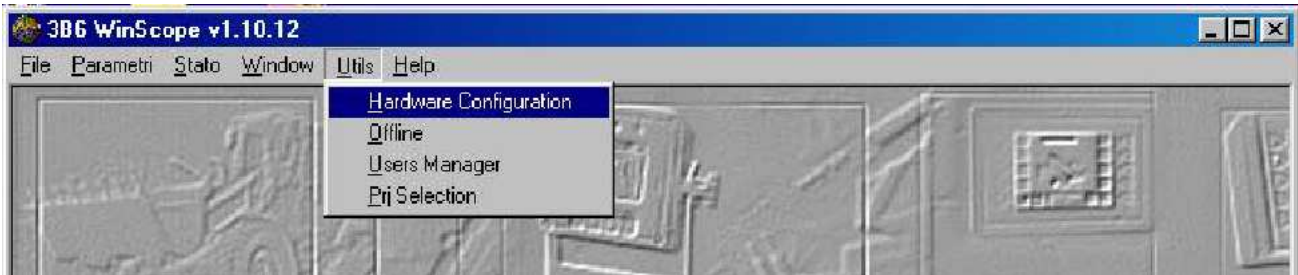

The following window will appear:

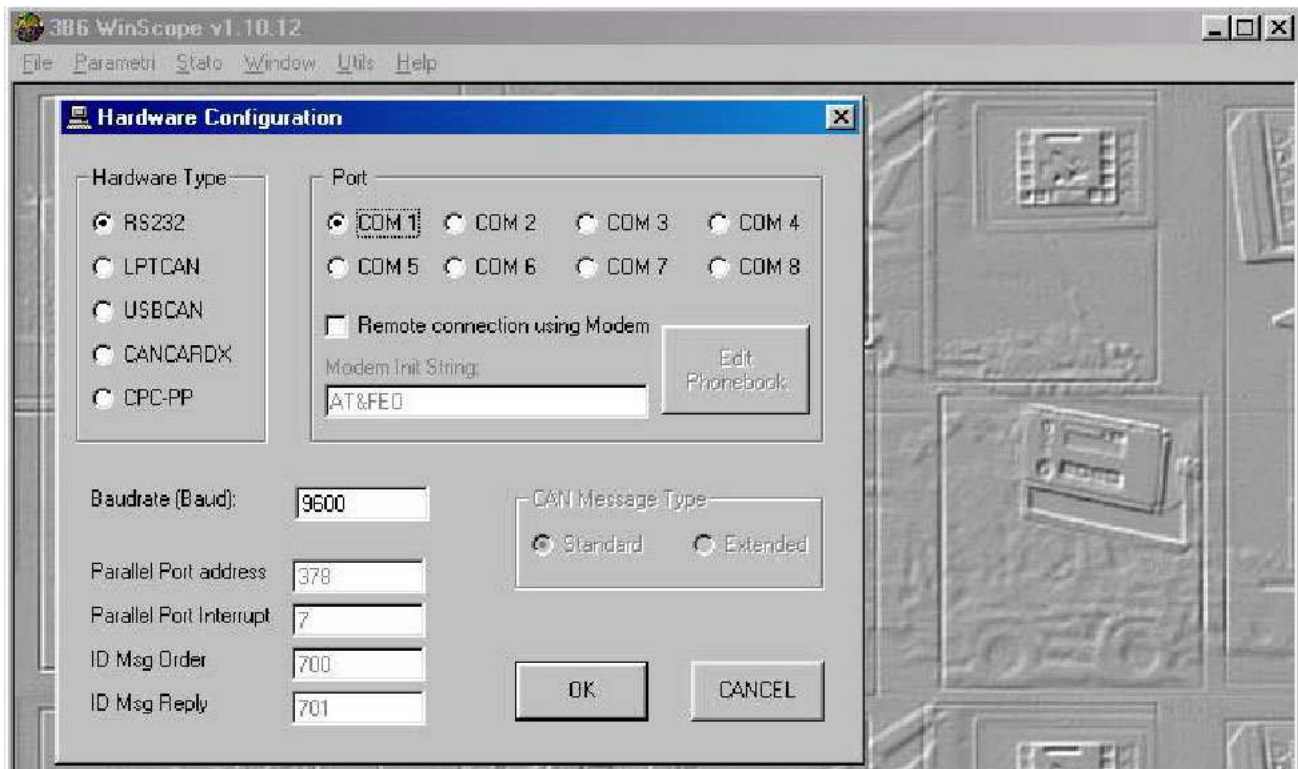

For each type of machine, you must select adequate parameters, that is:

DLE_01 (current)

- Hardware Type **RS232**
- Port **COM1** (usually this is the port, but it can change in relation to the connected PC)
- Baudrate **19200**

DLE_00

- Hardware Type **RS232**
- Port **COM1** (usually this is the port, but it can change in relation to the connected PC)
- Baudrate **9600**



If these parameters are wrongly configured, it won't be possible to connect the units.

Press OK to confirm and close the window.

Now **close** and re-open the program.

Check that the PC is correctly connected to the relevant serial port and to the DLE unit with the special cord **A** (code 07.0736.0014), and that the unit is supplied with power.

In the "File" menu, select "Salva" (Save) if you want to download a setting of the machine onto a PC or "Carica" (Load) if you want to transfer a setting saved in the PC into the machine.

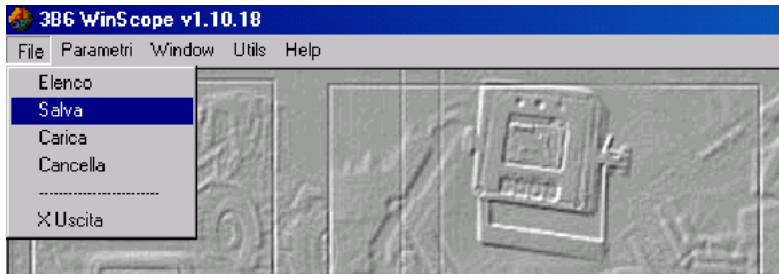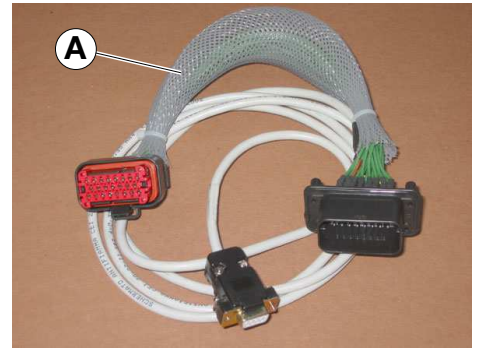


The following window will be displayed so you can type in the password.


For any changes, you must enter the following data:

User Name: ...(contact the TEREXLIFT Service Centre to get your ID-code)

Password: ...(contact the TEREXLIFT Service Centre to get your ID-code)

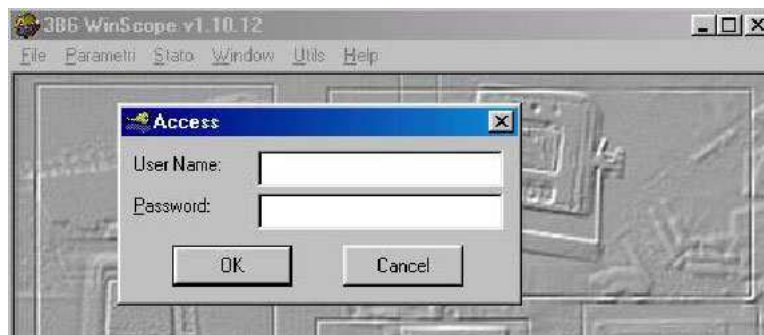


Enter the correct data and press OK. If you have selected "Salva" (Save), the following window will be displayed:

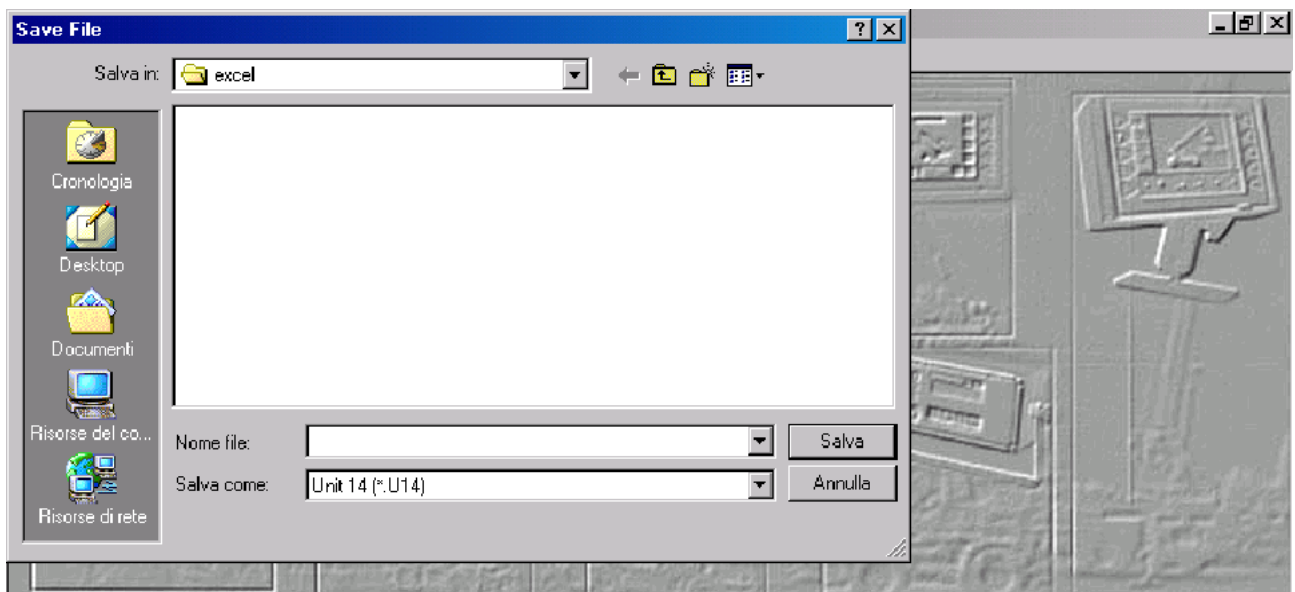

Choose the folder where to save the setting and save the file with a name showing the serial number of the machine (e.g. T3713 SX sn 10578).
Press the Save button.





If you have chosen to upload a setting previously saved in memory, select the "Carica" (Load) command from the File menu. The following window will be displayed:

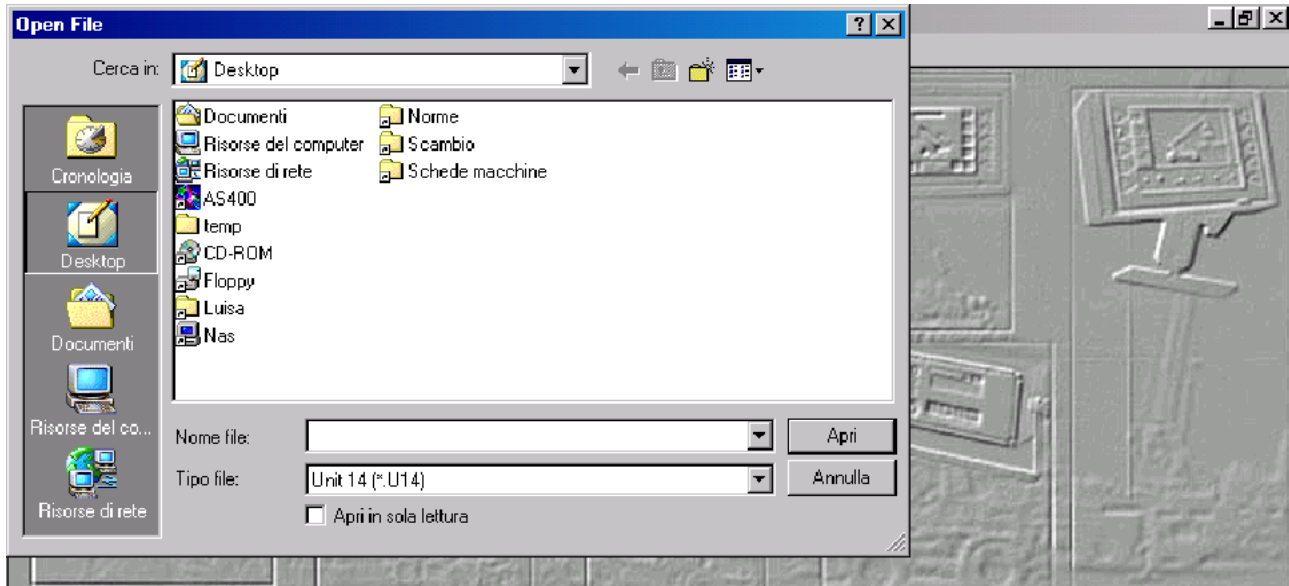

Choose the setting file you want to upload on the machine and press "Apri" (Open).
Save the setting as explained below:

DLE


- If you want to save the setting, contact the TEREXLIFT Service Centre to get more information and be registered as an authorised user of the system.
- To gain access to the parameters and variables, no password is needed. All you have to do is connecting the DLE display with the power cord supplied by TEREXLIFT (code 07.0736.0014) and proceed as explained below.
- Connect the DLE connecting cable to the electrical system of the machine - see Pict. 1.
- Connect the PC power cord to the DLE and the computer - see Pict. 2 – 3 – 4
- Turn the ignition key of the machine to position I "board ON" and launch the Winscope program (see Pict. 5). If this is the very first time you use the system, follow the instructions described from the first page of this document. If you want to upload or download the setting from/to the machine DLE, you need a password which must be asked to TEREXLIFT (to avoid any tampering with the system).
TEREXLIFT has also a database with all the values of the settings saved ordered by serial numbers which can be provided at any time for comparison purposes.

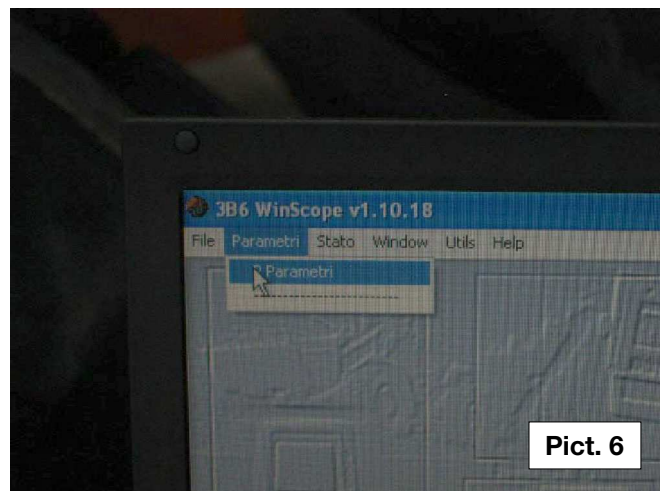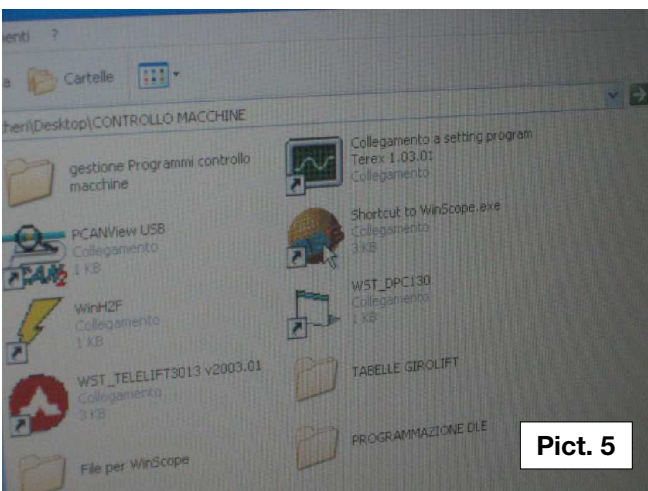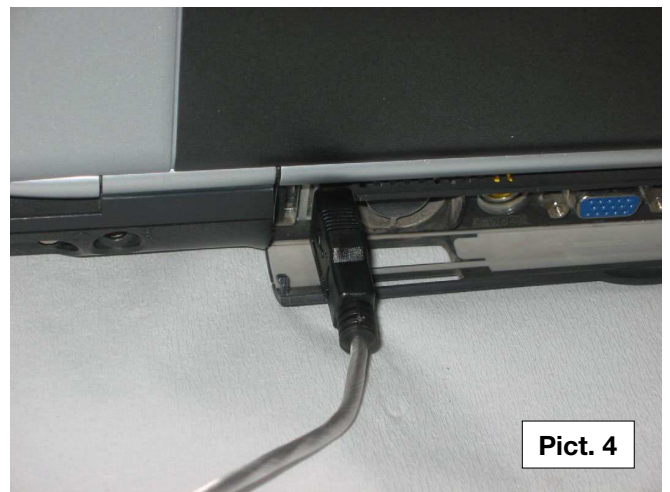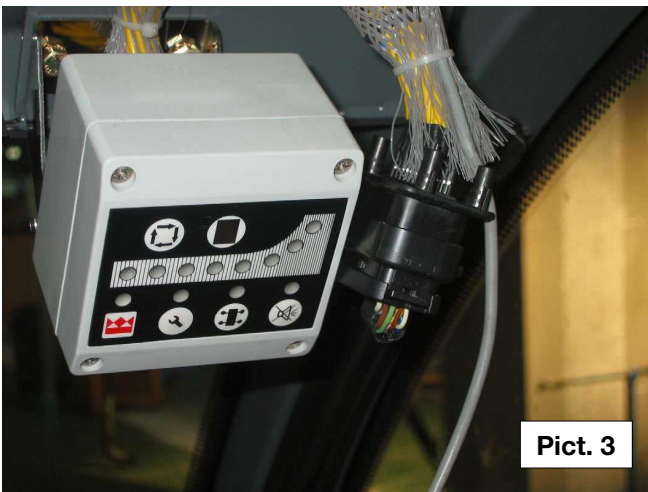


If you want to check the system parameters and variables, you have to open the relevant windows and check the values contained in these.

- Open the "parameters" windows as shown in Pict. 6.

A window appears (pict. 7) with the parameters within which the machine can work.

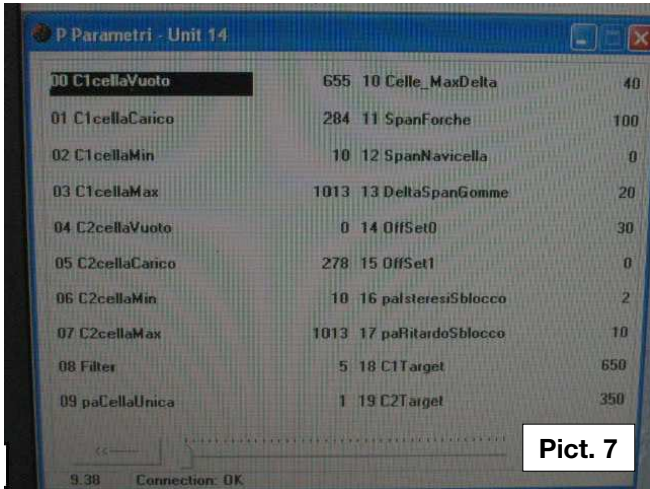


Pict. 7

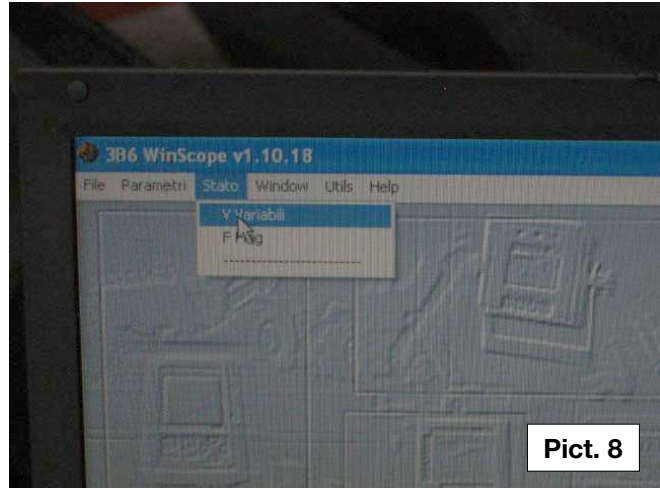

Pict. 8

If you want to check the variables on the machine, open the "variables" window as shown in picture 8. Clicking with the mouse, another window opens (see picture 9) which will display the real variations on the machine so you can compare the same with the parameters.

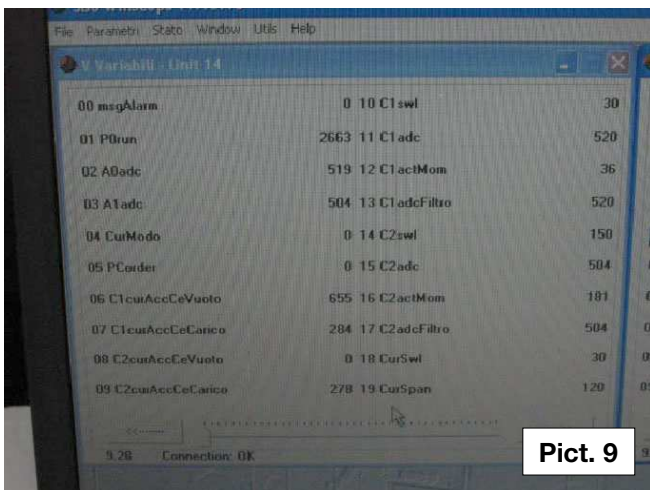


Pict. 9

If, during work, the variables keep within the limits set by the calibration parameters, the system is in efficient order; otherwise, an error message with the relevant identification code is displayed by the DLE.

LIST OF THE DLE PARAMETERS

N°	Winscope Name	Description
00	C1cellaVuoto	Value saved in analog channel 1 - calibration with unloaded machine (best setting around 700).
01	C1cellaCarico	Value saved in analog channel 1 - calibration with loaded machine (best setting around 300).
02	C1cellaMin	Min admissible value for analog channel 1 reading (if actual value is below: alarm 2) (value set at 10 roughly).
03	C1cellaMax	Max admissible value for analog channel 1 reading (if actual value is above: alarm 2) (value set at 1010).
04	C2cellaVuoto	Value save in analog channel 2 - calibration with unloaded machine (best setting around 300).
05	C2cellaCarico	Value save in analog channel 2 - calibration with loaded machine (best setting around 700).
06	C2cellaMin	Min admissible value for analog channel 1 reading (if actual value is below: alarm 3) (value set at 10 roughly).
07	C2cellaMax	Max admissible value for analog channel 1 reading (if actual value is above: alarm 3) (value set at 1010).
08	Filter	Number of filter samples, with mobile mean. Load cell reading . Max 5.
09	paCellaUnica	Sets to 1 automatically (during the machine selection) when the DLE is used in single channel mode.
10	Celle_MaxDelta	Max admissible delta between readings of analog channels 1 and 2, expressed as a %. Default value 10 (current 20).
11	SpanForche	Limiter intervention percentage in case of work with stabilised machine and forks. Default: 100 (as per calibration).
12	SpanNavicella	Limiter intervention percentage in case of work with stabilised machine and platform (changed by the relevant procedure during calibration). When the platform is selected, the limiter uses this % (default 110% - load increase of 10%) instead of the SpanForche datum (current value 125).
13	DeltaSpanGomme	Limiter intervention percentage in case of work with non-stabilised machine (changed by the relevant procedure during calibration). % value that adds to the calibration with forks and outriggers (SpanForche).
14	OffSet0	Command given to the digital potentiometer for cell 1 (value from 0 to 255) to set the reading scale during calibration with unloaded machine to a certain pre-set value (about 900 bit ADC - C1cellaVuoto) (about 700).
15	OffSet1	Command given to the digital potentiometer for cell 2 (value from 0 to 255) to set the reading scale during calibration with unloaded machine to a certain pre-set value (about 200 bit ADC - C2cellaVuoto) (about 300).
16	palsteresiSblocco	Load % for the reset of the movements once the block condition has been rectified (default 5% = 95%).
17	paRitardoSblocco	Value expressed in tenths of second corresponding to the time that must elapse between the block condition and the movement reset (default 10 = 1 second).
20	C1NavicellaVuoto	Parameters 20, 21, 22 and 23 are usually equivalent to parameters 0, 1, 4 and 5, and they are used when the platform must be calibrated regardless of the calibration done with the forks. Value saved in analog channel 1 during calibration with empty machine
21	C1NavicellaCarico	Value saved in analog channel 1 during calibration with loaded machine
22	C2NavicellaVuoto	Value saved in analog channel 2 during calibration with empty machine
23	C2NavicellaCarico	Value saved in analog channel 2 during calibration with loaded machine
24	CurMacchina	Machine selected on point "0" of the calibration
28	VersioneSW	Software version
29	WPsum	Parameters CHECKSUM used by the safety functions

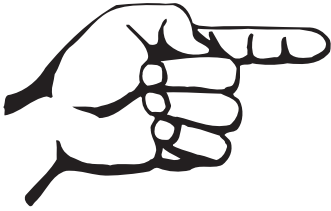

Intentionally blank page

Section 3

SCHEDULED MAINTENANCE INSPECTIONS

SECTION INDEX

3.1	Introduction	page	2
3.2	About this section		3
3.3	Maintenance table		4
3.4	Maintenance inspection report		8

3.1 INTRODUCTION



- *Maintenance inspections shall be completed by a person trained and qualified on the maintenance of this machine.*
- *Scheduled maintenance must be carried out at the intervals indicated in the MAINTENANCE REPORT.*

WARNING

Failure to properly complete each inspection when required may cause death, serious injury or substantial machine damage.

- *Immediately tag and remove from service a damaged or malfunctioning machine.*
- *Repair any machine damage or malfunction before operating machine.*

3.2 ABOUT THIS SECTION

Intervention times

Maintenance interventions have been divided into 6 different groups in relation to the time at which they must be carried out, say daily, weekly, monthly, every 6 months, yearly or every two years.

For ease of use, the service intervals have been grouped in different tables, as explained below:

Inspection	Table
Daily	A
Weekly	A+B
Monthly	A+B+C
Six month	A+B+C+D
Yearly	A+B+C+D+E
Two years	A+B+C+D+E+F

Maintenance table

The maintenance table contains general information on the type of intervention to be carried out at a certain interval.

For the explanation of the maintenance jobs to be done, please refer to chapter 4 "Maintenance Procedures".

Maintenance inspection report

The maintenance report summarises all of the interventions to be carried at a given interval and lets the maintenance technician note the result of the check or intervention carried out.

This card can be photocopied to be used at the different service intervals and to keep a trace of all interventions carried out.

5.3 MAINTENANCE TABLE

TABLE A

During the first 10 working hours:

A-1	Check the oil level within reduction gears, power divider and differential gears.
A-2	Check the tightening of the wheel bolts.
A-3	Check the tightening of all bolts and nuts.
A-4	Check the couplings for oil leaks.

Every 10 working hours or daily:

A-5	Inspect the Operator Manual.
A-6	Inspect the decals and placards.
A-7	Check the engine oil level.
A-8	Clean the air suction filter.
A-9	Check the engine coolant level.
A-10	Check and clean the radiator.
A-11	Check the hydraulic oil level in the tank.
A-12	Check the greasing of the boom section pads.
A-13	Grease the attachment holding frame.
A-14	Grease all joints of the boom, the rear axle shaft joint, the transmission shafts, the front and rear axles and any equipment of the machine.
A-15	Check the efficiency of the overload warning system.
A-16	Check the efficiency of the lighting electric system.
A-17	Check the efficiency of braking system and parking brake.
A-18	Check the efficiency of the steering selection system.
A-19	Check the efficiency of the fork balancing system.
A-20	Make sure the safety devices installed are in efficient working order.

TABLE B***Within the first 50 working hours:***

B-1 Change the engine oil and renew the fuel filter.

Every 50 working hours or weekly:

B-2 Check the tension of the alternator belt.

B-3 Check the tyre inflation.

B-4 Check the tightening of the wheel nuts.

B-5 Check the tightening of the cardan shaft screws.

B-6 Check the operation of the emergency pump (if it is installed).

B-7 Clean the radiator fins.

TABLE C***Within the first 100 working hours:***

C-1 Change the oil of the differential casing, the wheel reducer and the gearbox.

Every 250 working hours or monthly:

C-2 Change the engine oil and relevant filter.

C-3 Check the oil level in the front and rear differential gears.

C-4 Check the oil level in the four wheel reduction gears.

C-5 Check the main filtering element of the engine air filter. Replace, if necessary.

C-6 Check the clamping of the cableheads to the battery terminals.

C-7 Check the air suction hose between engine and filter.

C-8 Check the cylinder chromium-plated rods.

C-9 Check the hydraulic lines are not worn because of rubbing against the frame or other mechanical components.

C-10 Check the electric cables do not rub against the frame or other mechanical components.

C-11 Check the wear of the sliding pads of the boom sections.

C-12 Adjust the play of the sliding pads of the boom sections.

C-13 Remove any grease from the boom, then re-grease the sliding parts of the boom sections.

TABLE C

Every 250 working hours or monthly:

- | | |
|-------------|---|
| C-14 | Check the level of the battery electrolyte. |
| C-15 | Check the efficiency of the block valves. |

TABLE D

Every 500 working hours or every six months:

- | | |
|-------------|--|
| D-1 | Visually check the smoke quantity evacuated from the engine exhaust. |
| D-2 | Check the tightening of the engine fixing screws. |
| D-3 | Check the tightening of the cab fixing screws. |
| D-4 | Check the backlash between pins and bushings in all joints. |
| D-5 | Change the hydraulic oil filter of the transmission. |
| D-6 | Change the hydraulic oil filter in the tank. |
| D-7 | Have the hydraulic system checked by a skilled technician. |
| D-8 | Change the main cartridge of the engine air filter. |
| D-9 | Renew the cartridge of the engine oil filter and the fuel filter. |
| D-10 | Change the oil of the front and rear differential casings. |

TABLE E

Every 1000 working hours or yearly:

- | | |
|------------|---|
| E-1 | Change the safety element of engine air filter. |
| E-2 | Change the oil of the gearbox. |
| E-3 | Change the oil in the four wheel reduction gears. |
| E-4 | Change the hydraulic oil. |

TABLE F

Every 2000 working hours or every two years:

F-1 Change the engine coolant.

5.4 MAINTENANCE INSPECTION REPORT

Model
Serial number
Date
Hour meter
Machine owner
Inspected by
Inspector signature
Inspector title
Inspector company

Instructions:

- Make copies of this page to use for each inspection.
- Select the appropriate checklist(s) for the type of inspection to be performed.

<input type="checkbox"/>	Every 10 hours: A
<input type="checkbox"/>	Every 50 hours: A+B
<input type="checkbox"/>	Every 250 hours: A+B+C
<input type="checkbox"/>	Every 500 hours: A+B+C+D
<input type="checkbox"/>	Every 1000 hours: A+B+C+D+E
<input type="checkbox"/>	Every 2000 hours: A+B+C+D+E+F

- Place a check in the appropriate box after each inspection procedure is completed.
- Use the maintenance tables in this section and the step-by-step procedures in section 4 to learn how to perform these inspection.
- If any inspection receives an "N", tag and remove the machine from service, repair and re-inspect it. After repair, place a check in the "R" box.

Legend:

Y = yes, acceptable
 N = no, remove from service
 R = repaired.

Table A		Y	N	R
During the first 10 working hours:				
A-1	Oil level within reduction gears, power divider and differential gears.			
A-2	Tightening of the wheel bolts.			
A-3	Tightening of all bolts and nuts.			
A-4	Check the couplings for oil leaks.			

Every 10 working hours:				
A-5	Operator Manual.			
A-6	Decals and placards.			
A-7	Engine oil level.			
A-8	Air suction filter.			
A-9	Engine coolant level.			
A-10	Radiator.			
A-11	Hydraulic oil level in the tank.			
A-12	Check the greasing of the boom section pads.			
A-13	Grease the attachment holding frame.			
A-14	Grease all joints of the boom, the rear axle shaft joint, the transmission shafts, the front and rear axles and any equipment of the machine.			
A-15	Efficiency of the overload warning system.			
A-16	Lighting electric system.			
A-17	Efficiency of braking system and parking brake.			
A-18	Steering selection system.			
A-19	Fork balancing system.			
A-20	Safety devices.			

Table B		Y	N	R
Within the first 50 working hours:				
B-1	Change the engine oil and renew the fuel filter.			
Every 50 working hours :				
B-2	Alternator belt.			
B-3	Tyre inflation.			
B-4	Tightening of the wheel nuts.			
B-5	Tightening of the cardan shaft screws.			
B-6	Emergency pump.			
B-7	Radiator fins.			

Table C		Y	N	R
Within the first 100 working hours:				
C-1	Oil of the differential casing, the wheel reducer and the gearbox.			

Every 250 working hours :				
C-2	Engine oil and relevant filter.			
C-3	Oil level in the differential gears.			
C-4	Oil level in the wheel reduction gears.			
C-5	Main filtering element of the engine air filter.			
C-6	Clamping of the cableheads to the battery terminals.			
C-7	Air suction hose between engine and filter.			
C-8	Cylinder chromium-plated rods.			
C-9	Hydraulic lines.			
C-10	Check the electric cables do not rub against the frame or other mechanical components.			
C-11	Wear of the sliding pads of the boom sections.			
C-12	Play of sliding pads.			
C-13	Sliding parts of the boom sections.			
C-14	Level of the battery electrolyte.			
C-15	Block valves.			

Table D		Y	N	R
Every 500 working hours:				
D-1	Smoke quantity evacuated from the engine exhaust.			
D-2	Tightening of the engine fixing screws.			
D-3	Tightening of the cab fixing screws.			
D-4	Backlash between pins and bushings.			
D-5	Hydraulic oil filter of the transmission.			
D-6	Hydraulic oil filter in the tank.			
D-7	Check the hydraulic system.			
D-8	Main cartridge of the engine air filter.			
D-9	Cartridge of the engine oil filter and the fuel filter.			
D-10	Oil of the differential casings.			

Table E		Y	N	R
Every 1000 working hours:				
E-1	Safety element of engine air filter.			
E-2	Oil of the gearbox.			
E-3	Oil in the wheel reduction gears.			
E-4	Hydraulic oil.			

Table F		Y	N	R
Every 2000 working hours:				
F-1	Change the engine coolant.			

Section 4

SCHEDULED MAINTENANCE PROCEDURES

SECTION INDEX

4.1	Introduction	page	2
4.2	About this section		3
4.3	TABLE A procedures		3
4.4	TABLE B procedures		23
4.5	TABLE C procedures		29
4.6	TABLE D procedures		43
4.7	TABLE E procedures		50
4.8	TABLE F procedures		53

4.1 INTRODUCTION



- *Maintenance inspections shall be completed by a person trained and qualified on the maintenance of this machine.*
- *Scheduled maintenance must be carried out at the intervals indicated in the MAINTENANCE REPORT.*

WARNING

Failure to properly complete each inspection when required may cause death, serious injury or substantial machine damage.

- *Immediately tag and remove from service a damaged or malfunctioning machine.*
- *Repair any machine damage or malfunction before operating machine.*
- *Unless otherwise specified, perform each procedure with the machine in the following configuration:*
 - *machine parked on a flat level surface;*
 - *boom in the stowed position;*
 - *key switch in the OFF position with the key removed.*

4.2 ABOUT THIS SECTION

This section describes the maintenance interventions to be carried out on the machine according to the indications of the maintenance inspection report (see chapter 3).

Safety symbols:



Draws the attention to situations that involve your own as well as the others' safety and that can result in serious or lethal injury.

⚠ DANGER

Draws the attention to situations that involve your own as well as the others' safety and that can result in serious or lethal injury.

⚠ WARNING

Draws the attention either to situations that involve your own as well as the others' safety and that can result in minor or moderate injury or to situations that involve the machine efficiency.

⚠ CAUTION

Draws the attention either to situations that involve your own as well as the others' safety and that can result in minor or moderate injury or to situations that involve the machine efficiency.

CAUTION

Draws the attention to important technical information or practical advice that allows for a safer and more efficient use of the machine.

NOTICE

Draws the attention to important environment-related information.

4.3 TABLE A PROCEDURES

A-1 CHECK THE OIL LEVEL WITHIN REDUCTION GEARS, POWER DIVIDER AND DIFFERENTIAL GEARS

To check the oil level within the **wheel reduction gears**:

- Stop the machine on a level ground and ensure the parking brake is engaged and plug **A** finds on the horizontal axis.
- Clean the plug all around, then remove it and check if oil is level with the hole.
- If necessary, add new oil through hole **A** until it is level.
- Refit the plug.

To check the oil level in the **front and rear differential gears**:



- Stop the machine on a level ground and engage the parking brake.
- Loosen level plug **A** and check if oil is level with the hole.
- If necessary, top-up through hole **B** until oil comes out from hole **A**.
- Refit and tighten plugs **A** and **B**.

NOTICE

Place a container of suitable size under the plug.

NOTICE

Place a container of suitable size under the plug.

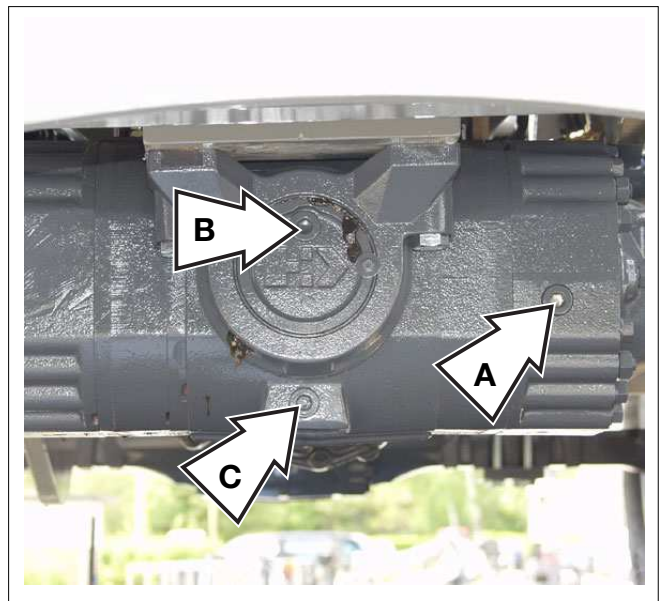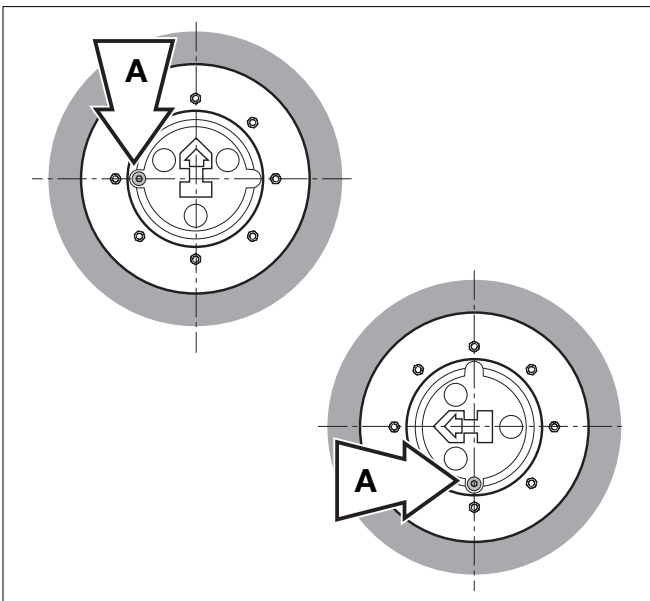


A-2 CHECK THE TIGHTENING OF THE WHEEL BOLTS

If you have to check the tightening of the wheel bolts or replace a wheel, proceed as follows:

- Raise the machine by lowering one outrigger to the ground or with a hydraulic jack.
- Remove the wheel rolling it on the ground
- Line up the wheel with the axle and fit the 8 nuts.
- Tighten the nuts following the alternate sequence shown in the picture with a pneumatic screwdriving machine.
- Raise the outrigger and lower the machine to the ground.

Re-tighten all nuts to a torque 440 Nm.

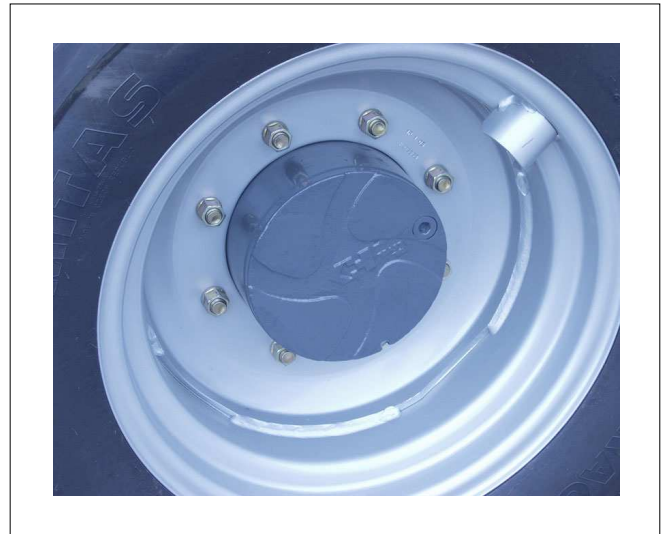


⚠WARNING

Check the tightening of wheels one hour after the job. They might get loose until they do not stay correct.

⚠WARNING

On new machines, and when a wheel has been disassembled or replaced, check the nut torque of the wheels every 2 hours until they stay correct.

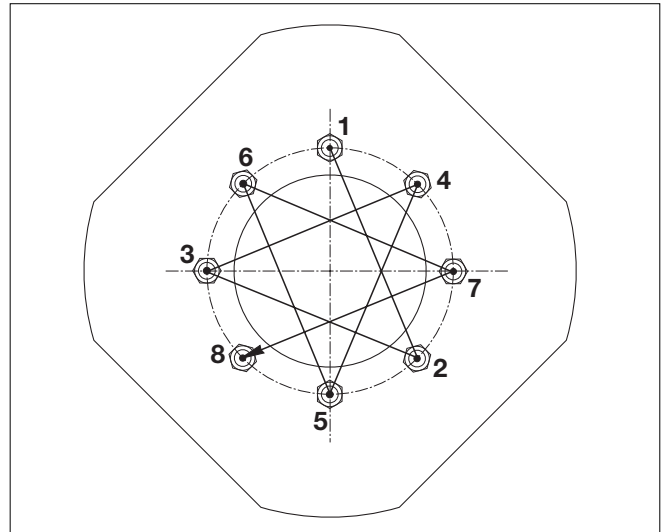

⚠WARNING

Always use tyres having the dimensions indicated in the vehicle registration card.

	STANDARD	OPTIONAL		
		Telelift 3713 Elite		Telelift 4017-4514
Dimensions (front and rear)	400/70-20	400/80-24	18-19.5	405/70-24
P.R. (or load index)	14 pr	153B	16	14 pr / 151 D
Rim	13 x 20	13x24	13x19.5	13x24
Wheel disc	8 holes DIN 70361			
Pressure bar/Psi	4/58	4.25/61.6	4.5/65.2	4.25/61.6

A-3 CHECK THE TIGHTENING OF ALL BOLTS AND NUTS

Before starting your daily work, proceed with a random check of the bolts.

For the correct tightening torques, please refer to par. 2.13 in section 2 "Technical Specifications".

A-4 CHECK THE COUPLINGS FOR OIL LEAKS

Before starting your work, do a walk-around inspection and check for oil leaks.

If you find them, rectify before starting using the machine.

A-5 INSPECT THE OPERATOR MANUAL

Maintaining the operator manual in good condition is essential to safe machine operation.

Manual are included with each machine and should be stored in the cab. An illegible or missing manual will not provide safety and operational information necessary for a safe operating condition.

In particular:

- check to be sure the storage container is in good condition.
- check to make sure that the operator manual are present, complete and in the storage container in the cab.
- examine the pages of each manual to be sure that they are legible and in good condition.
- always return the manual to the storage container after use.

CAUTION

Contact Terexlift Service Centre if replacement manuals are needed.

A-6 INSPECT THE DECALS AND PLACARDS

Maintaining all of safety and instructional decals and placards in good condition is mandatory for safe machine operation. Decals alert operators and personnel to the many possible hazards associated with using this machine.

An illegible decal will fail to alert personnel of a procedure or hazard and could result in unsafe operating conditions.

- refer to the "labels and warning plates applied on the machine" section in the Operator Manual and use the decal list and illustrations to determine that all decals and placards are in place.
- inspect all decals for legibility and damage. Replace any damaged or illegible decal immediately.

CAUTION

Contact Terexlift Service Centre if replacement decals are needed.

A-7 CHECK THE ENGINE OIL LEVEL**CAUTION**

For the engine maintenance, please refer to the specific Operator handbook supplied with the machine.

A-8 CLEAN THE AIR SUCTION FILTER

Clean the engine air filter every 10 hours:


- Stop the engine and engage the parking brake.
- Unscrew wingnut **A** and remove cover **B**.
- Unscrew wingnut **C** and remove the outer element **D**.
- Clean the filter bowl.
- Dry clean the cartridge (max. pressure: 6 bar) and direct the air jet from inside to outside.
- Check for cracks in the filtering element by introducing a lamp inside.
- Smear the seal with grease, then refit the element.
- Tighten wingnut **C**, close cover **B** and tighten with wingnut **A**.

⚠WARNING

As soon as the warning lamp on the cab dashboard switches on, replace the outer element.

⚠WARNING

*Daily remove any dust collected in the filter by pressing the rubber cap **E**.*

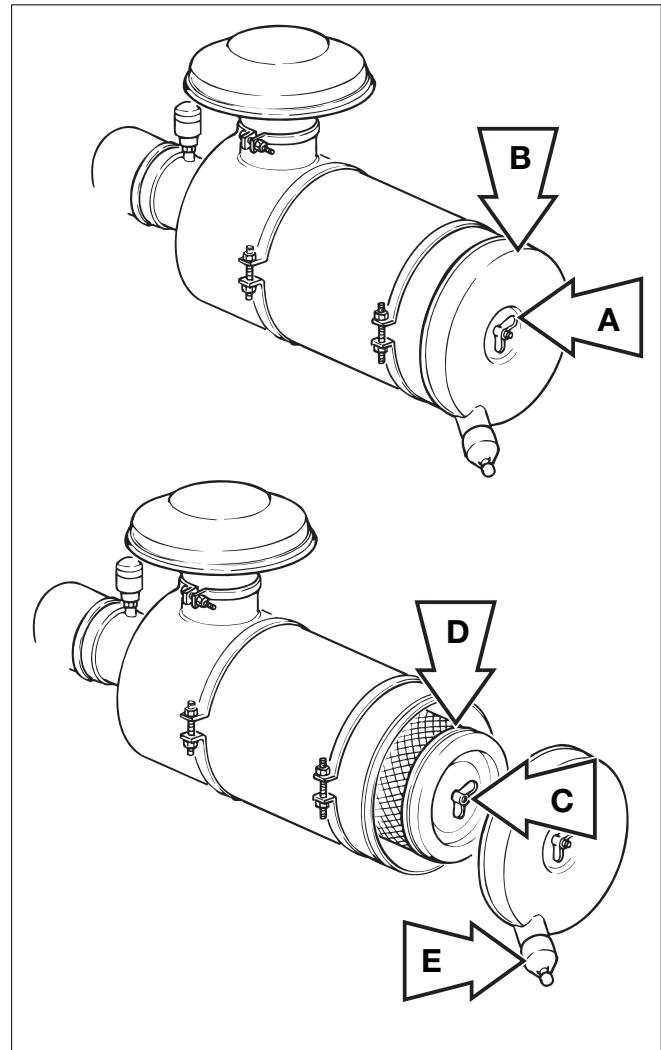

A-9 CHECK THE ENGINE COOLANT LEVEL




⚠ DANGER

When the coolant is hot, the cooling system is under pressure. With warm engine, loosen the radiator plug slowly and carefully, without removing it, to drain the pressure. Use protection gloves and keep your face at a safe distance.

- Weekly check the coolant level within pan **A** before starting working (when coolant is cold).
- When necessary, add clean water or an antifreeze mixture through cap **B**.
- Change the antifreeze mixture every two years.

To drain the antifreeze:

- Let the engine cool down.
- Unscrew the plug at the bottom of the radiator or disconnect the rubber hose, if no plug is present. Allow the coolant to flow out into a special container.
- Refit the hose and pour new antifreeze (50% water-antifreeze). This proportion will provide protection up to -38°C.

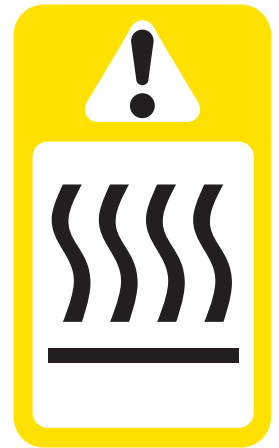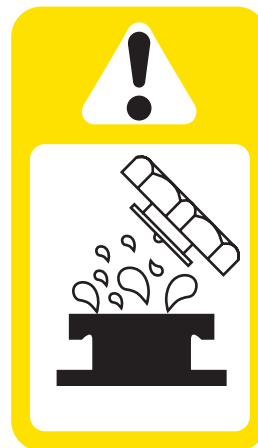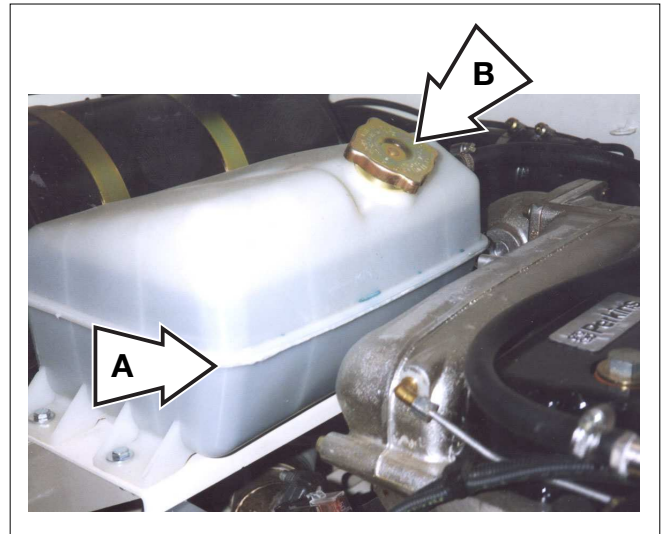

A-10 CHECK AND CLEAN THE RADIATOR**⚠ DANGER**

When using a steam-washer, always wear protective clothes. Hot steam may cause serious injury.

- Open the radiator panel.
- Check the fins of radiator for sediments.
- If necessary, prepare a compressed air nozzle (max. 2 bar) or a nozzle distributing water under pressure or steam.

Cleaning using compressed air

- Direct a jet of compressed air toward radiator paying attention not to damage its fins.
- Remove any loose particles of dirt with some water.

Cleaning using water under pressure or steam

- Spray radiator with a cold commercial detergent and wait for at least 10 minutes to allow the detergent to react.
- Wash radiator using a jet of water or steam.

**CAUTION**

The core fouling depends on the dust of the outside environment and the presence of oil and fuel leaks in the motor area. It is therefore advisable to remove oil and fuel leaks immediately in case of very dusty environments.

A-11 CHECK THE HYDRAULIC OIL LEVEL IN THE TANK**⚠ DANGER**


Fine jets of hydraulic oil under pressure can penetrate the skin. Do not use your fingers, but a piece of cardboard to detect oil leaks.

Check the hydraulic oil level (visually) through the special level **A** fitted into the tank.

When necessary, add new oil through filler **B**.

NOTICE

The handling and disposing of used oils can be ruled by local or national regulations. Address to authorised centres.

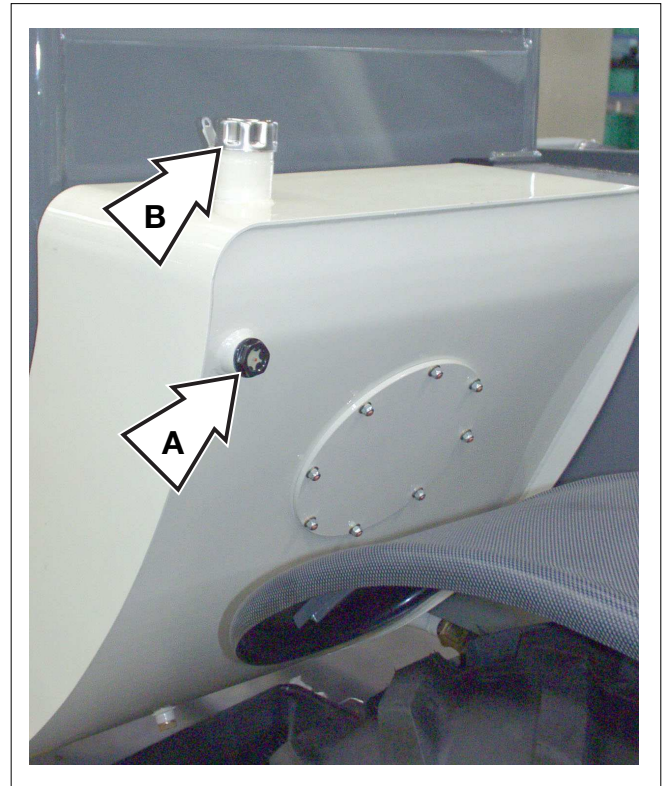

A-12 CHECK THE GREASING OF THE BOOM SECTION PADS

Any boom section is fitted with adjustable pads located on the four sides of the profile. These pads are secured to both fixed and mobile part of every section.


At regular intervals, check that the telescopes are well greased in correspondence of the sliding pads.

If necessary, scrape off the old grease and brush new grease. We recommend using:

- **INTERFLON grease FIN GREASE LS 2**

CAUTION

Avoid mixing greases of different type or features and do not use greases of lower quality.

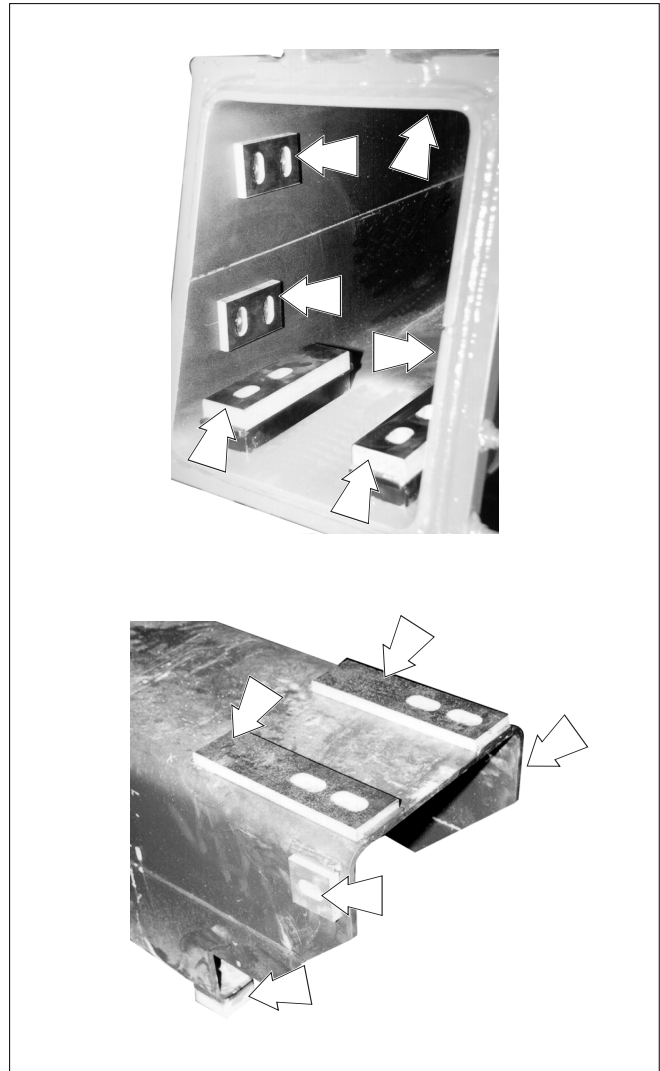

A-13 GREASE THE ATTACHMENT HOLDING FRAME**CAUTION**


Before use grease, thoroughly clean the intervention zone to avoid that mud, dust or other matters can mix with the lubricant and reduce or annihilate the lubrication effect.

Remove any old grease with a degreaser from the telescopes before smearing them with new grease.

Smear pin **A** with grease to help the forks slide on it.

Recommended grease:

- **AGIP graphitized grease type GR NG 3**

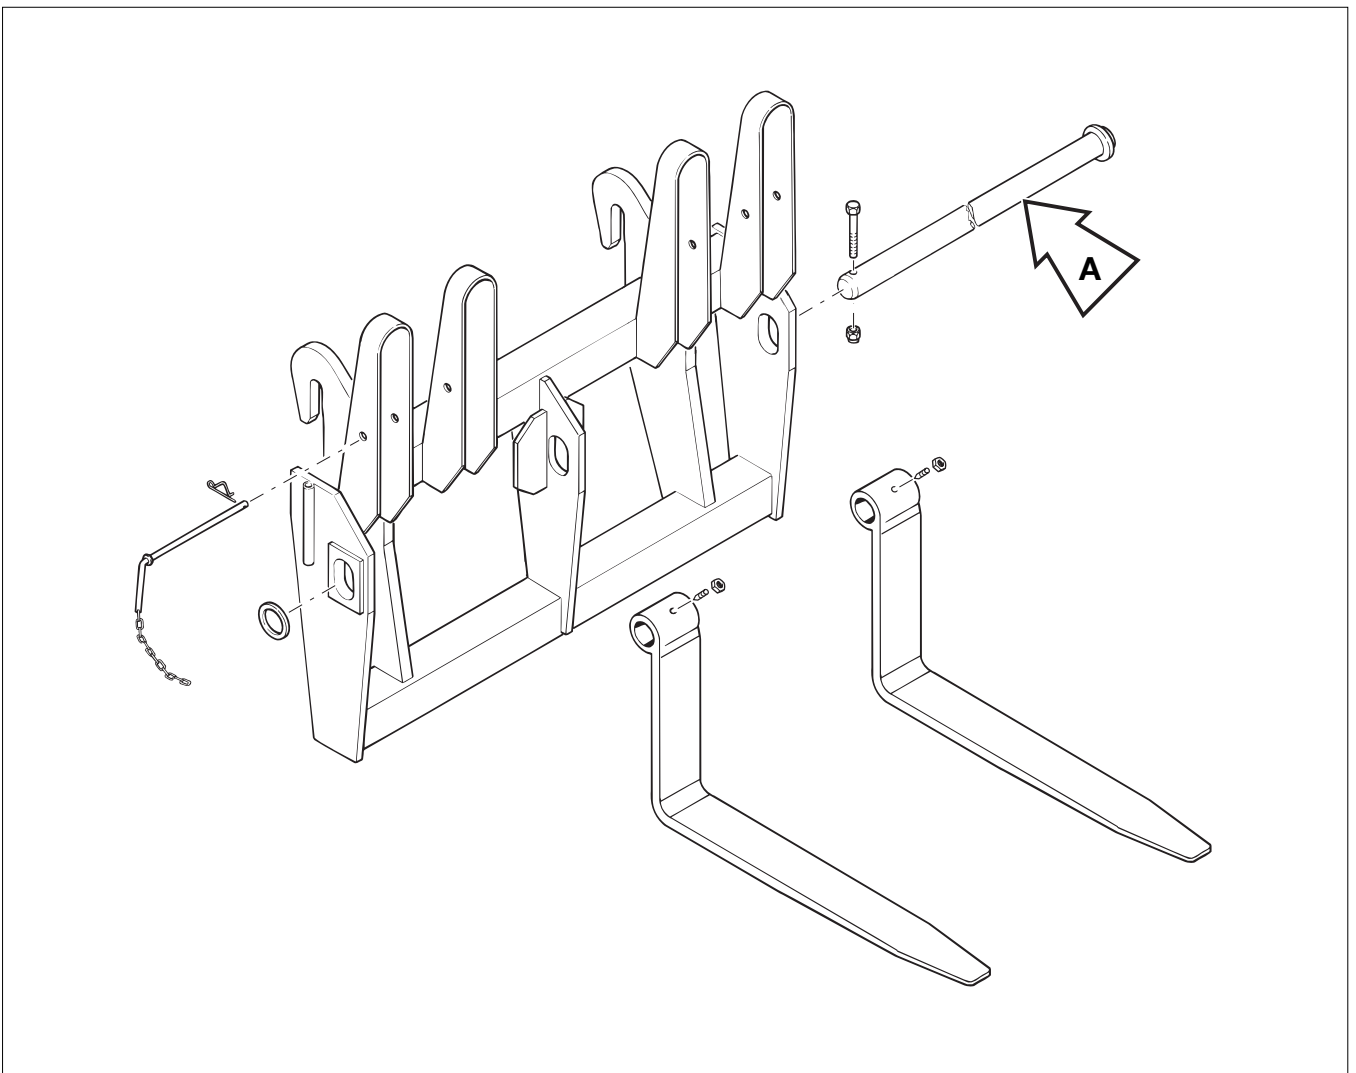

A-14 GREASE ALL JOINTS OF THE BOOM, THE REAR AXLE SHAFT JOINT, THE TRANSMISSION SHAFTS, THE FRONT AND REAR AXLES AND ANY EQUIPMENT OF THE MACHINE

CAUTION

Before injecting grease into the greasers, thoroughly clean them to avoid that mud, dust or other matters can mix with the lubricant and reduce or annihilate the lubrication effect.



Remove any old grease with a degreaser from the telescopes before smearing them with new grease.




Regularly grease the machine to grant it efficient conditions and a long life.

By means of a pump, inject grease into the special greasers.

As the fresh grease comes out, stop the operation.

The greasing points are shown in the following figures:

- the symbol  represents the points to be greased by a pump
- the symbol  represents the points to be greased by a brush

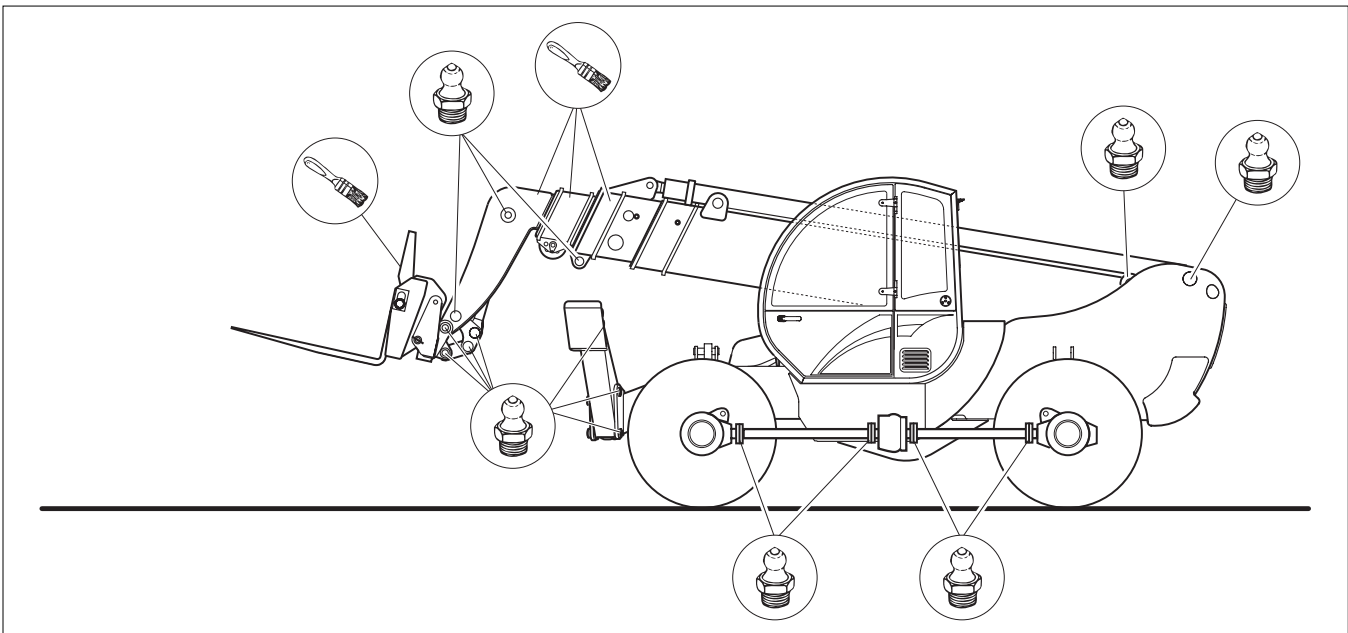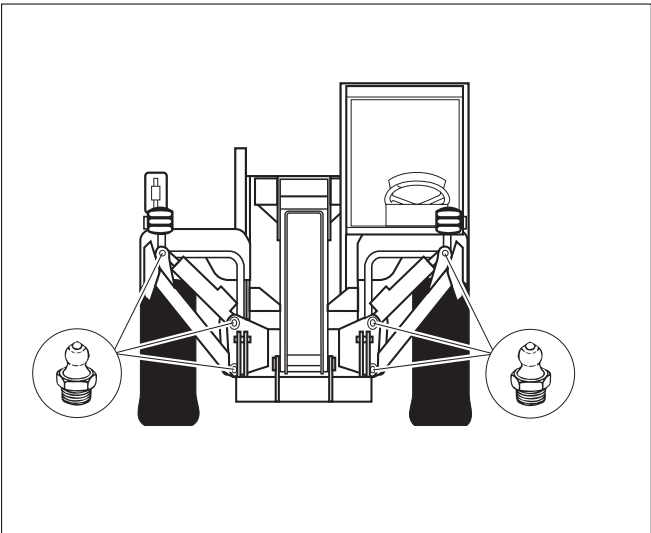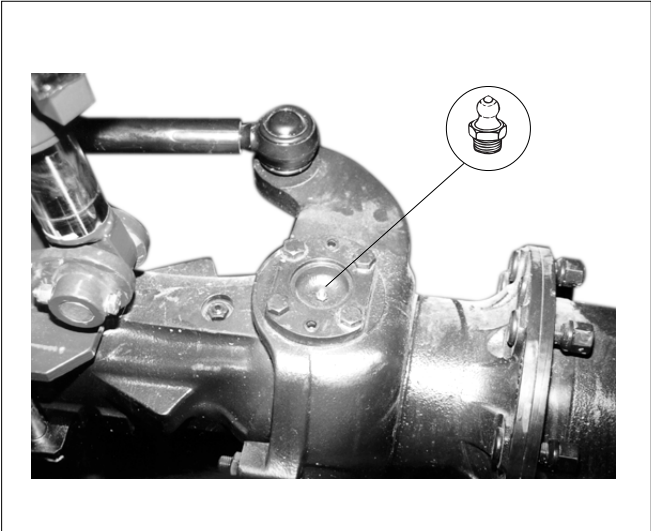

A-15 CHECK THE EFFICIENCY OF THE OVERLOAD WARNING SYSTEM


When power is turned on, the DLE load limiting system runs a self-test. In the case of troubles, LED's **5**, **8** and **10** start flashing, the buzzer sounds, an error code is shown on the display and the machine enters the alarm mode and cannot be operated.

The meaning of the error messages is shown in Section **2**.

To do a manual check, it will be enough to load a weight exceeding the maximum permitted with the boom fully out and attempt to lift it. The system shall enter in alarm.

CAUTION

If the system does not warn of the alarm, please contact the TEREXLIFT Service Centre.

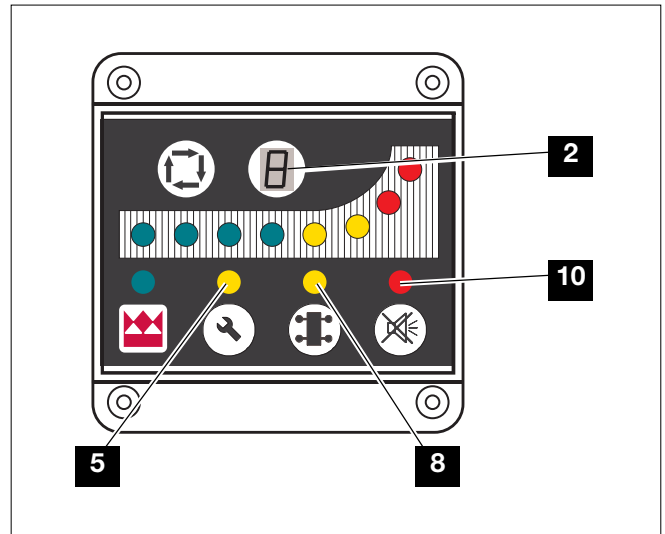

A-16 CHECK THE EFFICIENCY OF THE LIGHTING ELECTRIC SYSTEM

Check every day that the electrical system powering the lights of the machine is in efficient working order. Use the assistance of a second technician to check that the front lights **A** (position lights, low and high beams and turn signals) and the rear lights **B** (position lights, stop/tail lights and turn signals) are in excellent state of repair.

Also check beacon **C** located on the cab roof.

If one lamp or more must be replaced, use the table below as a reference.


⚠ WARNING

When switched on, lamps get hot. Before touching a lamp with your fingers, let it cool down.

⚠ CAUTION

Never touch the bulb of halogen lamps (mount type H3) with your fingers: this may damage the lamp (use of a clean cloth or a paper tissue). If you touch it accidentally, thoroughly clean with a paper tissue and some ethyl alcohol.

Use	Voltage	Mount type	Power
• Front low/high beam	12 V	P45t	45/40 W
• Front position lights	12 V	BA 9s	3 W
• Side/tail turn signals	12 V	BA 15s	21 W
• Stop lights and rear position lights	12 V	BAY 15d	21/5 W
• Beacon - Work lights (OPTIONAL)	12 V	H3	55 W
• Dashboard indicators and cab lighting	12 V	W 2x4,6d	1,2 W
• Interior lamp	12 V	SV 8,5-8	5 W
• License plate lights	12 V	BA 15s	5 W
• Back-up lamps	12 V	BA 15s	21W

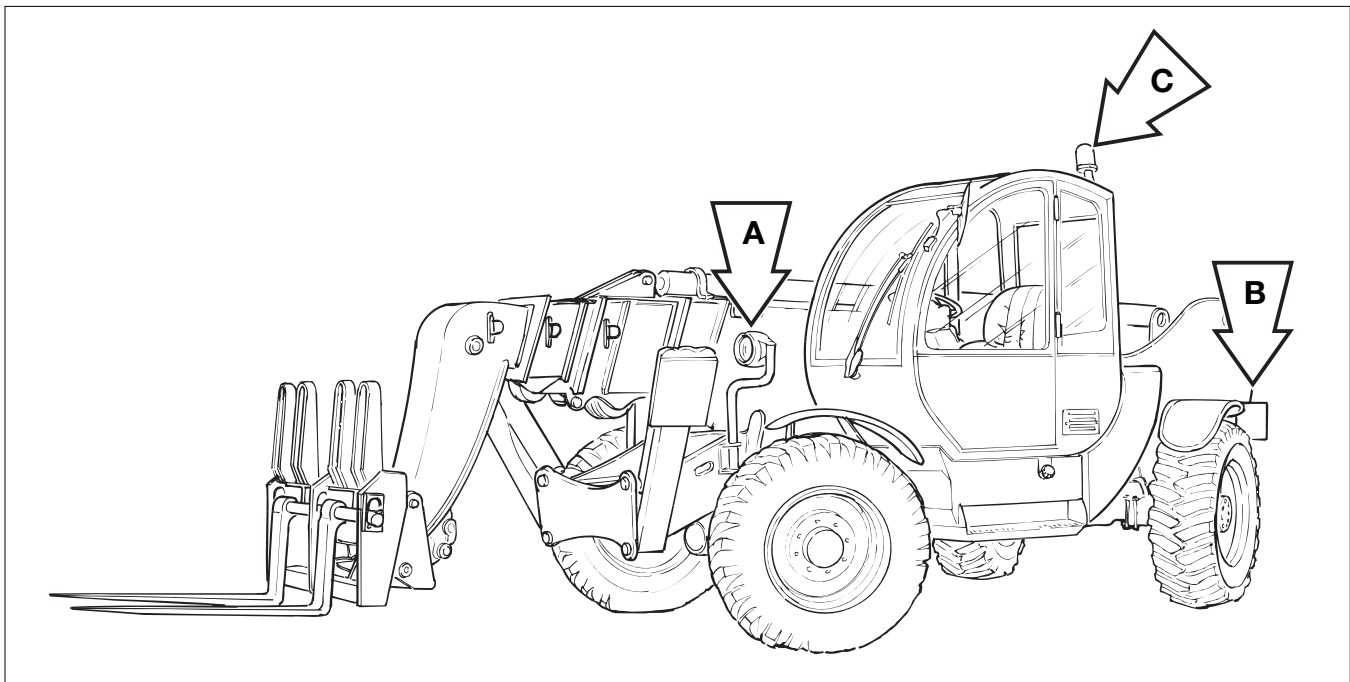

A-17 CHECK THE EFFICIENCY OF BRAKING SYSTEM AND PARKING BRAKE

For any intervention on the braking system (adjustment and/or substitution of the brake discs) address to the TEREXLIFT Technical Service Centre or the nearest TEREXLIFT authorised workshop.

Only for Telelift 4017-4514

The malfunctioning of the braking system may depend on the presence of air within the hydraulic circuit.

The braking system has some valves to bleed the air in the circuit.

There are 2 valves per side on the front axle to bleed the service brake and the parking brake circuits, and other 2 valves (one per side) on the rear axle to bleed the service brake circuit.




Valve **B** is used for the service brake circuit; valve **A** for the negative parking brake circuit.

To bleed the circuit of the service brake:

- Step on the brake pedal repeatedly.
- Slowly unscrew valve **B** and re-close it as soon as oil mixed with air bubbles comes out.
- Repeat the operation until bubble-free oil comes out.

To bleed the circuit of the negative parking brake:

- Pull the brake lever **C** to engage the brake and start bleeding operating valve **A** until bubble-free oil starts flowing out.
- Repeat the same procedure for both sides of the axles.

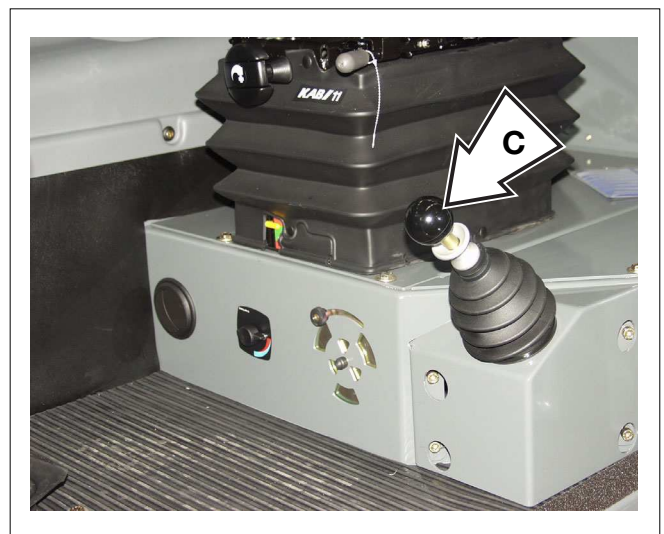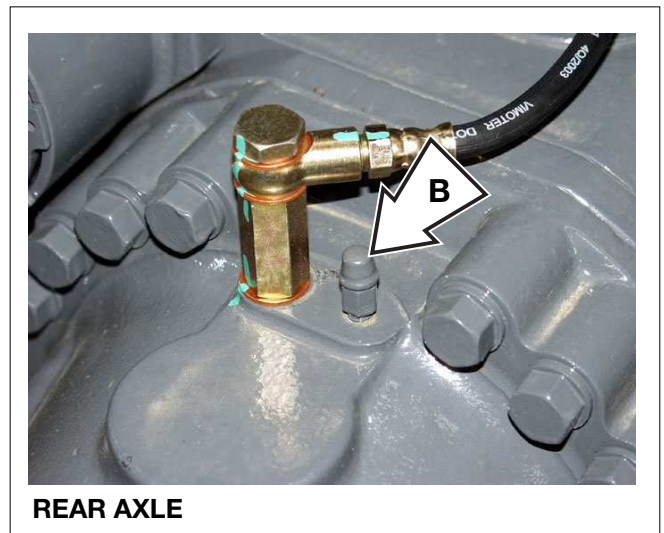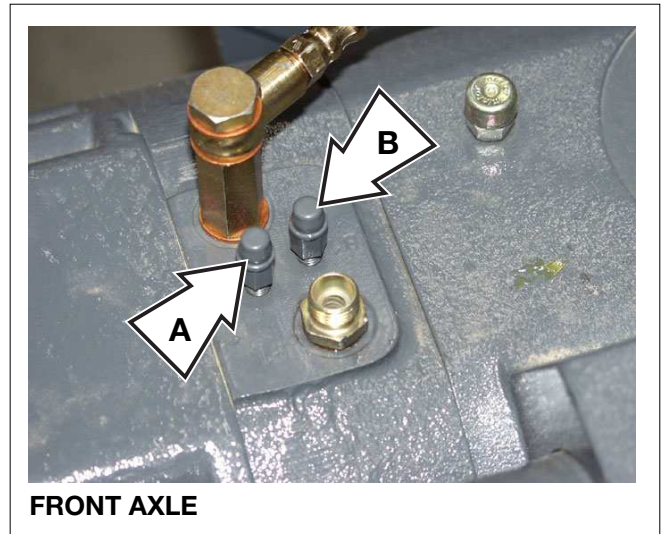



A-18 CHECK THE EFFICIENCY OF THE STEERING SELECTION SYSTEM

During operation, the alignment of the front and rear axles of the machine can be subject to variations. This can depend on an oil blow-by from the steering control circuit, or on a steering of both axles when front and rear wheels are not perfectly aligned.

To fix this problem, rather than checking the alignment visually, follow the procedure below:

- 1) Move to a solid and level ground
- 2) Set the steering selection switch **12** to “*four-wheel steer*” (pos. **2**)
- 3) Rotate the steering up to its stop (either to the right or to the left)
- 4) Set the steering selection switch to “*two-wheel steer*” (pos. **0**)
- 5) Rotate the steering up to its stop (turn in the same direction as above)
- 6) Reset the steering selection switch to “*four-wheel steer*” (pos. **2**)
- 7) Rotate the steering (to the side opposite to point 3) so that the rear axle reaches its stop
- 8) Reset the steering selection switch to “*two-wheel steer*” (pos. **0**)
- 9) Rotate the steering (to the same side as in point 7) so that the front axle reaches its stop
- 10) Reset the steering selection switch to “*four-wheel steer*” (pos. **2**)

Now the wheels should be re-aligned.

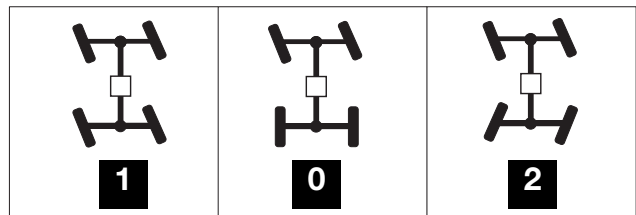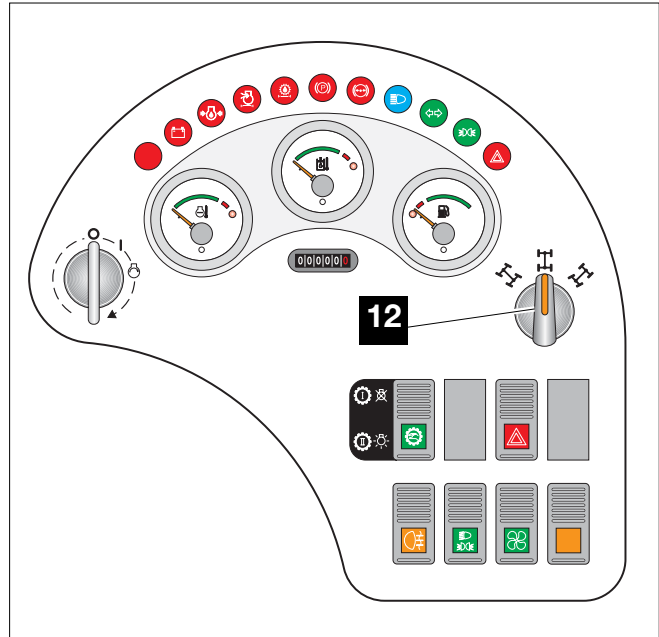

**A-19 CHECK THE EFFICIENCY OF THE FORK
BALANCING SYSTEM****⚠ WARNING**


Test the system without any load on the machine's forks.

To check the efficiency of the fork balancing system, obey the instructions below:

- Drive the machine to a flat, smooth ground.
- Move the retracted boom fully down and align the forks with the ground.
- Start lifting the boom and check that the forks remain parallel to the ground.

CAUTION


If the forks do not remain parallel to the ground, consult section 5 "Problems - causes - Solutions".

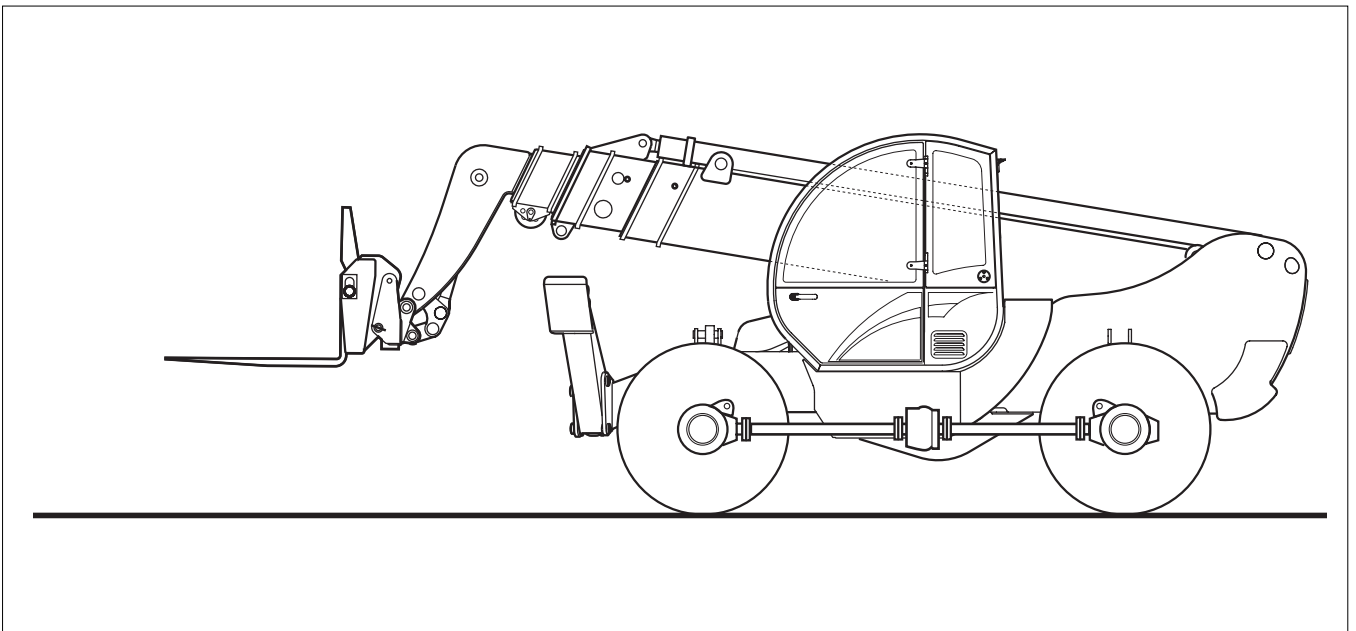

A-20 MAKE SURE THE SAFETY DEVICES INSTALLED ARE IN EFFICIENT WORKING ORDER


■ **Checking the emergency stop pushbutton** (at every use)

To check the efficiency of this pushbutton, simply press it down during a movement. The pressure of the pushbutton shall cause the movement to stop and the engine to shut down.

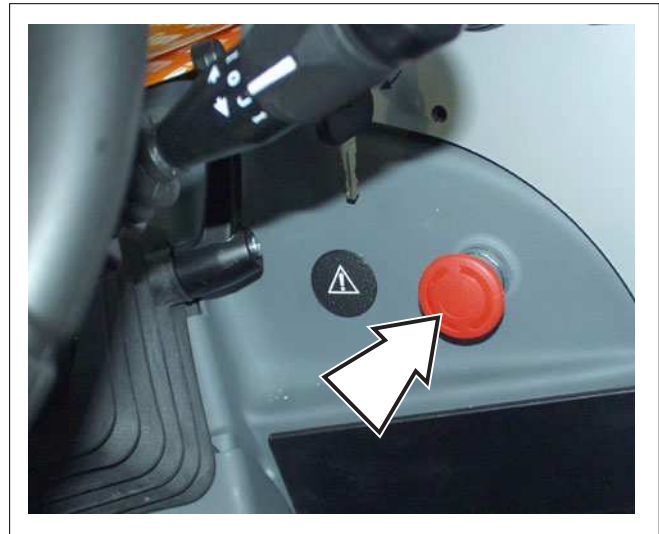

■ **Checking the joystick pushbutton** (at every use)

To check if the pushbutton on the control lever is in efficient working order, it will be enough to attempt to operate the lever without pressing this button. In this condition, the lever shall not operate any movement. Should that not be the case, contact the TEREXLIFT Technical Service.

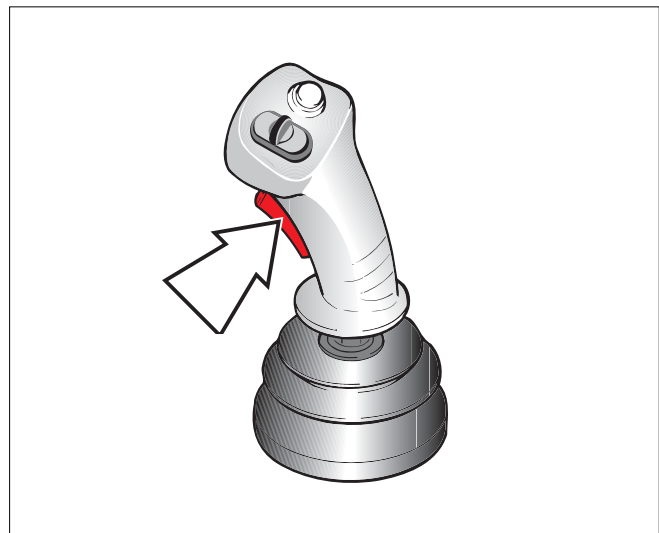


■ **Checking the limit switches of the outriggers** (at every use)

To check the limit switches of the outriggers:

- Lower the outriggers to the ground and attempt to engage a gear. If the gear can be engaged, contact the Terexlift Technical Service Centre.

Proceed on one outrigger at a time.

- With the outriggers up, light 8 on the load limiter panel must be off; with the outriggers down to the ground, the same light must be on. Should it not be the case, contact the Terexlift Technical Service.

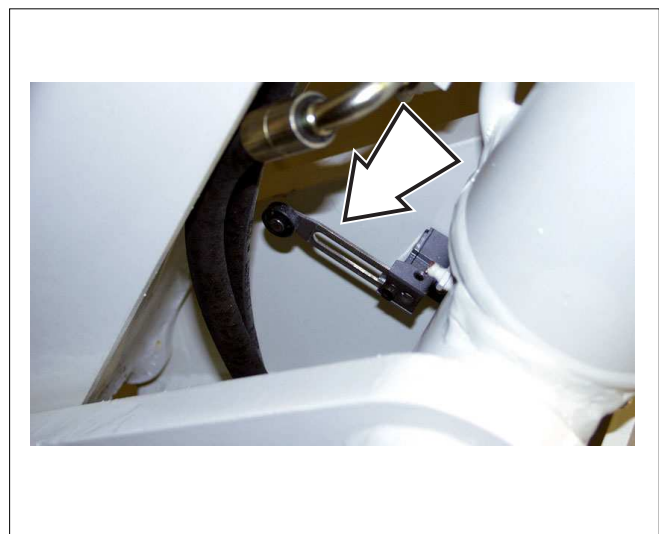

■ **Checking the proximity switches** (at every use)



Sensor L on the boom (only Telelift 4017-4514)

- Raise and tilt the boom more than 40° and check if the axle is blocked.
 Should this not be the case, contact the Terexlift Technical Service Centre.

Sensor M on the boom

- Raise the boom beyond the horizontal and ensure the sway control and the outrigger control are blocked.
 Should this not be the case, contact the Terexlift Technical Service Centre.

If the trouble does not depend on the sensor adjustment, contact the Terexlift Technical Service Centre.

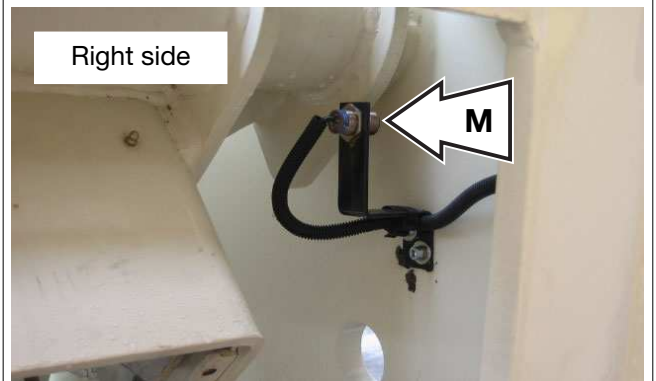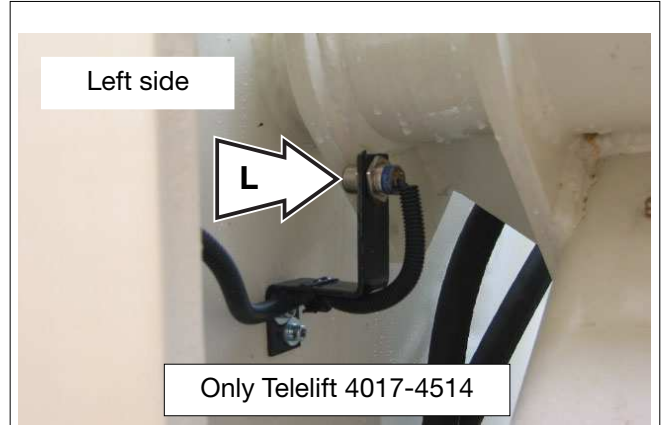

■ **Checking the pressure switch N on the parking brake (Telelift 4017-4514)** (at every use)

To check the efficiency of the pressure switch on the parking brake, proceed as follows:


- Sit on the driving place, put the parking brake and attempt to move with the machine. The machine must stand still.
 Should this not be the case, contact the Terexlift Technical Service Centre.



■ **Checking the microswitch O on the parking brake (Telelift 3713 Elite)** (at every use)

To check the efficiency of the microswitch on the parking brake, proceed as follows:

- Sit on the driving place and attempt to start the machine without engaging the brake. The machine must not move. Should this not be the case, adjust the distance of the brake microswitch or replace it.

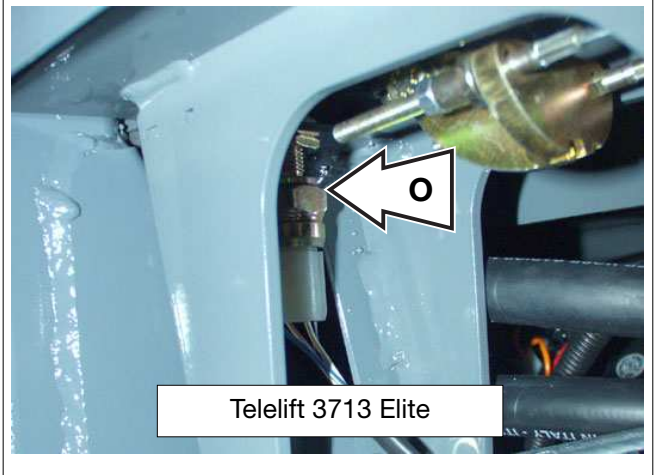

■ **Checking the machine start control**
(at every use)

Attempt to start the engine with the forward or reverse gear put.

The engine must not start. If the engine starts, contact the TEREXLIFT Technical Service.



Repeat the operation putting first one gear, then the other.

4.4 TABLE B PROCEDURES**B-1 CHANGE THE ENGINE OIL AND RENEW
THE FUEL FILTER****B-2 CHECK THE TENSION OF THE
ALTERNATOR BELT****CAUTION**

For the engine maintenance, please refer to the specific Operator handbook supplied with the machine.

B-3 CHECK THE TYRE INFLATION
⚠ DANGER

Over-inflated or overheated tyres can burst. Do not flame-cut or weld the wheel rims. For any repair work, call in a qualified technician.

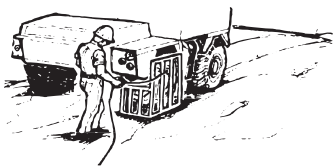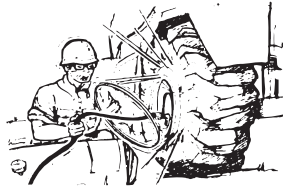OKAY

WRONG


For the tyre inflation or substitution, please refer to the table below:

	STANDARD	OPTIONAL		
		Telelift 3713 Elite		Telelift 4017-4514
Dimensions (front and rear)	400/70-20	400/80-24	18-19.5	405/70-24
P.R. (or load index)	14 pr	153B	16	14 pr / 151 D
Rim	13 x 20	13x24	13x19.5	13x24
Wheel disc	8 holes DIN 70361			
Pressure bar/Psi	4/58	4.25/61.6	4.5/65.2	4.25/61.6

On new machines, and when a wheel has been disassembled or replaced, check the nut torque of the wheels every 2 hours until they stay correct.

⚠ WARNING


Always use tyres having the dimensions indicated in the vehicle registration card.

B-4 CHECK THE TIGHTENING OF THE WHEEL NUTS

If you have to check the tightening of the wheel bolts or replace a wheel, proceed as follows:

- Raise the machine by lowering one outrigger to the ground or with a hydraulic jack.
- Remove the wheel rolling it on the ground
- Line up the wheel with the axle and fit the 8 nuts.
- Tighten the nuts following the alternate sequence shown in the picture with a pneumatic screwdriving machine.
- Raise the outrigger and lower the machine to the ground.

Re-tighten all nuts to a torque 440 Nm.

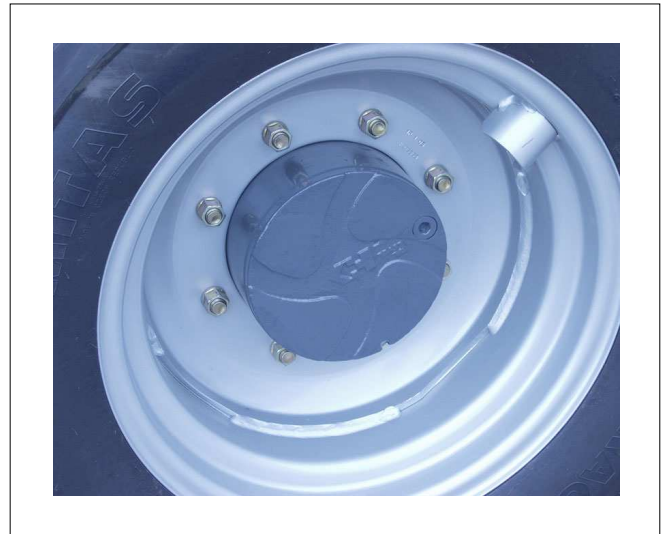


⚠WARNING

Check the tightening of wheels one hour after the job. They might get loose until they do not stay correct.

⚠WARNING

On new machines, and when a wheel has been disassembled or replaced, check the nut torque of the wheels every 2 hours until they stay correct.

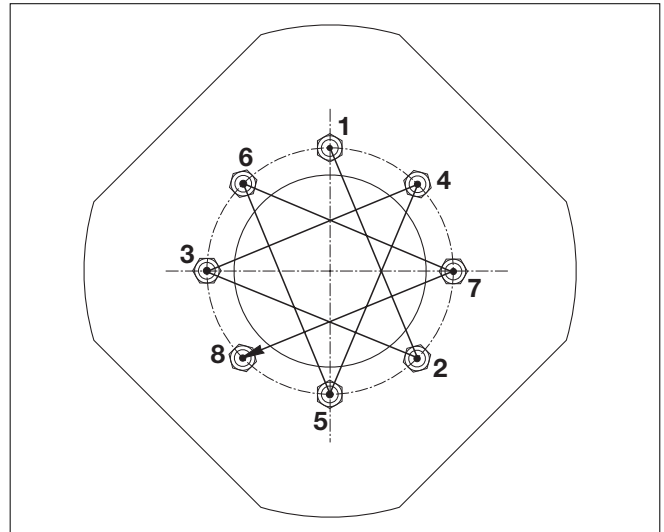

⚠WARNING


Always use tyres having the dimensions indicated in the vehicle registration card.

	STANDARD	OPTIONAL		
		Telelift 3713 Elite		Telelift 4017-4514
Dimensions (front and rear)	400/70-20	400/80-24	18-19.5	405/70-24
P.R. (or load index)	14 pr	153B	16	14 pr / 151 D
Rim	13 x 20	13x24	13x19.5	13x24
Wheel disc	8 holes DIN 70361			
Pressure bar/Psi	4/58	4.25/61.6	4.5/65.2	4.25/61.6

**B-5 CHECK THE TIGHTENING OF THE
CARDAN SHAFT SCREWS**

Check every week that the screws of the Cardan shafts
A and **B** are tight.

For the correct tightening torques, please refer to par.
2.13 in section 2 "Technical Specifications".

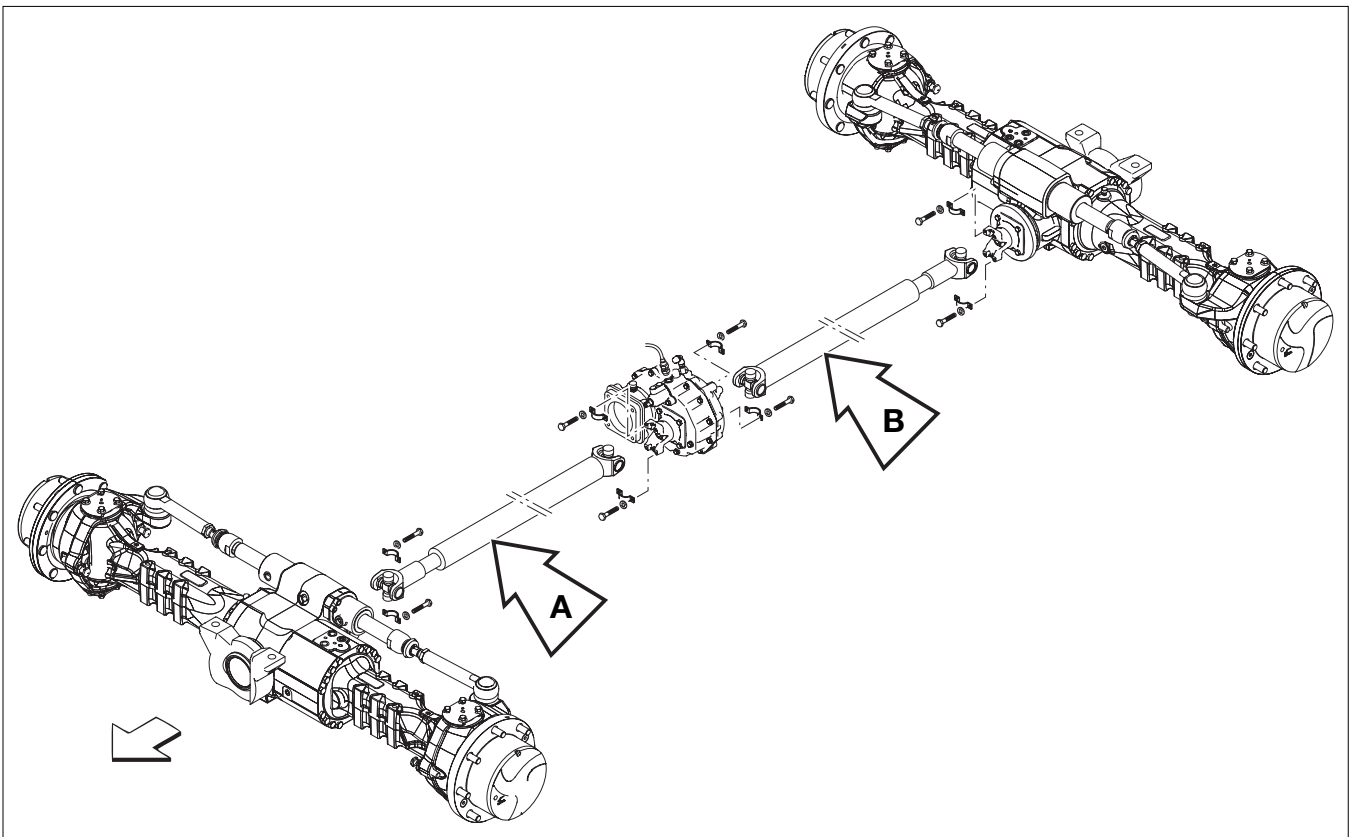

B-6 CHECK THE OPERATION OF THE EMERGENCY PUMP


If the machine is equipped with an emergency pump, check it is in efficient working order every week.

This pump is not used regularly and, as a result, it could get damaged and be out of order in case of need.

To check that the pump is in efficient order, stop the engine, press the on-off button **A** for some seconds and check that the pump works regularly.

CAUTION

If the emergency pump does not work fine, consult section 5 “Problems - causes - Solutions”.

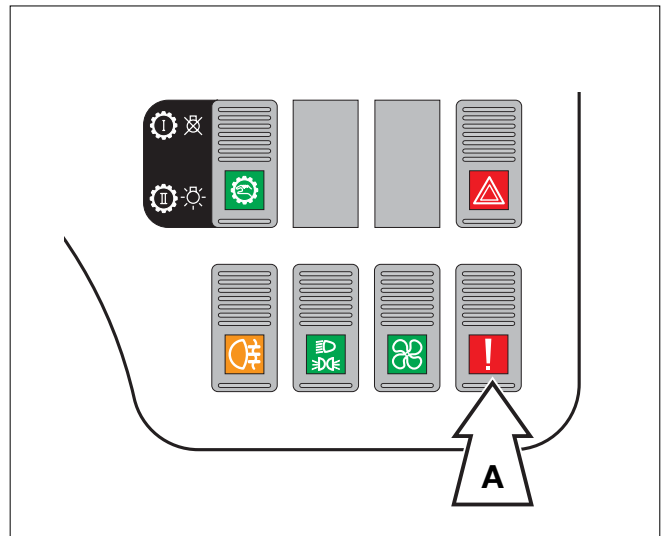

B-7 CLEAN THE RADIATOR FINS**⚠ DANGER**

When using a steam-washer, always wear protective clothes. Hot steam may cause serious injury.

- Open the radiator panel.
- Check the fins of radiator for sediments.
- If necessary, prepare a compressed air nozzle (max. 2 bar) or a nozzle distributing water under pressure or steam.

Cleaning using compressed air

- Direct a jet of compressed air toward radiator paying attention not to damage its fins.
- Remove any loose particles of dirt with some water.

Cleaning using water under pressure or steam

- Spray radiator with a cold commercial detergent and wait for at least 10 minutes to allow the detergent to react.
- Wash radiator using a jet of water or steam.

**CAUTION**

The core fouling depends on the dust of the outside environment and the presence of oil and fuel leaks in the motor area. It is therefore advisable to remove oil and fuel leaks immediately in case of very dusty environments.

4.5 TABLE C PROCEDURES

C-1 CHANGE THE OIL OF THE DIFFERENTIAL CASING, THE WHEEL REDUCER AND THE GEARBOX

To change the oil in the **wheel reduction gears**:

- Stop the machine on a level ground and ensure the parking brake is engaged and plug **A** is oriented along the vertical axis.

NOTICE

Place a container of suitable size under the plug.

- Unscrew plug **A** and drain any oil from the reduction gear.
- Rotate the wheel by 90° until the plug finds again on the horizontal axis.
- Add new oil through hole **A**.
- Refit and tighten plug **A**.

Recommended oil:

- **FUCHS TITAN GEAR LS 85 W-90 API GL-5 LS / GL-5**

To change the oil in the **front and rear differential gears**:

- Stop the machine on a level ground and engage the parking brake.



NOTICE

Place a container of suitable size under the plug.

- Loosen the drain plug **C**, the level plug **A** and the filler **B** and allow oil to flow out from the reduction gear.
- Refit and tighten drain plug **C**.
- Add new oil through the filler until it is level with hole **B**.
- Refit and tighten plugs **A** and **B**.

Recommended oil:

- **FUCHS TITAN GEAR LS 85 W-90 API GL-5 LS / GL-5**

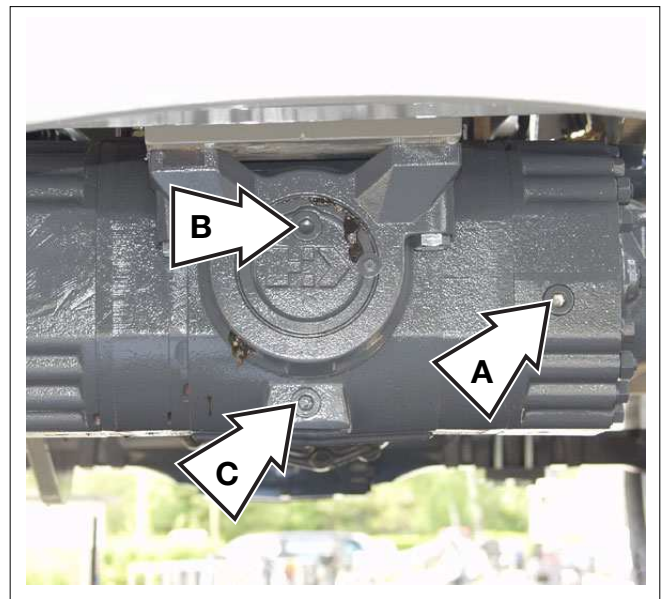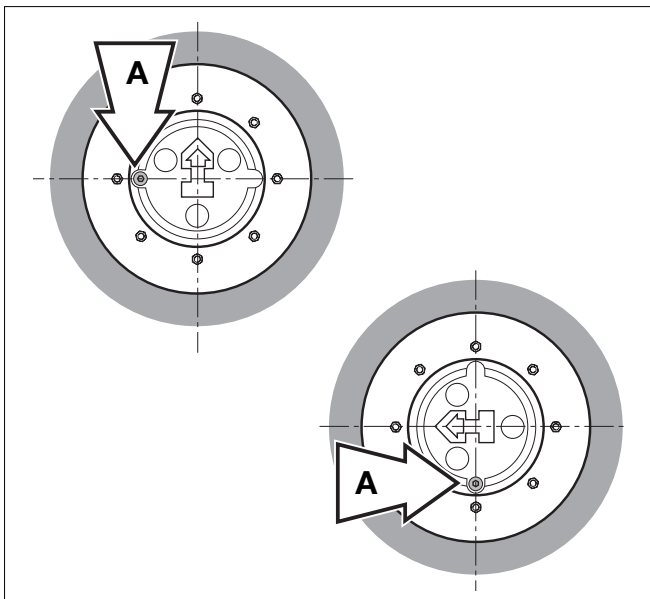

To change the oil in the **gearbox**:

- Stop the machine on a level ground and make sure the parking brake is engaged.

NOTICE

Place a container of suitable size under the plug.

- Remove the level plug **A** and the filler.
- Remove the drain plug **B** and empty the gearbox.
- Refit and tighten the drain plug **B**.
- Add new oil through the filler until it is level with hole **A**.
- Refit and tighten filler/level plug **A**.


Recommended oil:

- **FUCHS TITAN GEAR LS 85 W-90 API GL-5 LS / GL-5**

C-2 CHANGE THE ENGINE OIL AND RELEVANT FILTER

CAUTION

For the engine maintenance, please refer to the specific Operator handbook supplied with the machine.

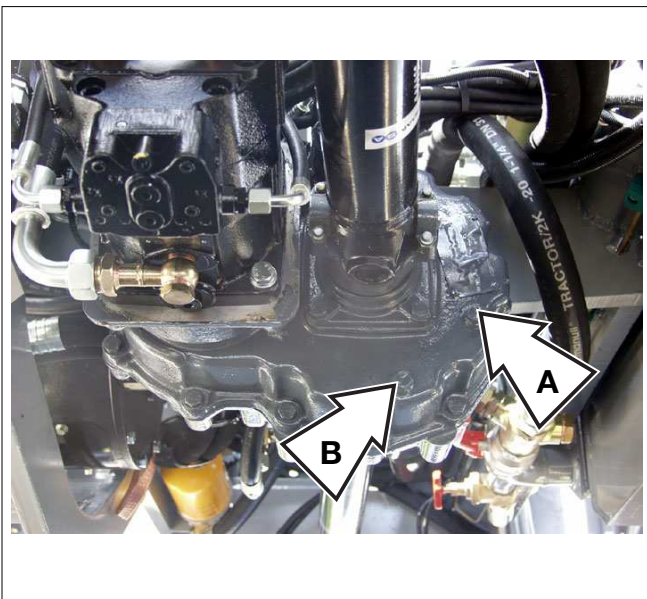

C-3 CHECK THE OIL LEVEL IN THE FRONT AND REAR DIFFERENTIAL GEARS

To check the oil level in the **front and rear differential gears**:

- Stop the machine on a level ground and engage the parking brake.
- Loosen level plug **A** and check if oil is level with the hole.
- If necessary, top-up through hole **B** until oil comes out from hole **A**.
- Refit and tighten plugs **A** and **B**.

C-4 CHECK THE OIL LEVEL IN THE FOUR WHEEL REDUCTION GEARS

To check the oil level within the **wheel reduction gears**:



- Stop the machine on a level ground and ensure the parking brake is engaged and plug **A** finds on the horizontal axis.
- Clean the plug all around, then remove it and check if oil is level with the hole.
- If necessary, add new oil through hole **A** until it is level.
- Refit the plug.

NOTICE

Place a container of suitable size under the plug.

NOTICE

Place a container of suitable size under the plug.

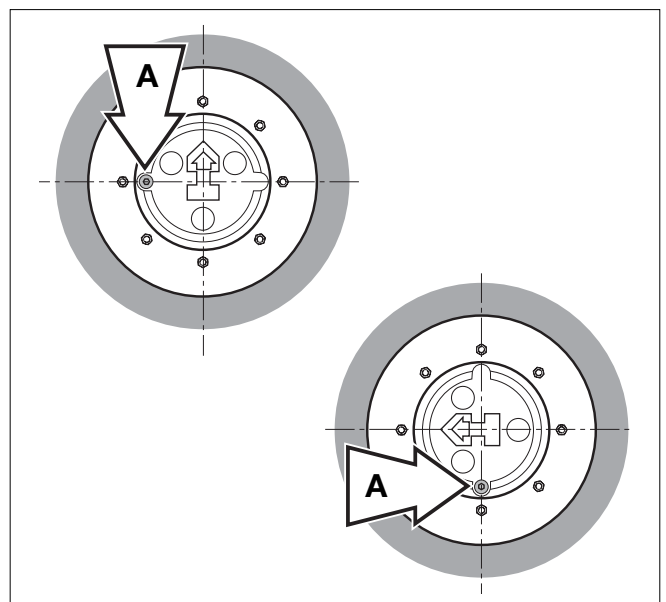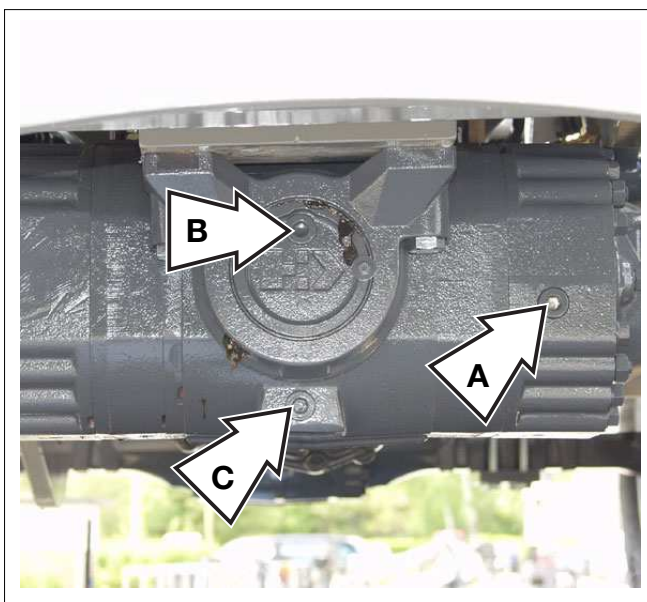


C-5 CHECK THE MAIN FILTERING ELEMENT OF THE ENGINE AIR FILTER

To clean the engine air filter :

- Stop the engine and engage the parking brake.
- Unscrew wingnut **A** and remove cover **B**.
- Unscrew wingnut **C** and remove the outer element **D**.
- Clean the filter bowl.
- Dry clean the cartridge (max. pressure: 6 bar) and direct the air jet from inside to outside.
- Check for cracks in the filtering element by introducing a lamp inside.
- Smear the seal with grease, then refit the element.
- Tighten wingnut **C**, close cover **B** and tighten with wingnut **A**.

⚠WARNING

As soon as the warning lamp on the cab dashboard switches on, replace the outer element.

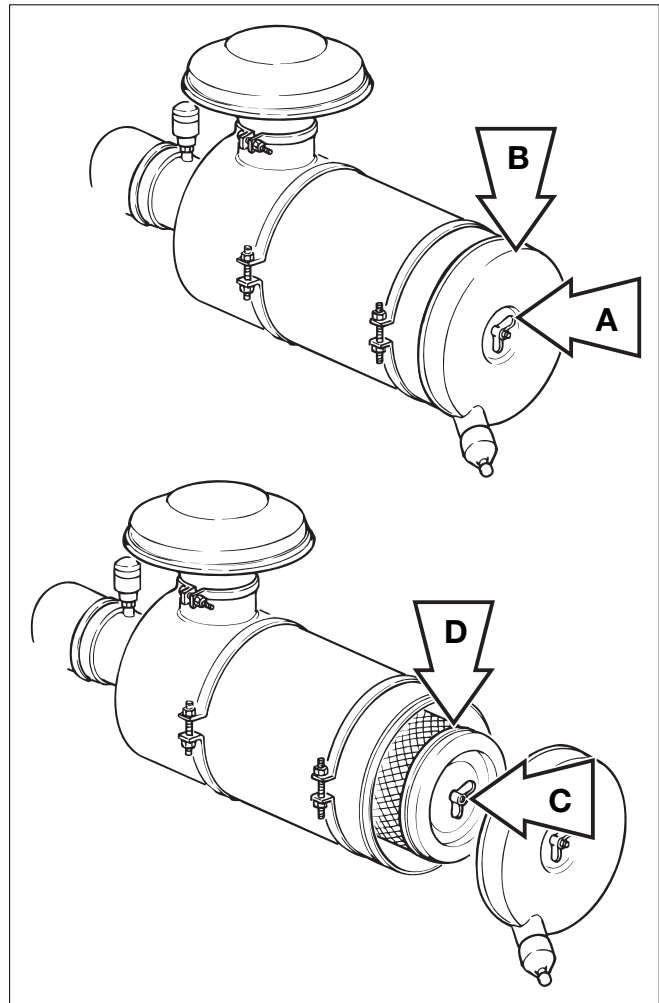

C-6 CHECK THE CLAMPING OF THE CABLEHEADS TO THE BATTERY TERMINALS

Check the cable clips are well secured to the battery terminals. To tighten the clips, always use a box wrench, never pliers.

⚠ DANGER

- *Keep out of items which can produce sparks, of naked flames or lit cigarettes.*
- *Do not rest metal objects onto the battery. This can result in a dangerous short especially during a recharge.*




**C-7 CHECK THE AIR SUCTION HOSE
BETWEEN ENGINE AND FILTER**

Check the state of sleeves **A** forming the air suction line between engine and filter every month.

CAUTION

If you use the machine continuously for several days, check these sleeves, as well as the hose clamps more frequently.

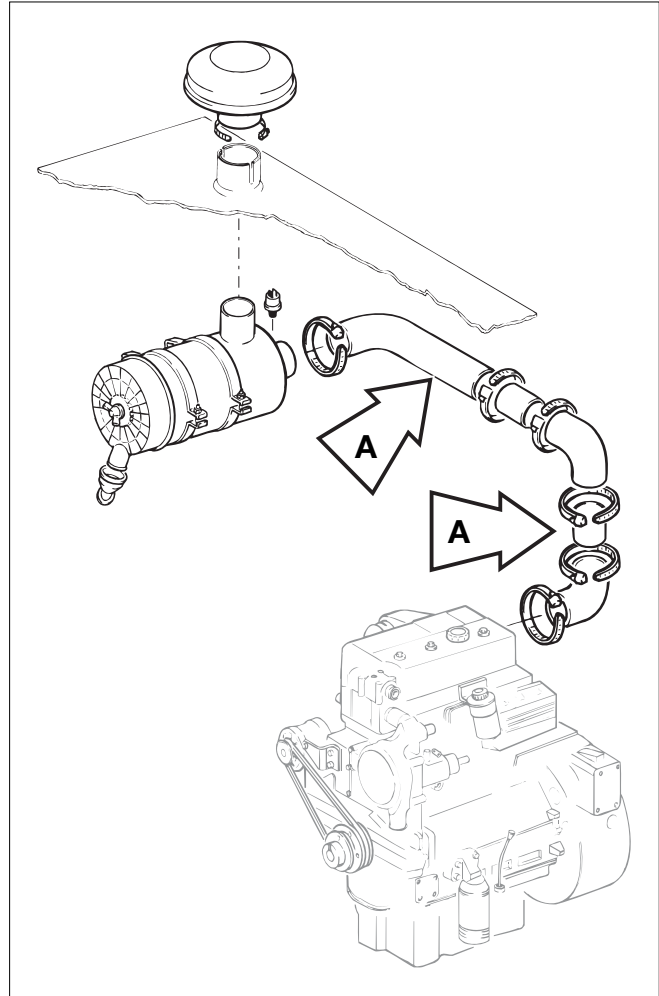

C-8 CHECK THE CYLINDER CHROMIUM-PLATED RODS

Visually check the cylinder rods for scoring every month.

For this operation, fully extend all of the cylinders and check that their rods are intact.



C-9 CHECK THE HYDRAULIC LINES

Every month, do a random check of the oil-dynamic hoses to be sure they are not worn. In particular, we recommend checking the hoses located near moving mechanical parts as they could rub against such parts and get damaged.

CAUTION


Replace any worn hoses immediately before using the machine again.

**C-10 CHECK THE ELECTRIC CABLES**

Every month, do a random check of the electrical cables to be sure they are not damaged. In particular, we recommend checking the cables located near moving mechanical parts as they could rub against such parts and get damaged.

CAUTION

Replace any worn cables immediately before using the machine again.

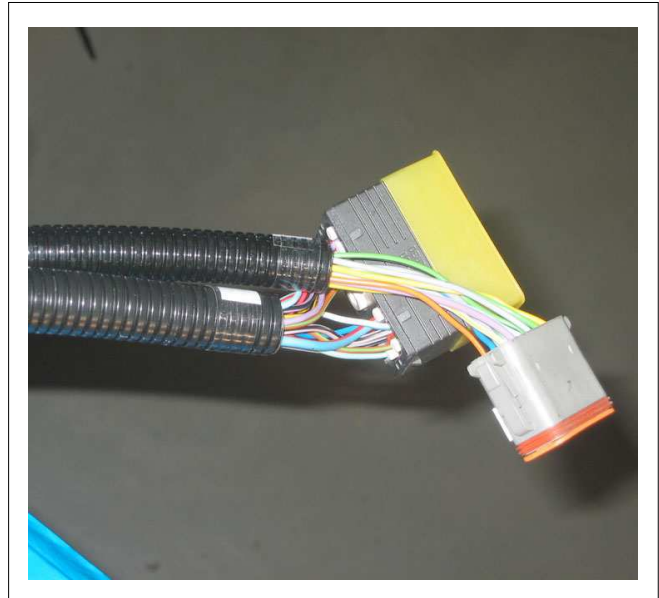



C-11 CHECK THE WEAR OF THE SLIDING PADS OF THE BOOM SECTIONS

Any boom section is fitted with adjustable pads located on the four sides of the profile. These pads are secured to both fixed and mobile part of every section.

All pads can be adjusted by the special shims not supplied by TEREXLIFT.

CAUTION

Pads must compulsorily be replaced if the residual thickness of the plastic layer with respect to the iron bush fixing the block is equal or inferior to 1 mm.

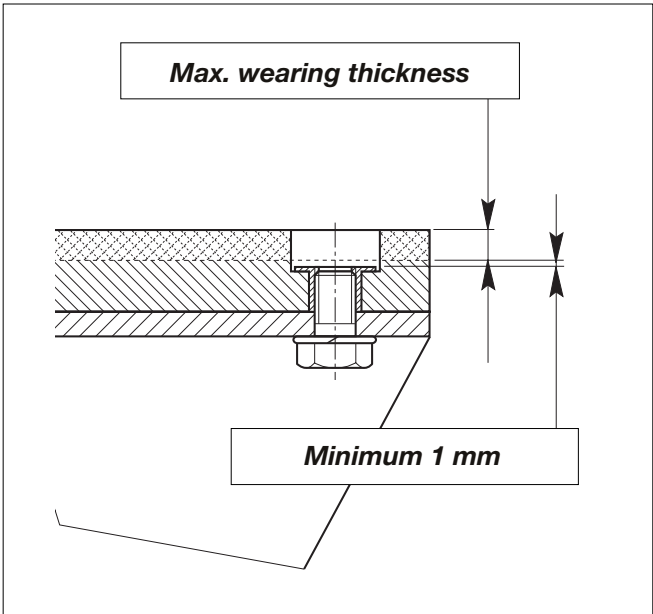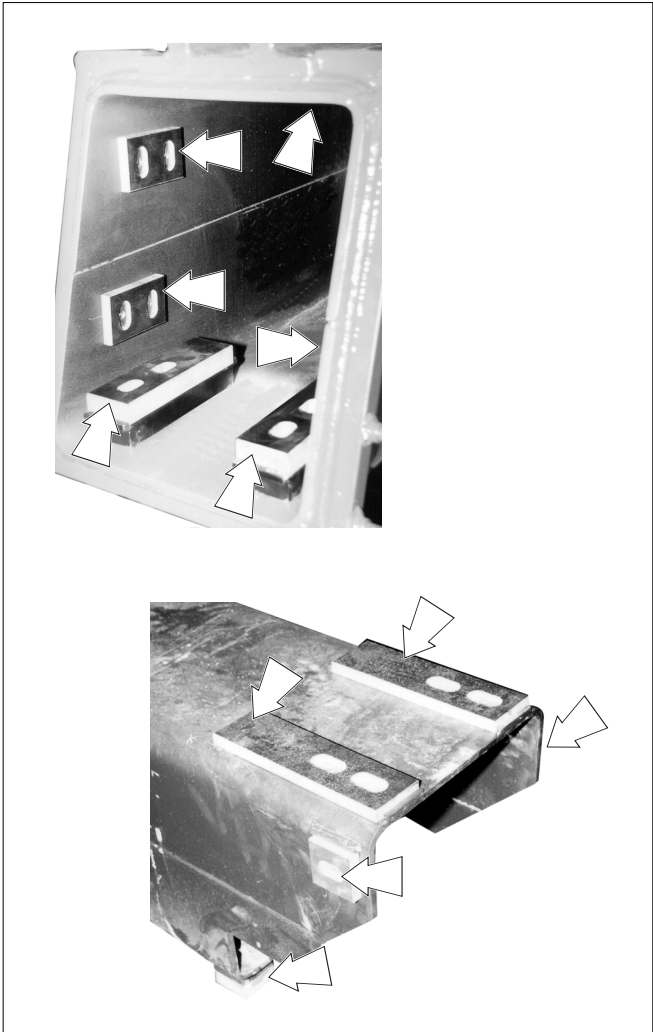

C-12 ADJUST THE PLAY OF THE SLIDING PADS OF THE BOOM SECTIONS

Any boom section is fitted with adjustable pads located on the four sides of the profile. These pads are secured to both fixed and mobile part of every section.

All pads can be adjusted by the special shims.

Adjusting the pads:

- Remove or loosen the screws fixing the pads in relation to type of shims used (with or without slots).
- Fit the necessary amount of shims.
- If the residual thickness of the pad is insufficient or near the maximum wearing limit, renew the pad.
- Tighten the screws fixing the pads at the recommended torque (see below). Use a dynamometric wrench.



Tightening torques of the pad screws in relation to the screw diameter

Screws M10	Nm 30
Screws M14	Nm 50

Tightening torques higher than those recommended can cause the break of the pad or of the locking threaded bush.

CAUTION

Pads must compulsorily be replaced if the residual thickness of the plastic layer with respect to the iron bush fixing the block is equal or inferior to 1 mm.

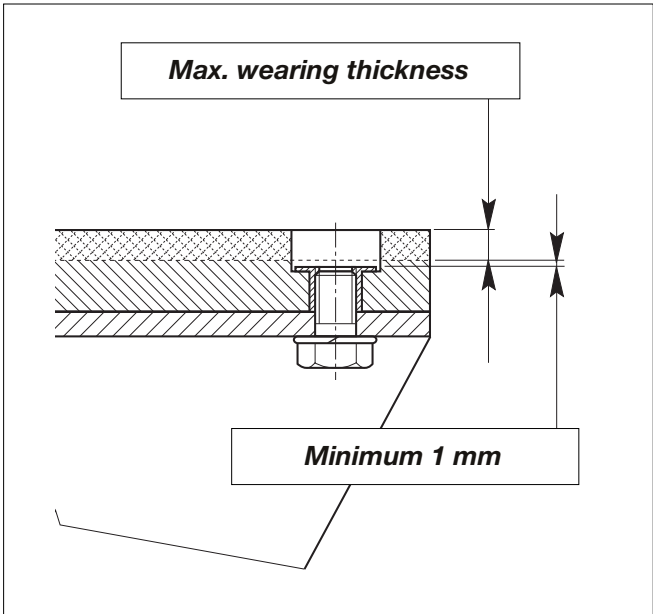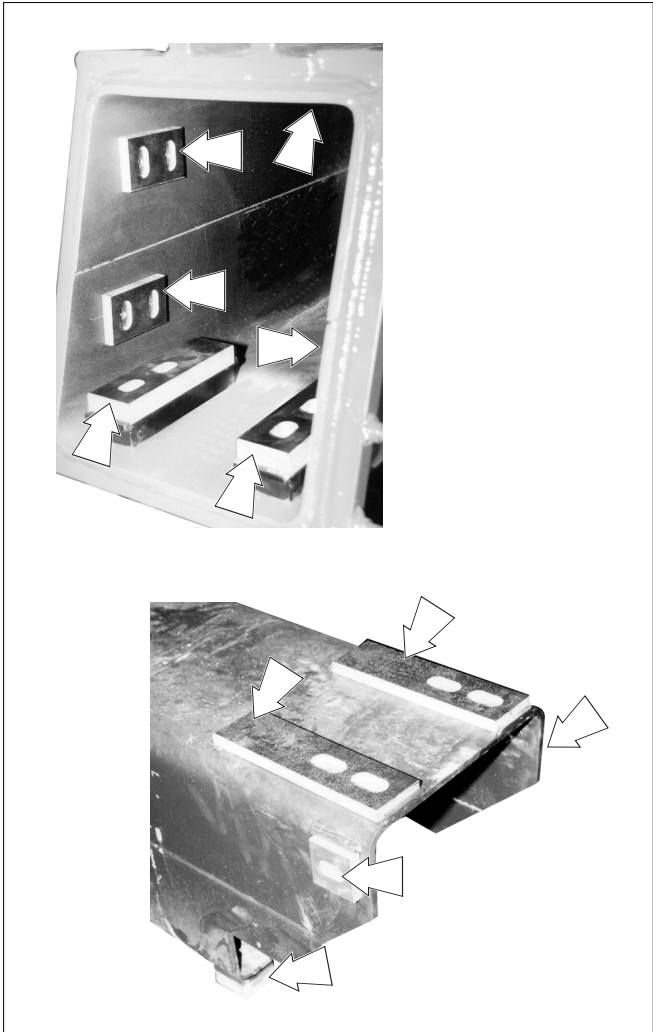

C-13 GREASE THE SLIDING PARTS OF THE BOOM SECTIONS

Check every month that the telescopes are well greased in correspondence of the sliding pads.

If necessary, scrape off the old grease and brush new grease. We recommend using:

- **INTERFLON grease FIN GREASE LS 2**

CAUTION

Avoid mixing greases of different type or features and do not use greases of lower quality.

C-14 CHECK THE LEVEL OF THE BATTERY ELECTROLYTE

- Check the electrolyte level every 250 working hours; if necessary, add distilled water.
- Ensure the fluid is 5÷6 mm above the plates and the cell levels are correct.
- Protect the terminals smearing them with pure vaseline.
- Remove the battery and store it in a dry place, when the machine is not used for a long time.

⚠ DANGER

Battery electrolyte contains sulphuric acid. It can burn you if it touches your skin and eyes. Always wear goggles and protective gloves, and handle the battery with caution to prevent spillage. Keep metal objects (watch straps, rings, necklaces) clear of the battery leads, since they can short the terminals and burn you.

⚠ DANGER

- *Before disconnecting the battery, set all switches within the cab to OFF.*
- *To disconnect the battery, disconnect the negative (-) lead from the frame earth first.*
- *To connect the battery, connect the positive (+) lead first.*
- *Recharge the battery far from the machine, in a well-ventilated place.*
- *Keep out of items which can produce sparks, of naked flames or lit cigarettes.*
- *Do not rest metal objects onto the battery. This can result in a dangerous short especially during a recharge.*
- *Because the electrolyte is highly corrosive, it must never come in contact with the frame of the handler or electric/electronic parts. If the electrolyte comes in contact with these parts, contact the nearest authorised assistance centre.*

⚠ DANGER

Risk of explosion or shorts. During the recharge, an explosive mixture with release of hydrogen gas forms.

⚠ DANGER

Do not add sulphuric acid; add only distilled water.

C-15 CHECK THE EFFICIENCY OF THE BLOCK VALVES

The piloted blocking valves allow to held the load in position in case of burst of a flexible hose.

To check the efficiency of a valve, proceed as follows:






- Load a weight near the maximum payload onto the boom.
- Raise the load some centimetres above the ground (max 10 cm). To check the valve on the telescope extension cylinder move the boom to maximum height and extend it some centimetres.
- Loosen the oil hoses to the cylinder of which you are checking the valve with caution.
- To check the efficiency of the block valves of the outriggers, lower them to the ground and unload the weight of the tyres without raising them. Loosen the cylinder hoses to check the efficiency of the valve.

During the check, the oil will flow out of the hoses and the load shall remain blocked in position.

Should that not be the case, the valve must be replaced.

NOTICE

Place a container of suitable size under the hoses.

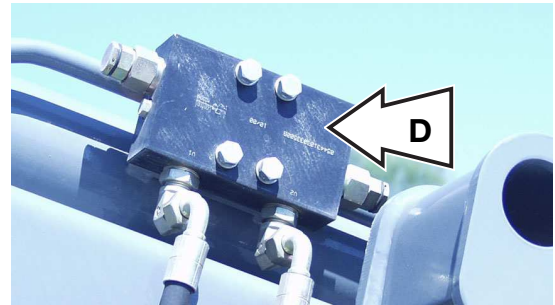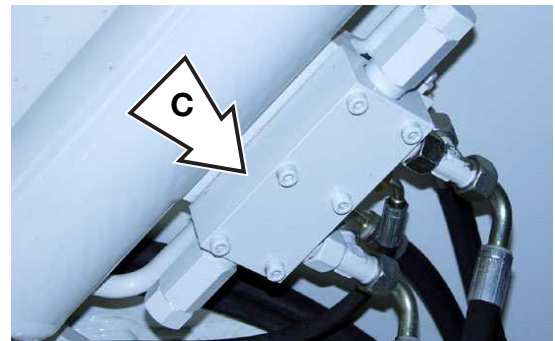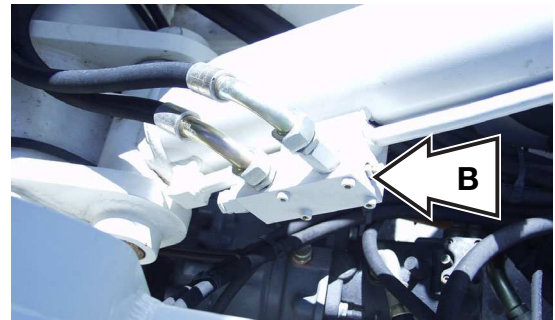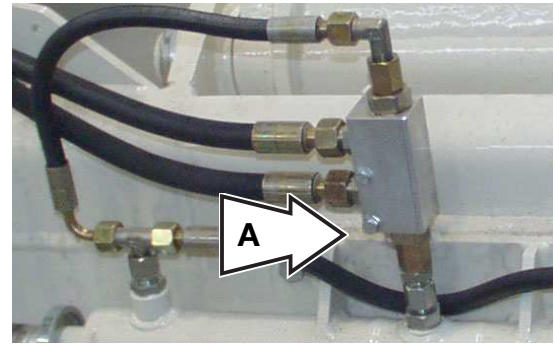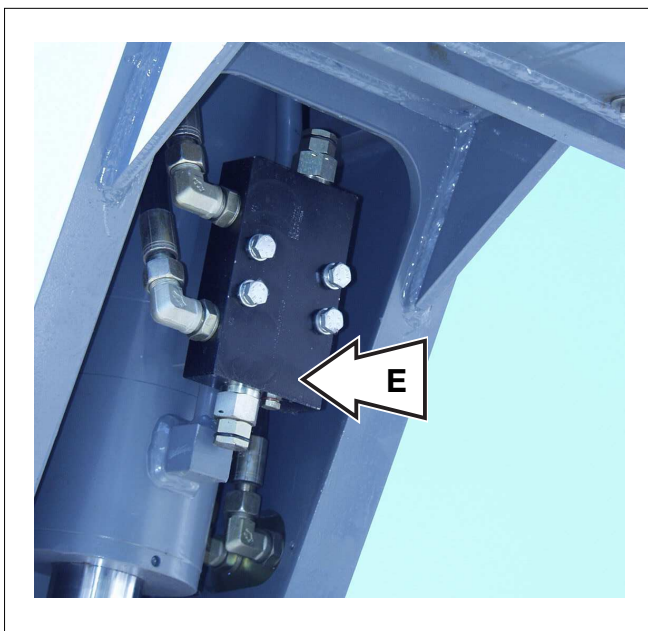


⚠ DANGER

Do the check of the valves taking all the possible precautionary measures:

- **Wear safety glasses**
- **Wear safety gloves**
- **Wear safety shoes**
- **Wear suitable working clothes**
- **Use guards against leaks of oil at high pressure**
- **Do the check in a free space with barriers all around to keep non-authorized people away**
- **Ensure that the part to be checked is in safe condition and that the action generated does not result in an uncontrolled movement of the machine.**

TO REMOVE THE BLOCK VALVES OR THE CYLINDERS

- **Lower the boom to the ground in a firm way since the removal of the block valve or the cylinder can cause an uncontrolled down-movement.**
- **After refitting the valve or the cylinder, replenish the circuit and eliminate any air before starting working. To eliminate the air from the circuit, move the involved cylinders to end-of-stroke in the two directions (opening/closing. To eliminate the air from the fork balance cylinder, move the boom up and down and tilt the fork plate forwards/back.**

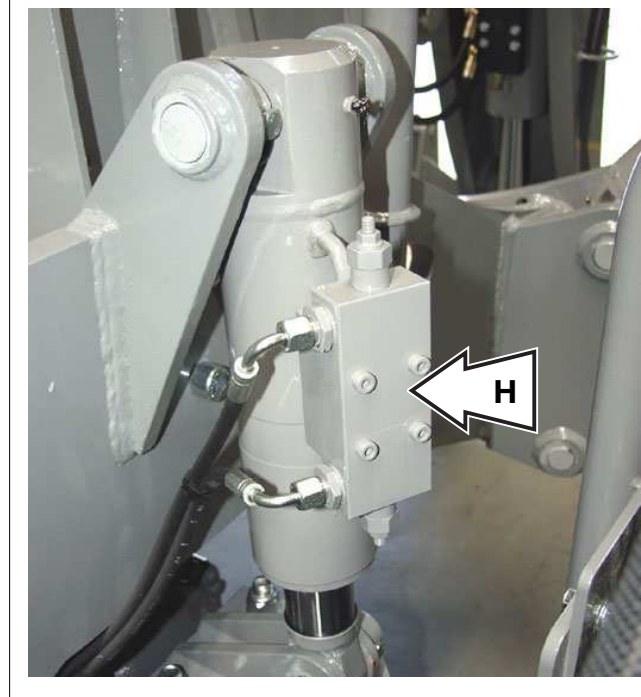

4.6 TABLE D PROCEDURES**D-1 VISUALLY CHECK THE SMOKE QUANTITY EVACUATED FROM THE ENGINE EXHAUST**

To check the quantity of smoke evacuated from the engine exhaust, proceed as follows:

- Start the engine of the machine.
- Wait for a few minutes so the engine can warm up correctly.
- Visually check that the amount of smoke coming out of the exhaust is normal; repeat the check while accelerating the engine.

CAUTION

Do this check outdoors or use an adequate smoke extraction system.

CAUTION

In case of excess smoke, strictly obey the instructions provided in the relevant Use and maintenance manual enclosed with the technical literature of the machine.

D-2 CHECK THE TIGHTENING OF THE ENGINE FIXING SCREWS

Every 6 months, check that the screws fixing the engine to the machine chassis are tight.

For this operation, use a torque wrench and tighten the screws to a torque of **146 Nm**.

**D-3 CHECK THE TIGHTENING OF THE CAB
FIXING SCREWS**

Every 6 months, check that the screws fixing the cab to the machine chassis are tight.

For this operation, use a torque wrench and tighten the screws to a torque of **218 Nm**.

**D-4 CHECK THE BACKLASH BETWEEN PINS
AND BUSHINGS IN ALL JOINTS**

Every 6 months, check the machine randomly to be sure the backlash between pins and relevant bushings on the joints is not too high.

CAUTION

If you have to change some parts, please refer to the spare parts catalogue enclosed with the technical literature of the machine.

D-5 CHANGE THE HYDRAULIC OIL FILTER OF THE TRANSMISSION

To change the hydraulic oil filter of the transmission, proceed as follows:

- Stop the machine on a level ground and engage the parking brake.
- Place a container of suitable size under the filter to collect any oil leaks, then close cock **A**.
- Remove the filter canister **B** with the special wrench provided.
- Renew the canister. Before fitting a new canister, thoroughly clean and grease both bowl and gasket.
- Hand-tighten and re-open cock **A**.

CAUTION

Hydraulic oil filter canisters cannot be cleaned or washed and refitted.

They must be replaced with new ones of the type recommended by the manufacturer:

Flow rate $l/1' = 150$

Filtering = 10μ



Coupling = $1'' 1/4$ BSP

NOTICE

The handling and disposing of used oils may be ruled by local or national regulations. Address to authorised centres.

CAUTION

When changing the oil, drain it when it is still hot and the polluting substances are in suspension.

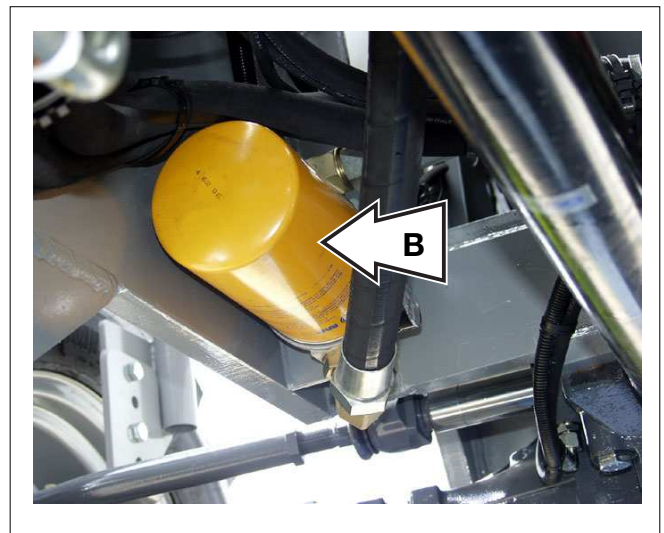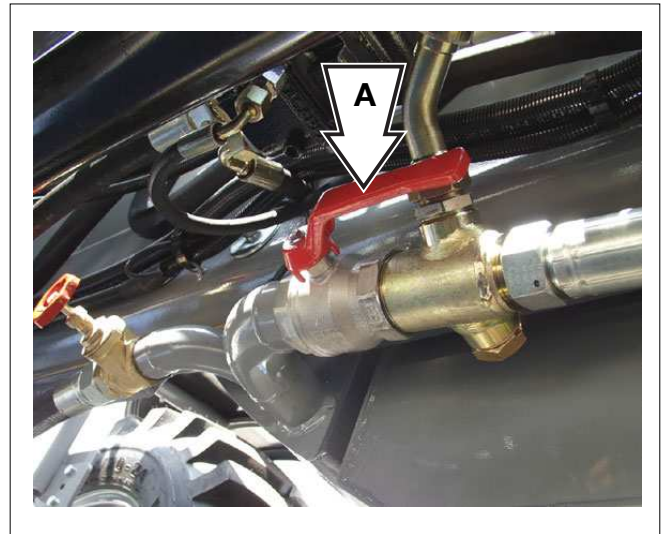

D-6 CHANGE THE HYDRAULIC OIL FILTER IN THE TANK

To change the hydraulic oil filter cartridge of the service circuits, proceed as follows:

- Stop the machine on a level ground and engage the parking brake.
- Place a container of suitable size under the tank, then allow oil to flow out until its level is under the inspection hatch **A** (90 litres approx).
- Remove the inspection hatch and unscrew the oil filter fitted inside the tank.
- Check the tank is clean, then fit a new filtering element and refit the inspection hatch.
- Check the oil level within the tank. Add new oil, if necessary.

CAUTION

Hydraulic oil filter canisters cannot be cleaned or washed and refitted.

They must be replaced with new ones of the type recommended by the manufacturer:

Flow rate $l/1' = 100$

Filtering = 60μ

Coupling = 2" NPT

NOTICE

The handling and disposing of used oils may be ruled by local or national regulations. Address to authorised centres.

CAUTION

When changing the oil, drain it when it is still hot and the polluting substances are in suspension.



**D-7 HAVE THE HYDRAULIC SYSTEM
CHECKED BY A SKILLED TECHNICIAN**

Every 6 months, we recommend have the efficiency of the hydraulic system checked by a skilled technician.

CAUTION

In case of need, please contact the Terexlift Service Centre.


D-8 CHANGE THE MAIN CARTRIDGE OF THE ENGINE AIR FILTER

To change the external element:

- Stop the engine and engage the parking brake.
- Unscrew wingnut **A** and remove cover **B**.
- Unscrew wingnut **C** and remove the outer element **D**.
- Clean the filter bowl.
- Smear the seal with grease, then mount the new element **D** and make sure it is correctly positioned.
- Tighten wingnut **C**, close cover **B** and tighten with wingnut **A**.

⚠WARNING

As soon as the warning lamp on the cab dashboard switches on, replace the outer element.

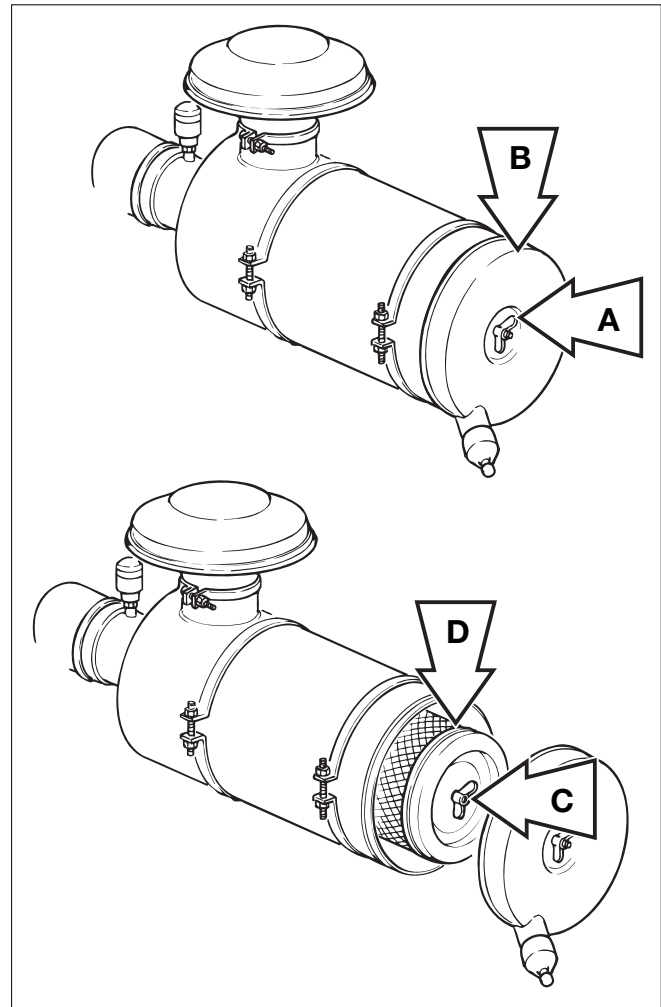

D-9 RENEW THE CARTRIDGE OF THE ENGINE OIL FILTER AND THE FUEL FILTER**CAUTION**

For the engine maintenance, please refer to the specific Operator handbook supplied with the machine.

D-10 CHANGE THE OIL OF THE FRONT AND REAR DIFFERENTIAL CASINGS

To change the oil in the **front and rear differential gears**:

- Stop the machine on a level ground and engage the parking brake.


NOTICE

Place a container of suitable size under the plug.

- Loosen the drain plug **C**, the level plug **A** and the filler **B** and allow oil to flow out from the reduction gear.
- Refit and tighten drain plug **C**.
- Add new oil through the filler until it is level with hole **B**.
- Refit and tighten plugs **A** and **B**.

Recommended oil:

- **FUCHS TITAN GEAR LS 85 W-90 API GL-5 LS / GL-5**

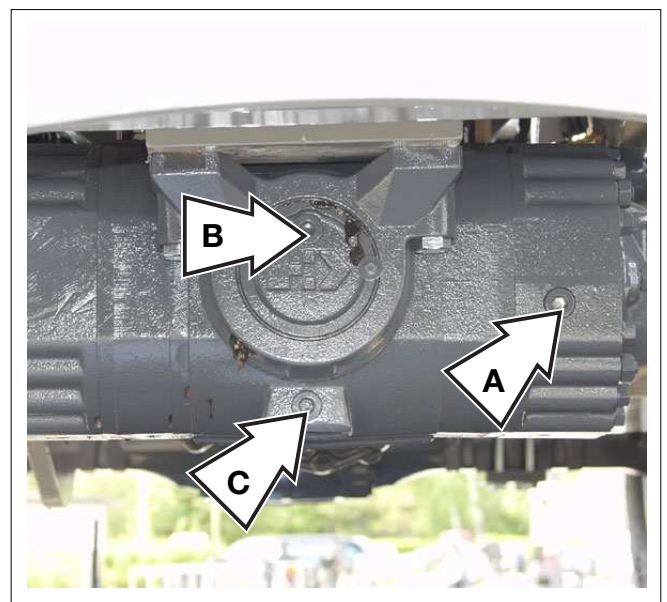


4.7 TABLE E PROCEDURES
E-1 CHANGE THE SAFETY ELEMENT OF ENGINE AIR FILTER

To change the safety element:

- Stop the engine and engage the parking brake.
- Unscrew wingnut **A** and remove cover **B**.
- Unscrew wingnut **C** and remove the outer element **D**.
- Unscrew wingnut **E** and remove the inner element **F**.
- Clean the filter bowl.
- Smear the seal with grease, then mount the new element and make sure it is correctly positioned.
- Tighten wingnut **E**.
- Refit the outer element **D**.
- Close cover **B** and tighten with wingnut **A**.

⚠WARNING

The inner element should be replaced every two times the outer element is replaced.

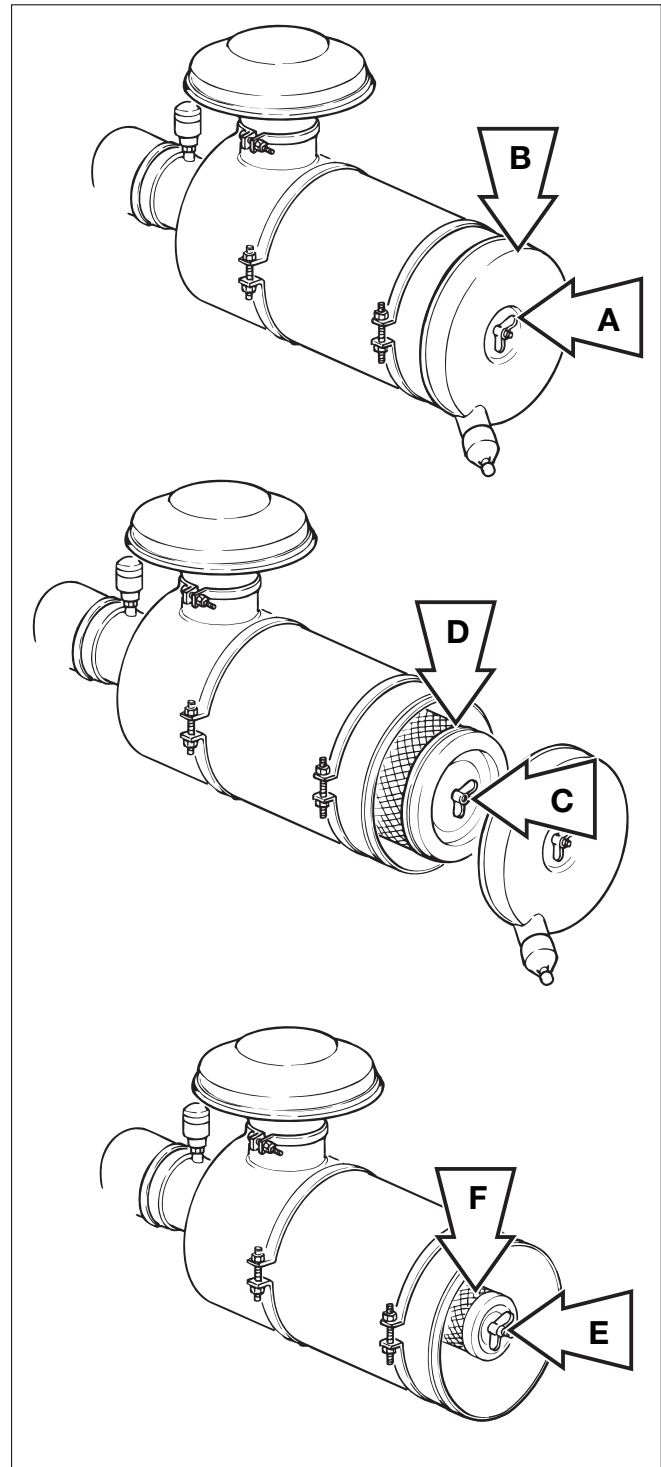

E-2 CHANGE THE OIL OF THE GEARBOX

To change the oil in the **gearbox**:

- Stop the machine on a level ground and make sure the parking brake is engaged.

NOTICE

Place a container of suitable size under the plug.

- Remove the level plug **A** and the filler.
- Remove the drain plug **B** and empty the gearbox.
- Refit and tighten the drain plug **B**.
- Add new oil through the filler until it is level with hole **A**.
- Refit and tighten filler/level plug **A**.

Recommended oil:

- **FUCHS TITAN GEAR LS 85 W-90 API GL-5 LS / GL-5**

E-3 CHANGE THE OIL IN THE FOUR WHEEL REDUCTION GEARS

To change the oil in the **wheel reduction gears**:

- Stop the machine on a level ground and ensure the parking brake is engaged and plug **A** is oriented along the vertical axis.



NOTICE

Place a container of suitable size under the plug.

- Unscrew plug **A** and drain any oil from the reduction gear.
- Rotate the wheel by 90° until the plug finds again on the horizontal axis.
- Add new oil through hole **A**.
- Refit and tighten plug **A**.

Recommended oil:

- **FUCHS TITAN GEAR LS 85 W-90 API GL-5 LS / GL-5**

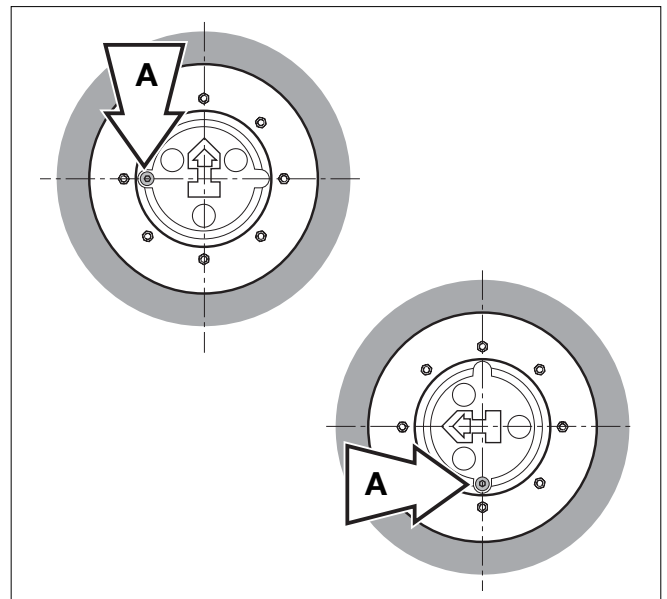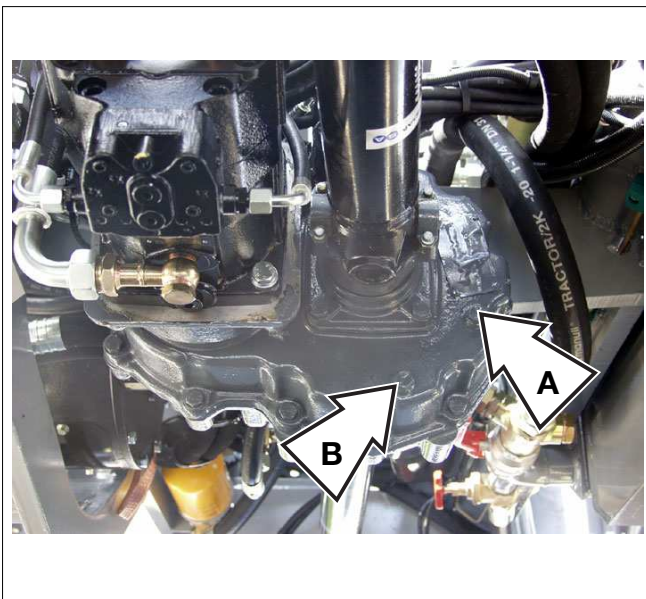

E-4 CHANGE THE HYDRAULIC OIL

To change the hydraulic oil:


- Stop the machine on a level ground and make sure the parking brake is engaged.
- Release the pressure from the hydraulic circuit.
- Place a container of suitable size under the drain plug, placed in the lower part of the reservoir, and collect any oil leaks.
- Remove the drain plug and allow oil to flow out into the container.
- Remove the inspection cover **C** of tank.
- Carefully wash the tank with Diesel oil and blow a jet of compressed air.
- Refit the drain plug and the inspection cover **C**.
- Add new oil by making sure that it matches the recommended type indicated until it is level with **A**.

Recommended oil:

- **FUCHS TITAN GEAR LS 85 W-90 API GL-5 LS / GL-5**

NOTICE

The handling and disposing of used oils can be ruled by local or national regulations. Address to authorised centres.

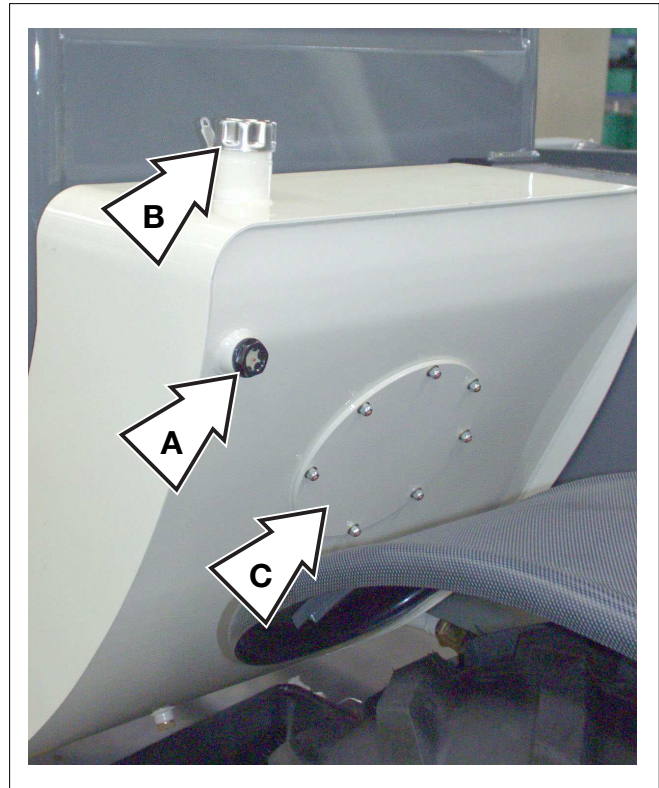

4.8 TABLE F PROCEDURES


F-1 CHANGE THE ENGINE COOLANT

⚠ DANGER

When the coolant is hot, the cooling system is under pressure. With warm engine, loosen the radiator plug slowly and carefully, without removing it, to drain the pressure. Use protection gloves and keep your face at a safe distance.

To drain the antifreeze:


- Unscrew the plug **C** at the bottom of the radiator or disconnect the rubber hose, if no plug is present. Allow the coolant to flow out into a special container.
- Refit the hose and pour new antifreeze (50% water-antifreeze). This proportion will provide protection up to -38°C.

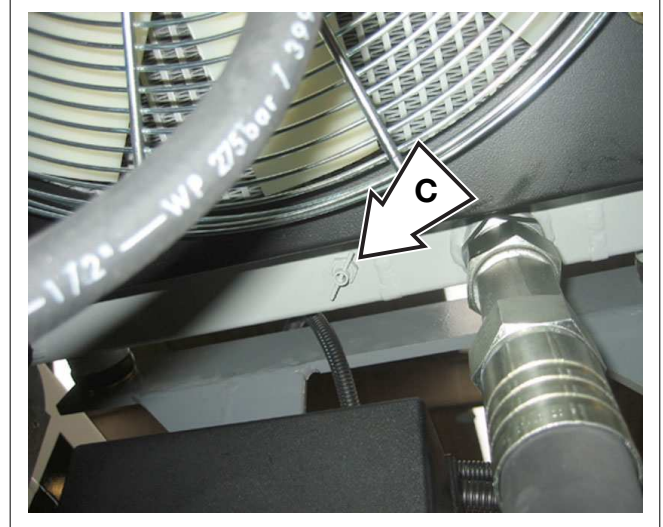

At the delivery, the machine is refilled with:

TEREX PRO COOL by VALVOLINE



The use of this product guarantees protection to the circuit for 3 years or 7000 hours without having to add any dry coolant additive.

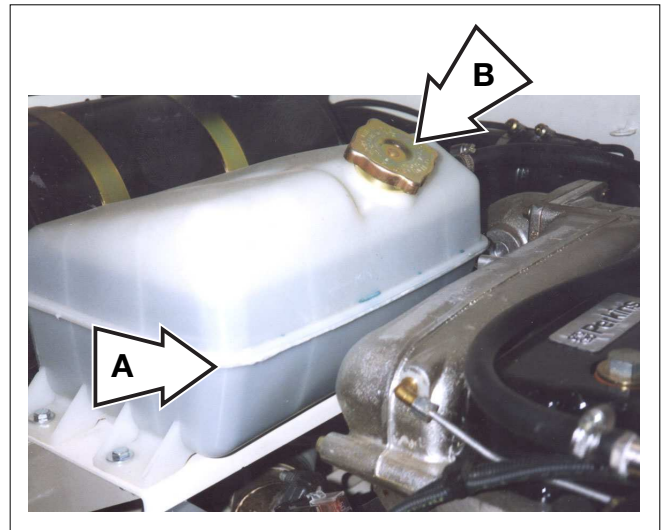


TEREX PRO COOL		
Protection against boiling / freezing		
Product %	Freezing point	Boiling point
33	-17 °C	123 °C
40	-24 °C	126 °C
50	-36 °C	128 °C
70	-67 °C	135 °C

⚠ WARNING

Use an antifreeze mixture in the proportions recommended by the manufacturer in relation to the ambient temperature of the jobsite.

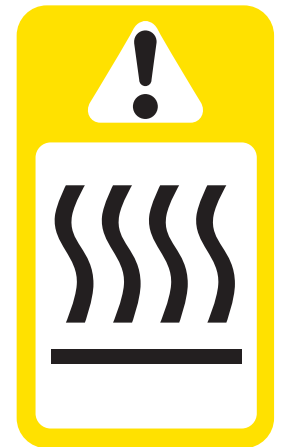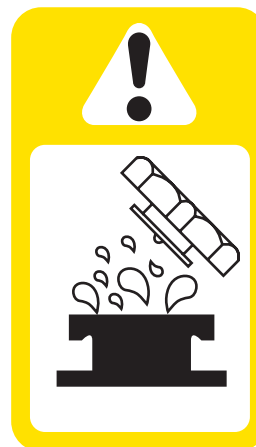

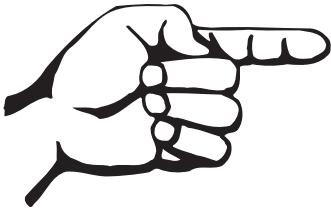

Intentionally blank page

Section 5

TROUBLESHOOTING

SECTION INDEX

5.1	Introduction	page	2
5.2	About this section		3
5.3	Electrical faults		4
5.4	Hydraulic faults		23

5.1 INTRODUCTION



- *Maintenance inspections shall be completed by a person trained and qualified on the maintenance of this machine.*
- *Immediately tag and remove from service a damaged or malfunctioning machine.*
- *Repair any damage or malfunction before operating machine.*
- *Unless otherwise specified, perform each procedure with the machine in the following configuration:*
 - *machine parked on a flat level surface;*
 - *boom in the stowed position;*
 - *key switch in the OFF position with the key removed.*



Before troubleshooting:

- *Read, understand and obey the safety rules and operating instructions printed in the Operator Manual of the machine.*
- *Be sure that all necessary tools are available and ready for use.*
- *Read each appropriate flow chart thoroughly.*
- *Pay special attention to the following warnings:*

⚠ DANGER

Crushing hazard. When testing or replacing any hydraulic component, always support the structure and secure it from movement.

⚠ WARNING

Electrocution hazard. Contact with electrically charged circuits may result in death or serious injury. Remove all rings, watches and other jewelry.

⚠ WARNING

Spraying hydraulic oil can penetrate and burn skin; loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

CAUTION

Perform all troubleshooting on a firm level surface.

CAUTION

Two person will be required to safely perform some troubleshooting procedures.

5.2 ABOUT THIS SECTION

The tables on the following pages should be used to find and rectify problems that can occur when using the machine.

Prepare adequate tools, and especially a voltmeter and a pressure gauge to carry out the checks explained on next pages.

The initials of the electrical and hydraulic parts indicated in the following tables are given to help you find such parts on the schemes and diagrams in chapter 6.

The tables should be read as follows:

- once you have identified the problem, search this problem in the "**problem**" column;
- analyse the possible causes explained in the "**causes**" column;
- proceed with the check or replacement according to the instructions provided in the "**solutions**" column;
- check that the machine runs well;
- if the problem cannot be eliminated, check again all indications in the "**causes**" column and proceed accordingly.

CAUTION

For any further information, contact the TEREXLIFT Service Centre.

5.3 ELECTRIC FAULTS

Problem	Cause	Solution
When key is turned to 1, the dashboard is not powered	Battery discharged	Check the battery, replace if necessary.
	Battery coutout switch	Check that the switch is in the correct position and it works fine. Replace if damaged.
	Ground	Check that the ground braid between chassis and engine is correctly connected and intact.
	50A fuse F2G blown.	Check the fuse; replace if necessary.
	Ignition key block	Check that contact 30 of the ignition key is powered; if you have not 12V on contact 15/54 , change the key.
	Fuses-relays board damaged	Check you have 12V on connector J2 of the board, or replace the board.
	Relay K05 damaged.	Check the 50A F3G , the connections and, if necessary, replace the relay.
The machine cannot be started from the driving cab	Ignition key	Check that contact 50a of the key supplies 12V when the key is in the start position (turned right).
	Relay K11 damaged	Check the relay; replace if necessary.
	Speed selector SX12	Check if the speed is engaged or change the speed selector.
	15A fuse F5G	Check the fuse; replace if necessary.
	Socket X17 on fuses board	Check if you have 12V on pin 8 of connector X17 when the key is turned to the start position.
	Problem on the line from dashboard to engine box	Check the continuity between pin 8 of connector X17 and pin 85 of relay K01 located in the engine box.

Trouble	Cause	Solution
	Inputs-outputs of relay K01	Check that contact 86 of the relay is ground connected, you have 12V on contact 30 and there is power on contact 87 when the key is turned to the start position.
	Starting motor relay damaged	Check the starting motor coil is powered. If the coil is powered and the motor does not work, change the motor.
	Starting motor damaged	Check and replace if necessary.
	Efficiency of the grounding system	Check and, if necessary, reconnect the grounding system to the chassis.
	50A fuse F2G blown.	Change the fuse.
	Electrostop solenoid valve and fuel pump damaged	Check the efficiency of the solenoid valves, replace if necessary.
The machine cannot be started from the platform	Ignition key	Check you have 12V on contact 58 when the ignition key is fully turned to the left.
	Road/jobsite selector	The key must be in the "platform" position; check that the two ends of contact S35 are powered and you have 12V on contact 3 on the platform socket.
	Platform ignition key	Check that key is turned to position 1. Check you have 12V on contact 4 of the platform socket. Check you have 12V on connector X7 to pins 6-7-12 , on connector X4 to pin 6 , and on contact +15 of the relays board.
	Platform start button	With the button pressed down, check you have 12V on pin 13 of the boom socket, on connector X17 to pins 8-9 , on contact 85 of relay K01 .
	Boom line interrupted	Check the continuity of the 24 poles of the boom line.
	Reel on platform damaged	Check the efficiency of the reel and replace, if necessary.

Trouble	Cause	Solution
	Control pedals on platform damaged	Check the activation key and the emergency button; replace the button if necessary. Check you have 12V on output contact 12 of the pushbuttons panel.
	Fuses blown	Check fuses F2G-F5G-F20 ; replace if necessary.
	Electrostop solenoid valve and fuel pump damaged	Check the efficiency of the solenoid valves; replace if necessary.
The starting motor runs but the engine does not start	No fuel	Refuel.
	Fuse F20 blown.	Check the fuse; replace if necessary.
	Electrostop and fuel pump damaged	Check and replace if necessary.
The battery gets discharged too fast	Internal elements broken	Change the battery.
	The alternator does not recharge.	Check the efficiency of the alternator and replace if necessary.
The machine does not move	Parking brake engaged	Disengage the parking brake.
	Outriggers down	Raise.
	Fuse F14 blown	Check and replace, if necessary.
	Parking brake micro-switch S6b damaged	Check the micro-switch and replace, if necessary.; with the parking brake released, you must have 12V on the pink-yellow wire.
	Outrigger limits switches S51 and S52 damaged	Check you have 12V on connector X5 to pin 4 and on connector X26 to pin 3 . Check the mechanical parts of the limit switch and replace the switch if necessary.
	Speed selector SX12 damaged	Check you have 12V on connector X12 to pin 1 . By shifting the selector forwards, you must have 12V on connector X5 to pin 3 , while, by shifting the selector back, you must have 12V on connector X5 to pin 2 ci siano 12V. Change the selector, if necessary.

Trouble	Cause	Solution
	<p>No mechanical gear put</p> <p>The solenoid valves of the forward and reverse speeds are damaged</p> <p>Relays K7 and K8 damaged</p> <p>Relays K9 and K10 damaged</p> <p>Relays board damaged</p>	<p>Check that micro-switch B54 lets the signal enter through pin 8 of connector X16 of the fuses and relays board and power the coils of relays K9 and K10 which supplies relays K7 and K8 with power (forward and reverse speed).</p> <p>Check you have 12V on solenoid Y01-A, when the forward gear is put, and, 12V on solenoid Y02-B when the reverse gear is put. If necessary, change the coils of the solenoid valves.</p> <p>Check the relays and replace if necessary.</p> <p>Check the relays and replace if necessary.</p> <p>Check you have 12V on connector X16 on pins 4 and 8; if necessary replace the board.</p>
<p>No shifting between first and second mechanical gear</p>	<p>Relays board damaged</p> <p>Fuse F14 blown.</p> <p>Speed change button S14 damaged</p> <p>Speed change sensor damaged</p> <p>Speed change control unit S24 damaged</p> <p>Speed change control unit S24 damaged</p>	<p>Check you have 12V on connector X16 on pins 9 and 11; if necessary replace the board.</p> <p>Check the fuse and replace if necessary.</p> <p>Check you have 12V on contact 5 and, 12V on contact 1 with the button pressed down; change the button if necessary.</p> <p>Check the sensor and replace if necessary.</p> <p>Check the inputs of the control unit: you must have 12V on connector X17 to pin 17 when the button is pressed, and 0V on connector X16 to pin 13 with the machine stopped. If necessary, change the board.</p> <p>Check the control unit's output to 86 of relay K5 and, if necessary, replace.</p>

Trouble	Cause	Solution
	<p>Relays board damaged</p> <p>The coils of the speed change solenoid valves are damaged</p>	<p>Check the outputs of the control unit: you must have 12V on connector X16 to pin 6 when the first gear is put, and 12V on pin 7 with the second gear is put. If necessary, change the board.</p> <p>Check coils Y8-B and Y9-A and replace, if necessary.</p>
<p>The boom does not move</p>	<p>Fuse F24 blown.</p> <p>Road/Jobsite selector turned to a wrong position</p> <p>Road/Jobsite/Platform selector damaged</p> <p>Dead man switch on joystick damaged.</p> <p>Tecnord control unit damaged</p> <p>Solenoid Y43 damaged</p>	<p>Check the fuse and replace if necessary.</p> <p>The key-selector must be turned to "Jobsite".</p> <p>Check the contacts and replace, if necessary. Check you have 12V on contact S33 and on connector XJ1 on pin 7A.</p> <p>Check you have 12V on connector X10 on pin E and there is power on connector J1 on pin 2A; change the joystick, if necessary.</p> <p>Change the control unit.</p> <p>Check you have 12V between the coil contacts when the joystick is moved; or change the solenoid.</p>
<p>The boom cannot be moved up</p>	<p>Fuse F24 blown</p> <p>Joystick damaged</p> <p>Tecnord control unit damaged</p>	<p>Check the fuse and replace if necessary.</p> <p>Check you have 5V on connector X10 on pin A and about 4.25V on pin B with the joystick in "boom up" position: If necessary, replace the joystick.</p> <p>Check you have 4.25V on connector J1 on pin 1B with the joystick in the "boom up" position and about 4.25V on connector J2 on pin 5B with the joystick in the same position. If necessary, change the control unit.</p>

Trouble	Cause	Solution
	<p>Relays board damaged</p> <p>Solenoid Y46-1 damaged</p>	<p>Check the inputs of the control unit: you must have 12V on connector X18 to pins 3 and 10 and about 4.25V on pin 6. Change relay K16 or the relays board.</p> <p>Check you have 12V on contact 1 of the coil, that there is continuity between contact 2 and the ground and you have about 4.25V on contact 3. If necessary, change the solenoid.</p>
<p>The boom cannot be moved down</p>	<p>The machine could be in alarm</p> <p>Fuse F24 blown</p> <p>Joystick damaged</p> <p>Tecnord control unit damaged</p> <p>Relays board damaged</p> <p>Solenoid Y46-1 damaged</p>	<p>Check on the display in the driving cab that the overload warning system is not active.</p> <p>Check the fuse and replace if necessary.</p> <p>Check you have 5V on connector X10 on pin A and about 0.70V on pin B with the joystick in the "boom down" position; if necessary, change the joystick.</p> <p>Check you have 0.70V on connector J1 on pin 1B with the joystick in the "boom down" position and about 0.70V on connector J2 on pin 5B with the joystick in the same position. If necessary, change the control unit.</p> <p>Check the inputs of the control unit: you must have 12V on connector X18 to pins 3 and 10 and about 0.70V on pin 6. Change relay K16 or the relays board.</p> <p>Check you have 12V on contact 1 of the coil, that there is continuity between contact 2 and the ground and you have about 0.70V on contact 3. If necessary, change the solenoid.</p>
<p>The boom cannot be moved out</p>	<p>The machine could be in alarm</p> <p>Fuse F24 blown</p>	<p>Check on the display in the driving cab that the overload warning system is not active.</p> <p>Check the fuse and replace if necessary.</p>

Trouble	Cause	Solution
	<p>Joystick damaged</p> <p>Tecnord control unit damaged</p> <p>Relays board damaged</p> <p>Solenoid Y45-3 damaged</p>	<p>Check you have 5V on connector X10 on pin A and about 4.25V on pin F with the joystick in the "boom out" position; if necessary change the joystick.</p> <p>Check you have about 4.25V on connector J1 on pin 1A with the joystick in the "boom out" position and about 4.25V on connector J2 on pin 8C with the joystick in the same position. If necessary, change the control unit.</p> <p>Check the inputs of the control unit: you must have 12V on connector X18 to pins 3 and 10 and about 4.25V on pin 5. Change relay K15 or the relays board.</p> <p>Check you have 12V on contact 1 of the coil, that there is continuity between contact 2 and the ground and you have about 4.25V on contact 3. If necessary, change the solenoid.</p>
<p>The boom cannot be moved in</p>	<p>Fuse F24 blown</p> <p>Joystick damaged</p> <p>Tecnord control unit damaged</p> <p>Relays board damaged</p> <p>Solenoid Y45-3 damaged</p>	<p>Check the fuse and replace if necessary.</p> <p>Check you have 5V on connector X10 on pin A and about 0.70V on pin F with the joystick in the "boom in" position; if necessary change the joystick.</p> <p>Check you have about 0.70V on connector J1 on pin 1A with the joystick in the "boom in" position and about 0.70V on connector J2 on pin 8C with the joystick in the same position. If necessary, change the control unit.</p> <p>Check the inputs of the control unit: you must have 12V on connector X18 to pins 3 and 10 and about 0.70V on pin 5. Change relay K15 or the relays board.</p> <p>Check you have 12V on contact 1 of the coil, that there is continuity between contact 2 and the ground and you have about 0.70V on contact 3. If necessary, change the solenoid.</p>

Trouble	Cause	Solution
<p>The forks cannot be rotated (retraction)</p>	<p>Fuse F24 blown</p> <p>Joystick damaged</p> <p>Tecnord control unit damaged</p> <p>Solenoid Y44-2 damaged</p>	<p>Check the fuse and replace if necessary.</p> <p>Check you have 5V on connector X10 on pin A and about 0.70V on pin C with the joystick in the "forks retracted" position; if necessary, replace the joystick.</p> <p>Check you have about 0.70V on connector J1 on pin 1C with the joystick in the "forks retracted" position and about 0.70V on connector J2 on pin 5B with the joystick in the same position. If necessary, change the control unit.</p> <p>Check you have 12V on contact 1 of the coil, that there is continuity between contact 2 and the ground and you have about 0.70V on contact 3. If necessary, change the solenoid.</p>
<p>The forks cannot be rotated (extension)</p>	<p>Fuse F24 blown</p> <p>Joystick damaged</p> <p>Tecnord control unit damaged</p> <p>Solenoid Y44-2 damaged</p>	<p>Check the fuse and replace if necessary.</p> <p>Check you have 5V on connector X10 on pin A and about 4.25V on pin C with the joystick in the "forks extended" position; if necessary, replace the joystick.</p> <p>Check you have about 4.25V on connector J1 on pin 1C with the joystick in the "forks extended" position and about 4.25V on connector J2 on pin 5B with the joystick in the same position. If necessary, change the control unit.</p> <p>Check you have 12V on contact 1 of the coil, that there is continuity between contact 2 and the ground and you have about 4.25V on contact 3. If necessary, change the solenoid.</p>
<p>The attachment cannot be locked</p>	<p>Fuse F24 blown</p>	<p>Check the fuse and replace if necessary.</p>

Trouble	Cause	Solution
	<p>Joystick damaged</p> <p>Tecnord control unit damaged</p> <p>Solenoid Y47-4 damaged.</p>	<p>Check you have 5V on connector X10 on pin A and about 12V on pin G when the white button is pressed; if necessary, replace the joystick.</p> <p>Check you have about 12V on connector J1 on pin 3C with the white button pressed and 12V on connector J2 on pin 1B with the joystick in the "attachment locked" position. If necessary, change the control unit.</p> <p>Check there is continuity between contact 2 of the coil and the ground and you have 12V on contact 3 with the joystick in the "attachment locked" position. If necessary, change the solenoid.</p>
The attachment cannot be unlocked	<p>Fuse F24 blown.</p> <p>Joystick damaged</p> <p>Tecnord control unit damaged</p> <p>Solenoid Y47-4 damaged</p>	<p>Check the fuse and replace if necessary.</p> <p>Check you have 5V on connector X10 on pin A and about 12V on pin G when the white button is pressed; if necessary, replace the joystick.</p> <p>Check you have about 12V on connector J1 on pin 3C with the white button pressed and 12V on connector J2 on pin 1C with the joystick in the "attachment unlocked" position. If necessary, change the control unit.</p> <p>Check there is continuity between contact 2 of the coil and the ground and you have 12V on contact 3 with the joystick in the "attachment unlocked" position. If necessary, change the solenoid.</p>
The left outrigger does not move down	<p>Low boom sensor (B38) damaged</p> <p>Outrigger switch S1 damaged</p>	<p>Check the sensor ; check you have 12V on connector J1 on pin 3A; change the sensor, if necessary.</p> <p>Check you have 12V on contact 3 of the switch, and 12V on contact 1 of the switch when the movement is done. Change the switch, if necessary.</p>

Trouble	Cause	Solution
	<p>Tecnord control unit damaged</p> <p>Solenoid Y13-E damaged</p>	<p>Check you have 12V on connector J1 on pin 5B and on connector J2 to pin 2A when the movement is done; if necessary, change the control unit.</p> <p>During movement, check you have 12V between the two contacts of the coil; or change the solenoid.</p>
The left outrigger does not move up	<p>Low boom sensor (B38) damaged</p> <p>Outrigger switch S1 damaged</p> <p>Tecnord control unit damaged</p> <p>Solenoid Y12-D damaged</p>	<p>Check the sensor ; check you have 12V on connector J1 on pin 3A; change the sensor, if necessary.</p> <p>Check you have 12V on contact 3 of the switch, and 12V on contact 7 of the switch when the movement is done. Change the switch, if necessary.</p> <p>Check you have 12V on connector J1 on pin 4A and on connector J2 to pin 1A when the movement is done; if necessary, change the control unit.</p> <p>During movement, check you have 12V between the two contacts of the coil; or change the solenoid.</p>
The right outrigger does not move down	<p>Low boom sensor (B38) damaged</p> <p>Outrigger switch S2 damaged</p> <p>Tecnord control unit damaged</p> <p>Solenoid Y11-C damaged</p>	<p>Check the sensor ; check you have 12V on connector J1 on pin 3A; change the sensor, if necessary.</p> <p>Check you have 12V on contact 3 of the switch, and 12V on contact 1 of the switch when the movement is done. Change the switch, if necessary.</p> <p>Check you have 12V on connector J1 on pin 6C and on connector J2 to pin 4A when the movement is done; if necessary, change the control unit.</p> <p>During movement, check you have 12V between the two contacts of the coil; or change the solenoid.</p>

Trouble	Cause	Solution
The right outrigger does not move up	Low boom sensor (B38) damaged	Check the sensor ; check you have 12V on connector J1 on pin 3A ; change the sensor, if necessary.
	Outrigger switch S2 damaged	Check you have 12V on contact 3 of the switch, and 12V on contact 7 of the switch when the movement is done. Change the switch, if necessary.
	Tecnord control unit damaged	Check you have 12V on connector J1 on pin 5A and on connector J2 to pin 3A when the movement is done; if necessary, change the control unit.
	Solenoid Y10-F damaged	During movement, check you have 12V between the two contacts of the coil; or change the solenoid.
No sway to the right	Low boom sensor (B38) damaged	Check the sensor ; check you have 12V on connector J1 on pin 3A ; change the sensor, if necessary.
	Sway switch S3 damaged	Check you have 12V on contact 3 of the switch, and 12V on contact 7 of the switch when the movement is done. Change the switch, if necessary.
	Tecnord control unit damaged	Check you have 12V on connector J1 on pin 6A and on connector J2 to pin 6A when the movement is done; if necessary, change the control unit.
	Solenoid Y15-B damaged	During movement, check you have 12V between the two contacts of the coil; or change the solenoid.
No sway to the left	Low boom sensor (B38) damaged	Check the sensor ; check you have 12V on connector J1 on pin 3A ; change the sensor, if necessary.

Trouble	Cause	Solution
	<p>Sway switch S3 damaged</p> <p>Tecnord control unit damaged</p> <p>Solenoid Y14-A damaged</p>	<p>Check you have 12V on contact 3 of the switch, and 12V on contact 1 of the switch when the movement is done. Change the switch, if necessary.</p> <p>Check you have 12V on connector J1 on pin 6B and on connector J2 to pin 5A when the movement is done; if necessary, change the control unit.</p> <p>During movement, check you have 12V between the two contacts of the coil; or change the solenoid.</p>
The rear steering axle of the machine remains locked	<p>Fuse F18 damaged</p> <p>Proximity sensor B41 damaged</p> <p>Relay K21 damaged</p> <p>Solenoids Y50 and Y51 damaged</p>	<p>Check the fuse and replace if necessary.</p> <p>With the sensor excited, check you have 12V on connector X18 to pin 9; or change the sensor.</p> <p>Check you have 12V on connector X18 to pin 1; or change the relay.</p> <p>Check you have 12V between the two contacts of the coils; or change the coils.</p>
The 4-wheel steer does not function	<p>Steering solenoid valve damaged</p> <p>Fuse F13 damaged</p> <p>Road/Jobsite key-selector damaged</p> <p>Steering selector S22 damaged</p>	<p>During movement, check you have 12V between the two contacts of the coil; or change the solenoid.</p> <p>Check the fuse and replace if necessary.</p> <p>Check that the selector is in the "Jobsite" position. Check you have 12V on contact S22; if necessary, change the selector.</p> <p>Check you have 12V on pins A and C on the selector; or change the selector.</p>

Trouble	Cause	Solution
	Solenoid Y20-A damaged	Check you have 12V between the two contacts of the coil; or change the solenoid.
The crab steer does not function	Fuse F13 damaged	Check the fuse and replace if necessary.
	Road/Jobsite key-selector damaged	Check that the selector is in the "Jobsite" position. Check you have 12V on contact S32 ; if necessary, change the selector.
	Steering selector S22 damaged	Check you have 12V on pins A and B on the selector; or change the selector.
	Solenoid Y21-B damaged	Check you have 12V between the two contacts of the coil; or change the solenoid.
The horn does not function	Fuse F21 damaged	Check the fuse and replace if necessary.
	Fuse F3 damaged	Check the fuse and replace if necessary.
	Horn button damaged	Check you have 12V on connector X11 to pin 1 of the selector and 12V on connector X11 to pin 13 with the button pressed down; or change the selector.
	Relay K3 damaged	With the button pressed, check you have 12V on connector X9 to pin 4 and connector X17 to pins 14 and 17 ; or change the relay.
	Horn H20 damaged	Check you have 12V between the two wires connected to the horn; if there is power, change the horn.
The position lights do not function	Fuses F7, F8, F10 and F17 damaged	Check the fuses and replace if necessary.
	Switch S19 damaged	Check you have 12V on contacts 2, 3 and 6 of the switch; or replace the switch.
	Lamps damaged	Check the lamps and replace if necessary.

TROUBLESHOOTING

Trouble	Cause	Solution
<p>The low beams do not function</p>	<p>Fuse F10 damaged</p> <p>Switch S19 damaged</p> <p>Lights selector SX11 damaged</p> <p>Fuse F15 damaged</p> <p>Relay K1 damaged</p> <p>Lamps damaged</p>	<p>Check the fuse and replace if necessary.</p> <p>Check you have 12V on contact 1, 2 and 3 of the switch; or replace the switch.</p> <p>Check you have 12V on connector X11 to pins 3 and 4; or change the lights selector.</p> <p>Check the fuse and replace if necessary.</p> <p>Check you have 12V on connector X17 to pins 16 and 4; or change the relay.</p> <p>Check the lamps and replace if necessary.</p>
<p>The high beams do not function</p>	<p>Fuse F10 damaged</p> <p>Switch S19 damaged</p> <p>Lights selector SX11 damaged</p> <p>Fuse F6 damaged</p> <p>Relay K2 damaged</p> <p>Lamps damaged</p>	<p>Check the fuse and replace if necessary.</p> <p>Check you have 12V on contact 1, 2 and 3 of the switch; or replace the switch.</p> <p>Check you have 12V on connector X11 to pins 4 and 5; or change the lights selector.</p> <p>Check the fuse and replace if necessary.</p> <p>Check you have 12V on connector X17 to pins 15 and 11; or change the relay.</p> <p>Check the lamps and replace if necessary.</p>
<p>The turn signals do not function</p>	<p>Fuse F1 damaged</p> <p>Lights selector SX11 damaged</p>	<p>Check the fuse and replace if necessary.</p> <p>Check you have 12V on connector X11 to pin 1, then activate the turn signals and check that pins 9 and 10 are powered intermittently. If necessary, change the lights selector.</p>

Trouble	Cause	Solution
	Turn signals' lamps damaged	Check the lamps and replace if necessary.
The beacon does not function	Fuse F4 damaged Beacon (X101) damaged Beacon lamp (X101) damaged	Check the fuse and replace if necessary. Check you have 12V on connector X26 to pin 6 ; or change the beacon. Check the lamp and replace if necessary.
The engine water temperature indicator does not function	Fuse F9 damaged High water temperature thermostat (B13) damaged High water temperature indicator (P1) damaged	Check the fuse and replace if necessary. Check the thermostat and replace if necessary. Check you have 12V between pins 6 and 3 of connector XP1 . Or change the indicator.
The hydraulic oil temperature indicator does not function	Fuse F9 damaged Hydraulic oil temperature thermostat (B16) damaged Hydraulic oil temperature indicator (P2) damaged	Check the fuse and replace if necessary. Check the thermostat and replace if necessary. Check you have 12V between pins 6 and 3 of connector XP2 . Or change the indicator.
The fuel gauge does not function	Fuse F9 damaged Fuel level float (B12) damaged Fuel level indicator (P3) damaged	Check the fuse and replace if necessary. Check the float and replace if necessary. Check you have 12V on connector XP3 to pin 1 and there is continuity between pins 3 and 4 and the ground; if necessary, change the indicator.
The emergency pump do not work	Fuses F4G and F20 damaged	Check the fuses and replace if necessary.

Trouble	Cause	Solution
	<p>Emergency stop switch (S13) damaged</p> <p>Relay K13 damaged</p> <p>Emergency pump button (S17) damaged</p> <p>Relay K04 damaged</p> <p>Electropump M2 damaged</p>	<p>With the emergency switch pressed, check you have not 12V on pin 6 of connector X6; or change the switch contact.</p> <p>Check you have 12V on pins 5 and 6 of connector X6; or change the relay.</p> <p>Check you have 12V on contact 5 and that 12V reach contact 1 when the button is pressed. If necessary change the button.</p> <p>Check you have 12V on connector X29 to pin 13 and on the relay to contact 87; or change the relay.</p> <p>With the button pressed, check you have 12V between the two contacts of the coil; or change the coil.</p>
The heating fan does not function	<p>Fuse F2 damaged</p> <p>Switch S20 damaged</p> <p>Fan body M5 damaged</p>	<p>Check the fuse and replace if necessary.</p> <p>Check you have 12V on contact 3, 12V on contact 5 when the switch is on the first step and 12V on contact 1 when the switch is pressed down. If necessary change the switch.</p> <p>With the fan to first speed, check you have 12V between pins 4 and 1 of connector XM5. With the fan to second speed, check you have 12V between pins 3 and 1 of connector XM5; if necessary, change the fan.</p>
The battery warning light remains lit	Alternator A1 damaged	Check the efficiency of the alternator and replace, if necessary.
Hourmeter P4 does not function	Alternator A1 damaged	Check you have 12V on pin 13 of connector X19 ; if necessary, change the alternator.

Trouble	Cause	Solution
	Hourmeter P4 damaged	Check you have 12V between the two contacts of the hourmeter; if necessary, change the hourmeter.
The warning light of the parking brake does not function	Fuse F2G damaged Contact S6a damaged The lamp of the parking brake light is damaged	Check the fuse and replace if necessary. With a continuity tester, check that the contact is closed, or replace. Check there are 12V between pins 1 and 2 ; or change the lamp.
The air filter restriction warning light does not function	Fuse F2G damaged Air filter restriction bulb (B15) damaged The lamp of the warning light is damaged	Check the fuse and replace if necessary. Check the efficiency of the bulb and replace, if necessary. Check you have 12V between pins 1 and 5 ; or change the lamp.
The light warning of a low engine oil pressure does not function	Fuse F2G damaged Low engine oil pressure bulb (B11) damaged The lamp of the warning light is damaged	Check the fuse and replace if necessary. Check the efficiency of the bulb and replace, if necessary. Check you have 12V between contacts 7 and 2 of connector X1 ; or change the lamp.
The light warning of a low pressure in the braking system does not go off	Sensor B56 damaged	Check the efficiency of the bulb and replace, if necessary.
The windscreen wiper does not function	Fuse F1 damaged. Wiper control SX11 damaged	Check the fuse and replace if necessary. Check you have 12V on connector X11 to pin 1 . With the wiper to first speed, check you have 12V on connector X11 to pin 2 , and with the wiper to second speed, check you have 12V on pin 8 . If necessary, change the wiper control.

Trouble	Cause	Solution
	Wiper motor M13 damaged	Check you have 12V on connector X13 to pin 3 , and, with selecting the two speeds one at a time, check there is power on pins 2 and 4 of connector X13 . If necessary, change the motor.
The windscreen washer does not function	Fuse F1 damaged Washer control SX11 damaged Washer motor M91 damaged	Check the fuse and replace if necessary. Check you have 12V on connector X11 to pin 1 and, with the button pressed, check that pin 7 is powered; or change the button. With the button pressed, check you have 12V between the two contacts of the motor; or change the motor.
The cab interior lights do not function	Fuse F23 damaged Lamps damaged	Check the fuse and replace if necessary. Check you have 12V on pin 5 of connector X8 ; or change the lamp.
The display of the overload warning system does not turn on	Fuse F25 damaged Display damaged	Check the fuse and replace if necessary. Check you have 12V between pins 1 and 2 of the connector; or change the display.
The machine is in alarm and lets you operate only the lowering and retraction movements (without displaying any alarm codes)	Display damaged Tecnord control unit damaged	Check you have 12V between pins 1 and 2 of the connector; or change the display. Check you have 12V on pin 4B of connector XJ1 ; or change the control unit.
The display does not change the reading scale when you switch from machine on wheels to machine on outriggers	Outrigger limit switches (S51 and S52) damaged	Lower the outriggers to the ground and, with a tester, check that the two NO contacts of the limits switches are closed. Check you have 12V on pin 10 of connector X22 . If necessary, change the limit switches.

Trouble	Cause	Solution
	Display damaged	With the outriggers down to the ground, check you have 12V between pins 2 and 5 of connector X29 . If necessary, change the display.

5.4 HYDRAULIC FAULTS

Trouble	Cause	Solution
The machine does not move	Drive pump maladjusted	Re-adjust as per enclosed instructions.
	DA valve damaged	Check and replace, if necessary.
Poor boost pressure	Booster pump damaged	Change the pump.
	Suction filter restricted	Change the filter.
	Hydraulic motor damaged	Change the motor.
The machine drive is low	Hydraulic oil filter restricted	Change the hydraulic oil filter.
	Low oil level	Top up.
	Hydraulic oil soiled	Clean the tank and the pipes, empty the pumps and add new oil.
	Pump and motor worn (serious leakage)	Change pump and motor.
No shifting between 1st and 2nd mechanical gear	Boost pressure low	Check the boost pressure.
	Mechanical gear selection solenoid valve ref. EV5-B-Y8 - EV6-A-Y9 damaged	Check the mechanical movement of the pin of the solenoid valve and the coil.
	Mechanical gear hydraulic actuator damaged	Check the efficiency of the actuator.
No steering selection	Gearbox gears damaged	Check and replace the gears if necessary.
	Steering selection solenoid valve ref. EV3-B-Y21 - EV4-A-Y20 damaged	Check the movement of the pin inside the solenoid valve and the coil.
Poor action of the parking brake	Negative parking brake ref. P1 damaged	Check the brake is in efficient working order or replace.
	Parking brake hand-control damaged	Check the parking brake control; replace if necessary.

Trouble	Cause	Solution
The right - left sway does not work	Sway cylinders damaged	Check or replace the internal seals, if necessary
	Block valves damaged	Check the sliders and the coils of the solenoid valves.
	Solenoid valves EV11-A-Y14 - EV12-B-Y15 do not work.	Check the sliders and the efficiency of the solenoid valves.
The outriggers do not work	Outrigger cylinders damaged	Check the efficiency and the internal seals of the cylinder.
	Outrigger cylinders' block valves damaged	Check the efficiency of the valves and that the internal pistons slide correctly.
	Outriggers' solenoid valves (EV7-D-Y12 - EV8-E-Y13 - EV9-F-Y10 - EV10-C-Y11) damaged	Check the efficiency of the solenoid valves.
The machine does not steer	Main pump damaged	Check the max pressure.
	Load-sensing priority valve damaged	The priority valve does not deliver hydraulic oil to the hydraulic drive; change the valve unit.
	Hydraulic drive damaged.	Check the efficiency of the hydraulic drive and if the pilot activates the priority valve.
	Steering cylinders damaged	Check the efficiency and the internal seals of the cylinders.
	Steering selection valve (EV3-B-Y21 - EV4-A-Y20) damaged	Check that the internal piston of the solenoid valve and the coil are in efficient working order.
The boom does not move	Main gear pump damaged	The pump does not deliver oil. Check the max output pressure of the pump
	Load-sensing priority valve damaged	Valve restricted or damaged; remove and check the seals and the efficiency of the slider.
	Tecnord control block damaged	Check the efficiency of the control block (see par. 2 - sect. "Technical Specifications"). Remove the pressure relief valve and eliminate any dirt.

Trouble	Cause	Solution
When the brake pedal is stepped down, the machine does not brake	<p>Auxiliary pump damaged</p> <p>Brake pump damaged</p> <p>Brakes damaged or worn out</p> <p>Accumulators R1-R2 damaged</p>	<p>Check the pump thoroughly.</p> <p>Check the pump thoroughly.</p> <p>Check the efficiency of the disks; replace, if necessary.</p> <p>Check and replace, if necessary.</p>
The attachment locking cylinder does not work	<p>Attachment locking cylinder damaged</p> <p>Quick couplings damaged</p> <p>The hydraulic line between control block and quick couplings is defective</p>	<p>Check the efficiency of the cylinder; replace the internal seals, if necessary.</p> <p>Check and replace, if necessary.</p> <p>Check and replace any damaged or restricted hose.</p>
The forks cannot be pitched perfectly	<p>Fork cylinder damaged</p> <p>Fork cylinder block valve damaged</p> <p>The hydraulic line between control block and block valve is defective</p> <p>Safety valves maladjusted or damaged</p>	<p>Change the seals and check the tightness of the cylinder.</p> <p>Remove and clean the valve; check its seals and replace if necessary.</p> <p>Check and replace any damaged or restricted hose.</p> <p>Check the efficiency of the safety valves fitted to ports A and B of the control block; adjust or replace.</p>
The boom cannot be moved out (Telelift 3713 Elite)	<p>Extension cylinder inside the boom damaged</p> <p>Extension cylinder outside the boom damaged</p> <p>Control block maladjusted</p>	<p>Check the seals of cylinder, rod and re-sequencing valve (located at the top of the rod); replace any defective parts.</p> <p>Check the seals of cylinder, rod and re-sequencing valve (located at the top of the rod); replace any defective parts.</p> <p>Check if the control block reaches the max working pressure (see par. 2 - section "Technical Specifications")</p>

Trouble	Cause	Solution
	<p>Mechanical jamming</p> <p>The line feeding the cylinders is defective or damaged.</p>	<p>Check the boom. In case of mechanical jamming, rectify.</p> <p>Check and replace any defective parts which stop the flow of the hydraulic oil to the cylinders.</p>
<p>The boom cannot be moved out (Telelift 4017-4514)</p>	<p>Extension cylinder outside the boom damaged</p> <p>Control block maladjusted</p> <p>Mechanical jamming</p> <p>Block valve damaged</p> <p>The hydraulic line feeding the boom is defective</p> <p>Boom extension valve on control block damaged</p>	<p>Check the state of the seals on cylinder and rod; if necessary, repair or replace the cylinder.</p> <p>Check the max pressure.</p> <p>Check the boom. In case of mechanical jamming, rectify.</p> <p>Remove and clean the valve; check its seals and replace if necessary.</p> <p>Check and replace any damaged or restricted hose.</p> <p>Check the calibration of the valve to be sure it opens at 150 bar.</p>
<p>The boom cannot be moved up</p>	<p>Lifting cylinder damaged</p> <p>Block valve damaged</p> <p>Control block maladjusted</p>	<p>Change the seals and check the tightness of the cylinder.</p> <p>Remove and clean the valve; check its seals and replace if necessary.</p> <p>Check the max pressure.</p>
<p>The boom jerks when moved down</p>	<p>Accumulator damaged</p>	<p>Carefully check the accumulator (1.5 litres), the fill pressure and, if necessary, replace.</p>
<p>The boom telescopes are frequently out of sequence (Telelift 3713 Elite)</p>	<p>Seals of the extension cylinder damaged</p> <p>Re-sequencing valves damaged</p> <p>Air in the circuit</p>	<p>Change the seals and check the tightness of the cylinder.</p> <p>Remove and clean the valves; check their seals and replace if necessary.</p> <p>Bleed (see Use and Maintenance manual).</p>

Trouble	Cause	Solution
When the boom is moved up or down, the forks cannot be levelled	Balancing cylinder damaged Control blocksafety valves damaged Check valve dirty or damaged Pressure relief valve damaged Block valves damaged Hydraulic line defective	Check the cylinder efficiency and the state of the internal seals. Check the efficiency of the safety valves fitted to ports A and B of the control block; adjust or replace. Remove and clean the valve; check its seal and replace if necessary. Remove and clean the valve; check its seal and replace if necessary. Remove and clean the valves; check their seals and replace if necessary. Check and replace any damaged or restricted hose.
The booms swings when moved out	Pads worn Poor lubrication of the boom Paint or abrasion on the pad sliding rail	Check the pads for wear and replace if necessary. Smear the sliding zone of the pad with grease. Grind and polish the pad's sliding zone on the boom, then grease.
The boom moves hardly in when fully extended and horizontal	Pads worn Control block maladjusted	Carefully check all of the front and rear pads of the boom; lubricate with the special grease. Check the max pressure.
The radiator fan does not work The cylinder locking the rear axle	Bushing between engine/radiator damaged. Fan motor damaged. Reducer between engine and radiator fan damaged.	Check and replace the bushing if necessary. Check and replace the motor if necessary. Check and replace the reducer if necessary.

Trouble	Cause	Solution
does not unlock when the boom is high (Telelift 4017-4514)	Cylinder damaged. Solenoid valves EV14-Y50 - EV15-Y51 defective.	Check the internal kit and the rod for wear. Remove the solenoid valves, check any mechanical parts and repair or replace those defective.
The cylinder locking the rear axle does not unlock when the boom is low (Telelift 4017-4514)	Solenoid valves EV14-Y50 - EV15-Y51 defective.	Remove the solenoid valves, check any mechanical parts and repair or replace those defective.































































Section 6

SCHEMES


SECTION INDEX

6.1	Hydraulic symbols.....	page	2
6.2	Hydraulic schemes		5
6.2.1	Telelift 3713 Elite		5
6.2.2	Telelift 4017-4514.....		6
6.3	Electrical symbols		9
6.4	Wiring diagrams Telelift 3713 Elite-4017-4514.....		11
6.4.1	Sheet 1 of 9		11
6.4.2	Sheet 2 of 9		12
6.4.3	Sheet 3 of 9		13
6.4.4	Sheet 4 of 9		14
6.4.5	Sheet 5 of 9		15
6.4.6	Sheet 6 of 9		16
6.4.7	Sheet 7 of 9		17
6.4.8	Sheet 8 of 9		18
6.4.9	Sheet 9 of 9		19
6.4.10	Wiring diagrams - Component description		20
6.4.11	Fuses and relays wiring diagram		23
6.4.12	Engine compartment fuses and relays		24
6.5	Position of the electrical and hydraulic components on the machine ..		25
6.6	Wiring diagram - Platform/boom connection.....		29
6.7	TECNORD control unit connections.....		30
6.8	TECNORD button panel connections.....		32
6.9	DLE system lay-out.....		33


6.1 HYDRAULIC SYMBOLS

MOTORS					
	Fixed motor with one direction of flow		Mechanical control with roller		Combined non-return and throttle valve
	Fixed motor with two directions of flow		Electro-magnetic control with winding (solenoid)		Switching valve
	Variable motor with two directions of flow		Control with electric motor		Pressure relief valve with direct control
	Reversible fixed motor with two directions of flow		Direct pressure control		Pressure relief valve with hydraulic control
PUMP					
	Fixed displacement pump with one direction of flow		Indirect (piloted) pressure control		Pressure reducing valve
	Fixed displacement pump with two directions of flow		Control with electromagnet and piloted distributor		Sequence valve
	Variable displacement pump with one direction of flow	PIPES AND CONNECTIONS			Adjustable throttle valve
	Variable displacement pump with flow regulator		Induction and return pipe		Two-way flow regulator
CYLINDERS			Piloting pipe		Cut-out cock
	Single-acting cylinder		Blow-by pipe	POWER SOURCES	
	Single-acting cylinder with spring return		Flexible hose		Electric motor
	Double-acting cylinder		Connecting point		Thermal engine
	Double-acting cylinder with bilateral rod		Pipe cross without connection	OTHER EQUIPMENT	
	Telescopic cylinder		Breather		Accumulator
COMMANDS AND CONTROLS			Closed pressure fitting		Water tank
	Shaft rotating in one direction		Pressure fitting with connected pipe		Compressor
	Shaft rotating in two directions		Quick fitting		Filter
	Hand-operated control		Quick fitting with check valves		Cooler
	Hand-operated control with pushbutton	DISTRIBUTION - SETTING ELEMENTS			Pressure gauge
	Hand-operated control with lever		Non-return valve		Thermometer
	Hand-operated control with pedal		Calibrated non-return valve		Flowmeter
	Mechanical control with pushbutton		Unlockable non-return valve		Pressure switch
	Mechanical control with spring				Drain to tank indication


DISTRIBUTION - SETTING ELEMENTS




Two-position and two-way distributor, with manual lever control and spring return




Three-way and two-position distributor, with hydraulic control




Two-position, three-way distributor, with electro-magnetic control and spring return





Distributor with mechanical control and span proportional to the action of the same control




Two-position, three-way distributor, with representation of transient connection during passage phase



Electro-hydraulic single-acting servo valve



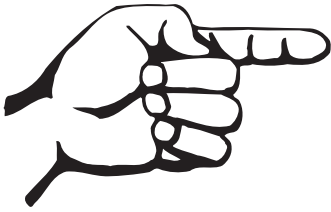


Intentionally blank page

6.2 HYDRAULIC SCHEME


6.2.1 Telelift 3713 Elite

TELELIFT 3713 Elite
 From serial n. 11376
 To serial n. 14856

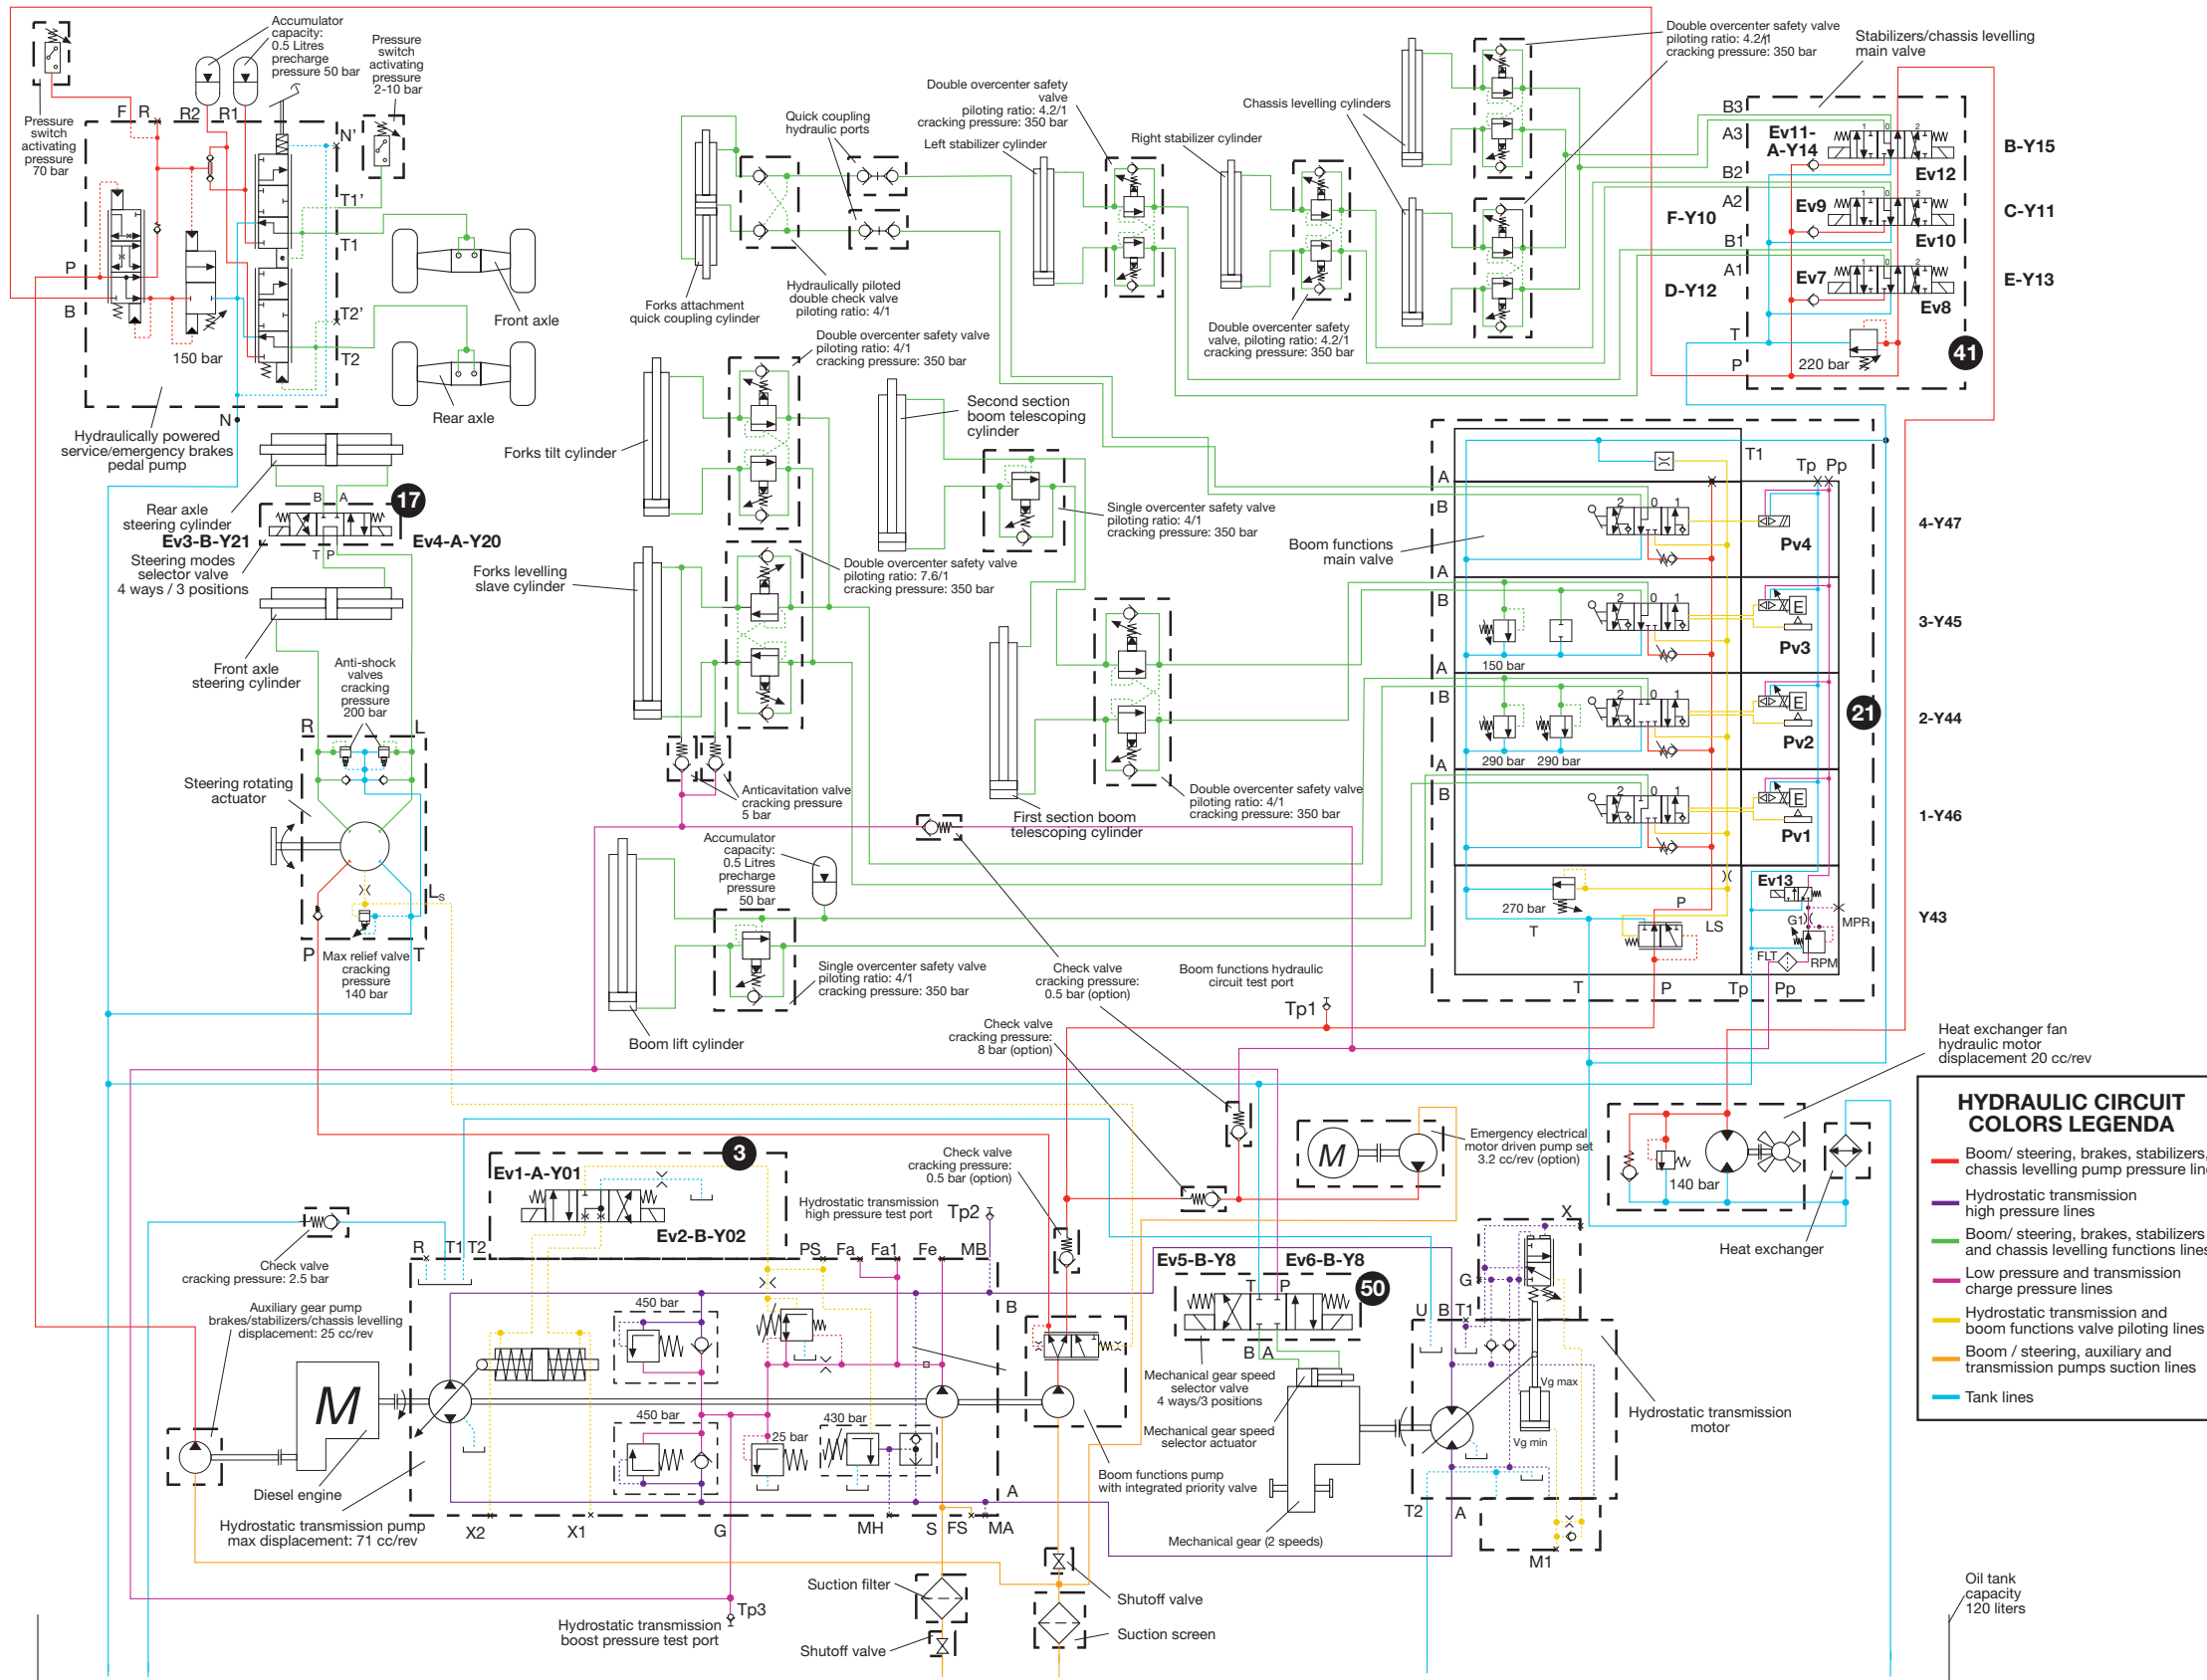


HYDRAULIC CIRCUIT COLORS LEGENDA

- Boom/ steering, brakes, stabilizers, chassis levelling pump pressure lines
- Hydrostatic transmission high pressure lines
- Boom/ steering, brakes, stabilizers and chassis levelling functions lines
- Low pressure and transmission charge pressure lines
- Hydrostatic transmission and boom functions valve piloting lines
- Boom / steering, auxiliary and transmission pumps suction lines
- Tank lines




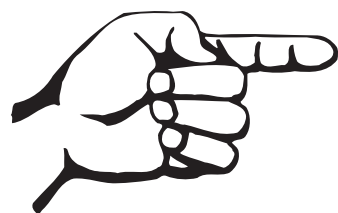











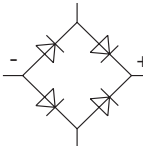




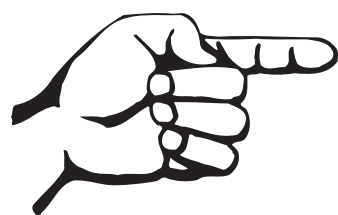






















Intentionally blank page




Intentionally blank page


6.3 ELECTRICAL SYMBOLS

        	<p>ACTUATORS</p> <p>Emergency controls</p> <p>Pushbutton control</p> <p>Rotary control</p> <p>Pedal control</p> <p>Proximity control</p> <p>Lever control</p> <p>Timed control</p> <p>Mechanical/manual control</p> <p>Key control</p>	  	<p>ACCUMULATORS</p> <p>Battery</p> <p>Thermocouple</p> <p>Element</p> <p>TERMINALS AND GROUNDS</p> <p>Ring</p> <p>Ground</p> <p>Terminal</p> <p>Ground to frame</p> <p>Knot</p> <p>Protection ground</p> <p>Frame ground 2</p>	<p>COILS</p> <p>Coil</p> <p>Mechanical coupling coil</p> <p>Winding</p> <p>A/C coil</p> <p>Coil with diode</p> <p>Winding with diode</p> <p>CONNECTORS</p> <p>Connector</p> <p>STATIC APPLICATIONS</p> <p>Auto-transformer</p> <p>Transformer</p>	  	<p>DYNAMIC APPLICATIONS</p> <p>Motor</p> <p>Generator</p> <p>As_3p_motor</p> <p>ELECTRONIC PARTS</p>    	<p>ELECTRONIC PARTS</p> <p>Rectifier</p> <p>Light-emitting diode</p> <p>Diode</p> <p>Condenser</p>
   	<p>RESISTANCES</p> <p>Resistance</p> <p>Resistor</p> <p>Potentiometer</p> <p>Variable resistance</p>	     	<p>PUSHBUTTONS</p>          	<p>PUSHBUTTONS</p> <p>Manual NC contact</p> <p>Manual NO contact</p> <p>NC mushroom-head pushbutton</p> <p>NO mushroom-head pushbutton</p> <p>NC level</p> <p>NO level</p> <p>Pushbutton with NC return</p> <p>Pushbutton with NO return</p> <p>NC tie-rod</p> <p>NO tie-rod</p>	<p>FUSES AND RELAYS</p>  	<p>SIGNALS</p> <p>Intermittent lamp</p> <p>Whistle</p> <p>Lamp</p> <p>Buzzer</p> <p>Siren</p> <p>Bell</p> <p>Horn</p> <p>FUSES AND RELAYS</p> <p>Horizontal fuse</p> <p>Relay</p>	


DISTRIBUTION - SETTING ELEMENTS




Two-position and two-way distributor, with manual lever control and spring return




Three-way and two-position distributor, with hydraulic control




Two-position, three-way distributor, with electro-magnetic control and spring return





Distributor with mechanical control and span proportional to the action of the same control



Two-position, three-way distributor, with representation of transient connection during passage phase




Electro-hydraulic single-acting servo valve




6.4 WIRING DIAGRAMS

6.4.1 Sheet 1 of 9


Telelift 3713 Elite valid from serial number 11376

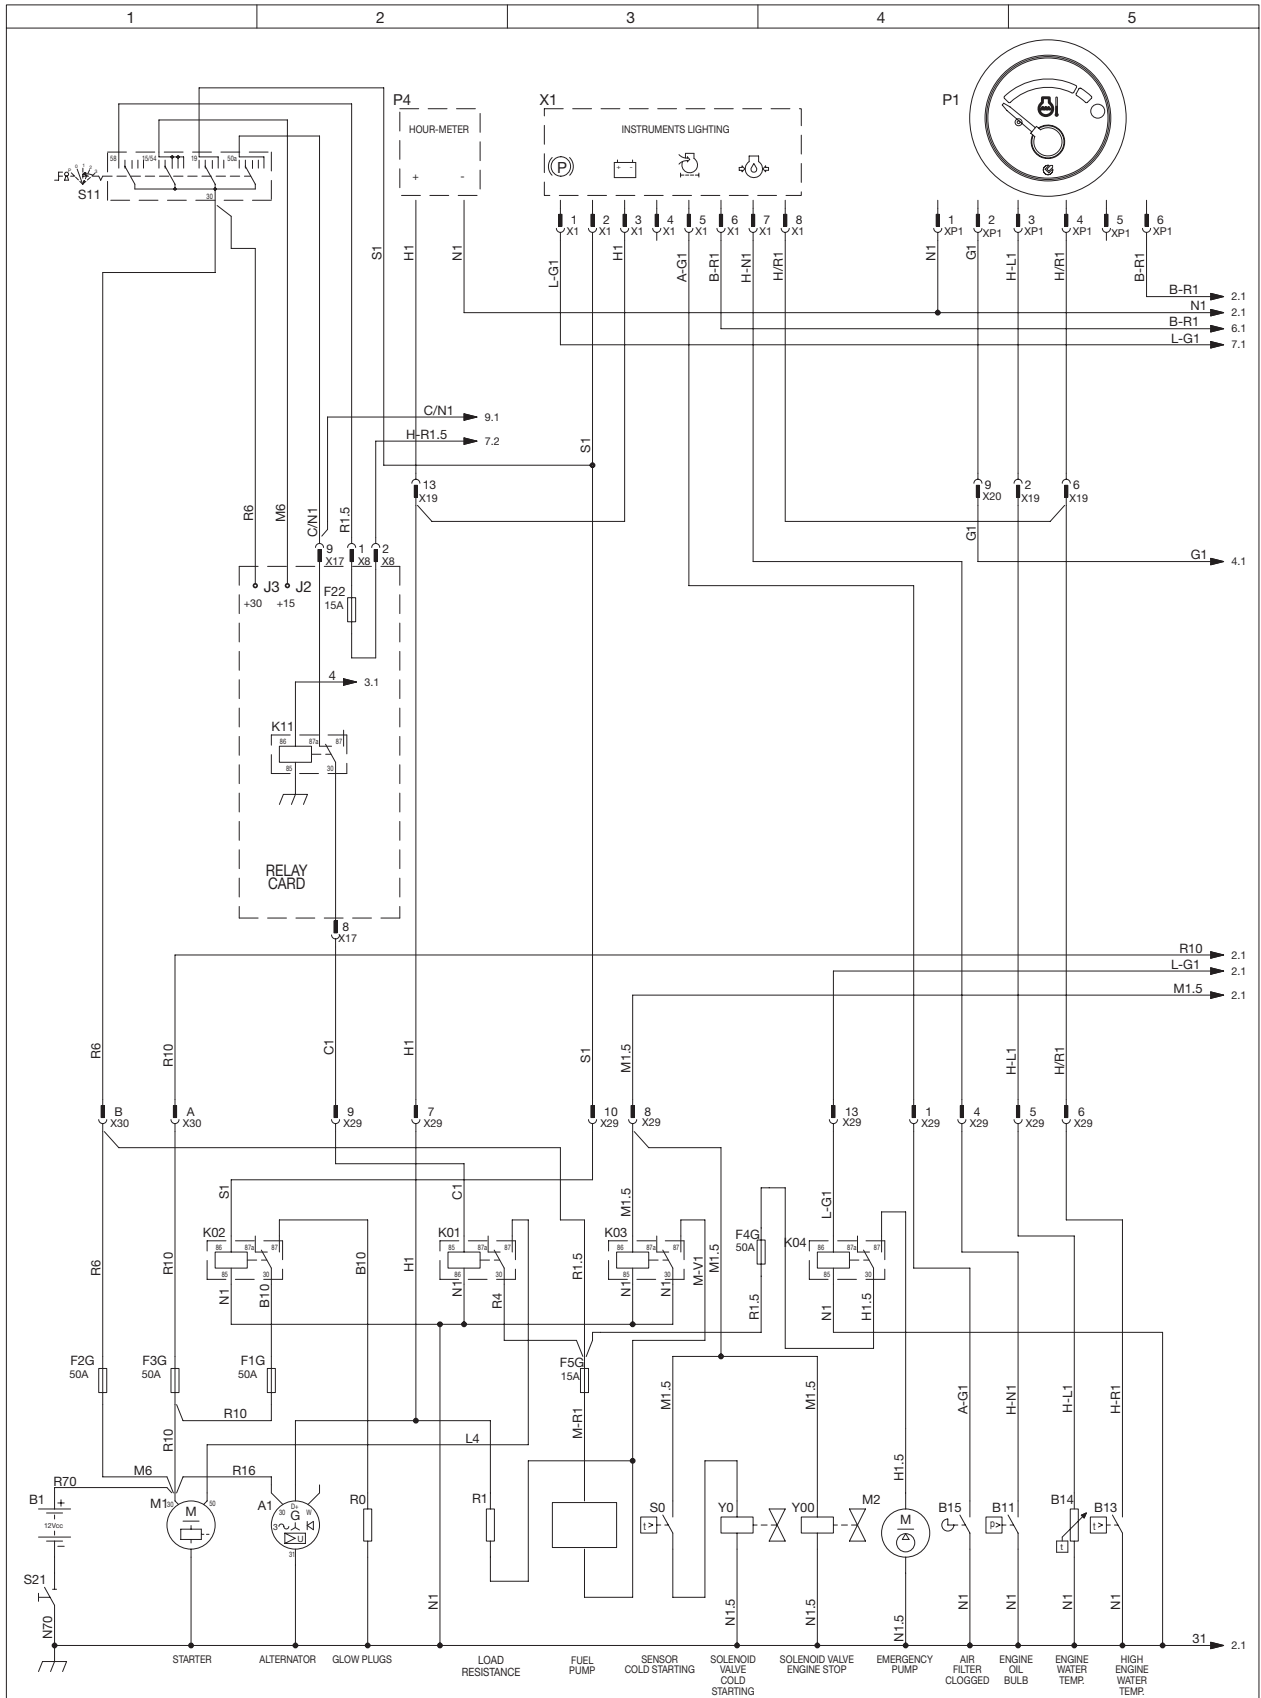


6.4.2 Sheet 2 of 9

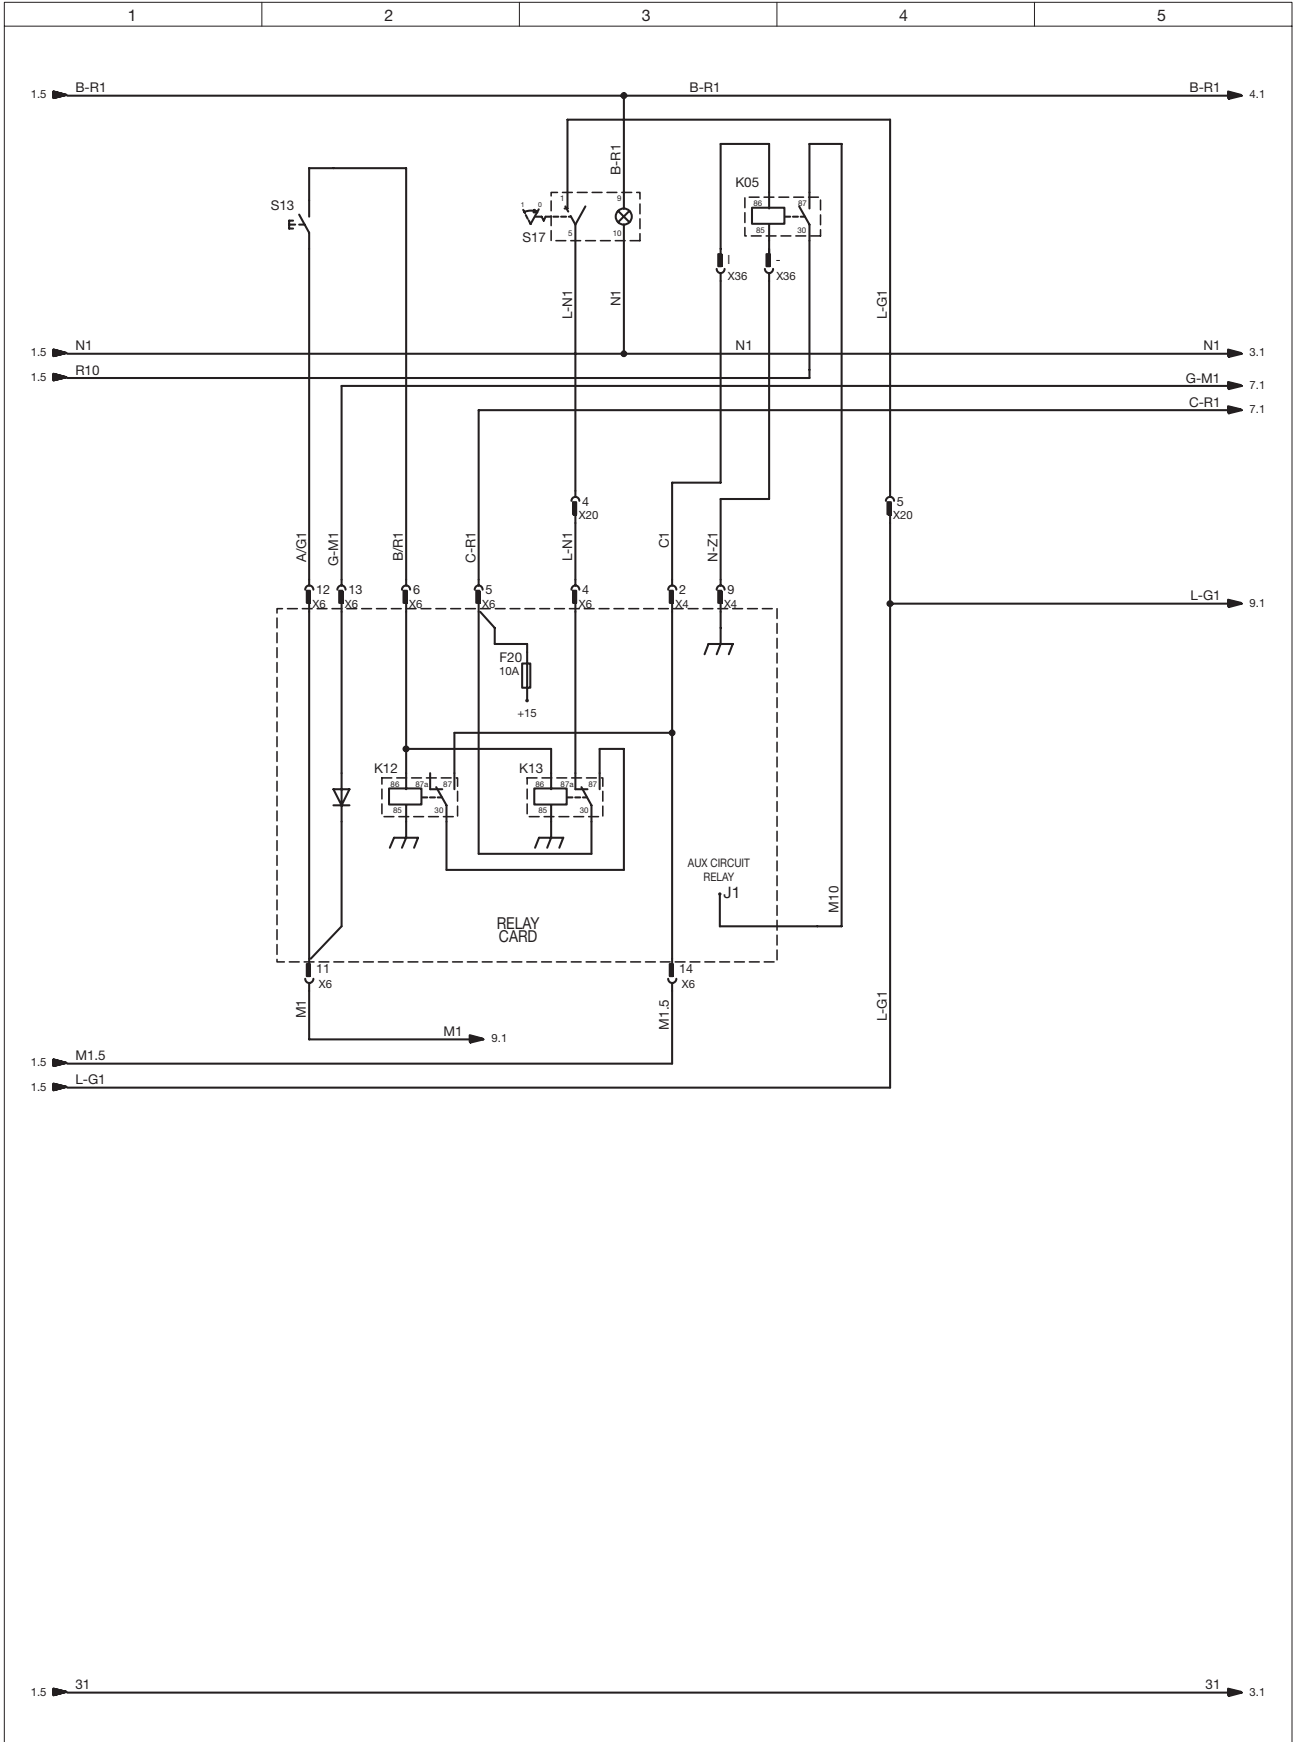


6.4.3 Sheet 3 of 9

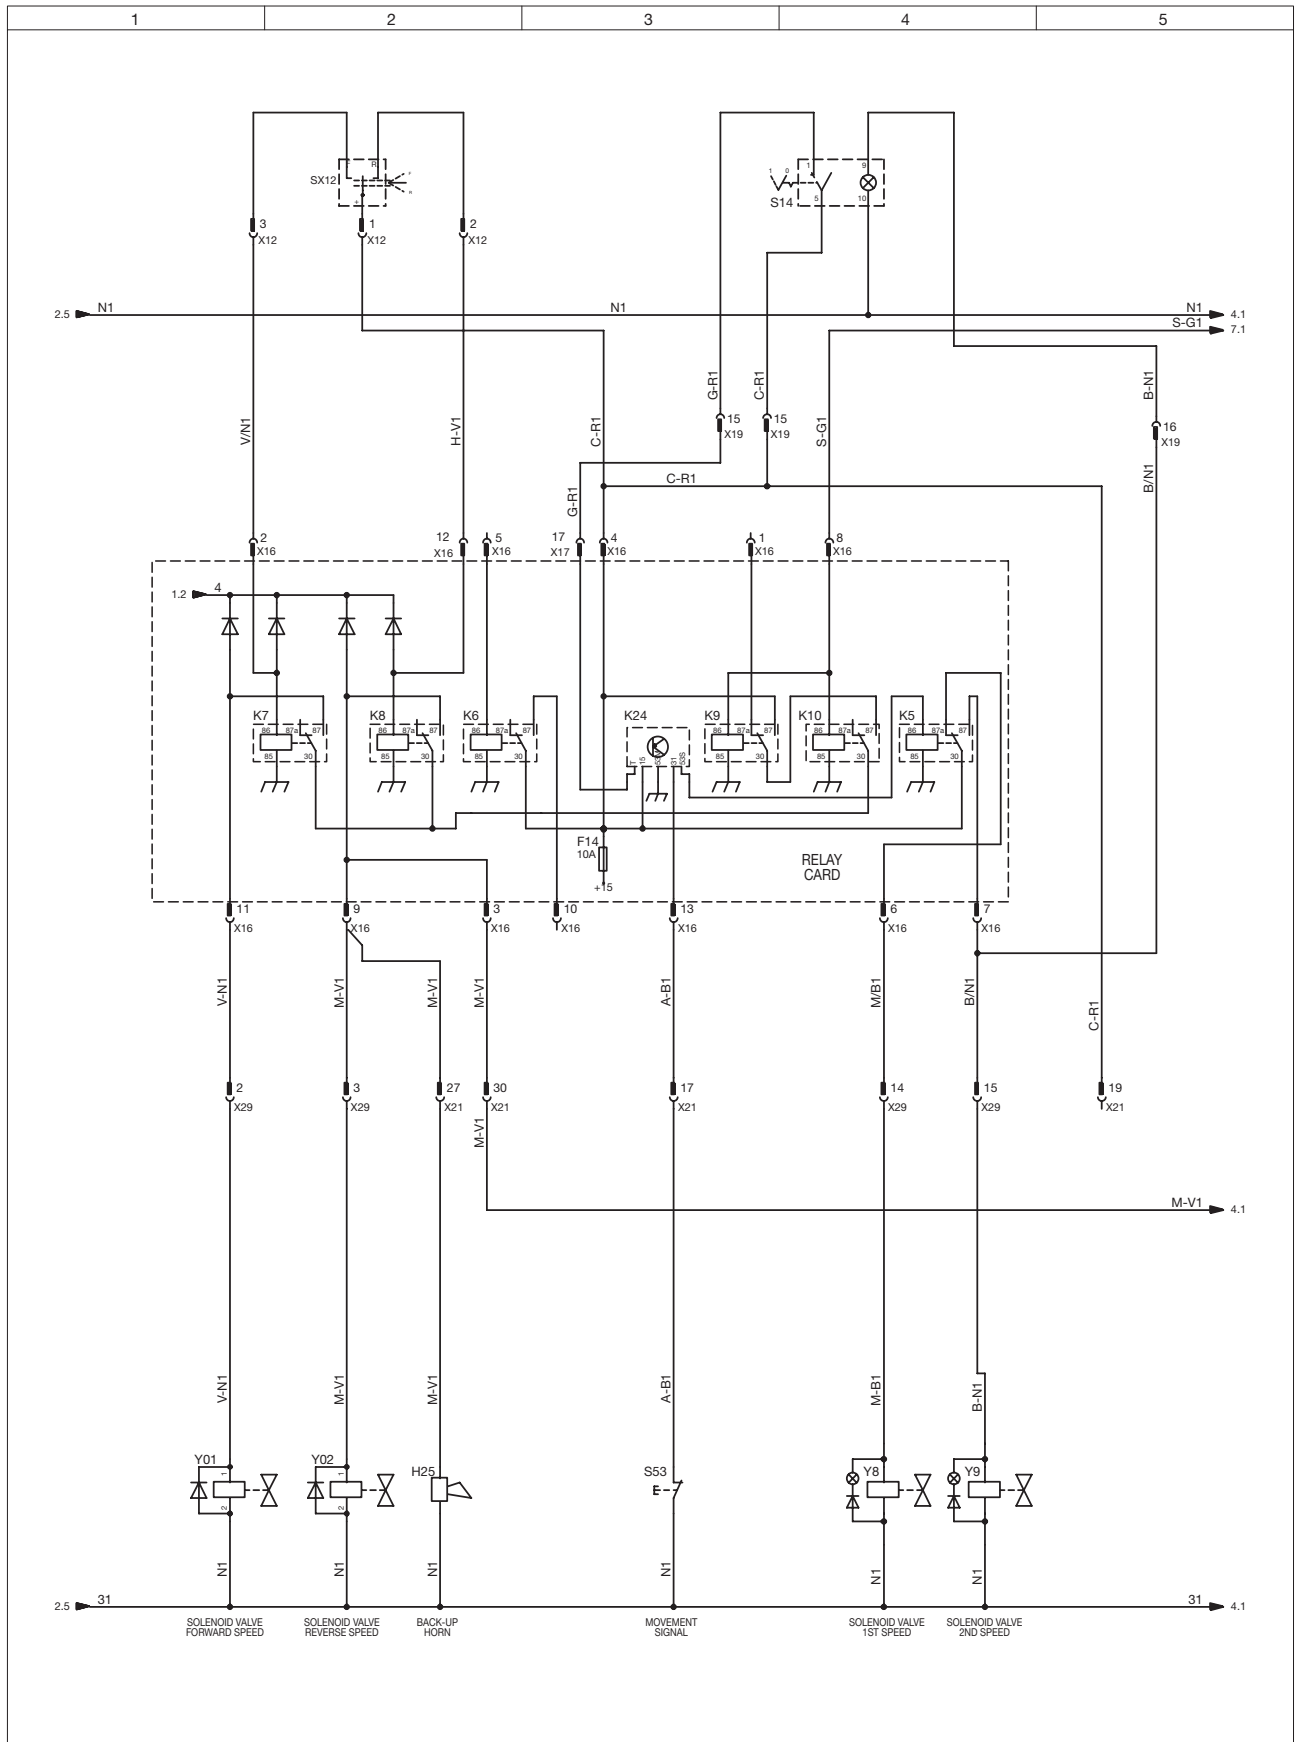


6.4.4 Sheet 4 of 9

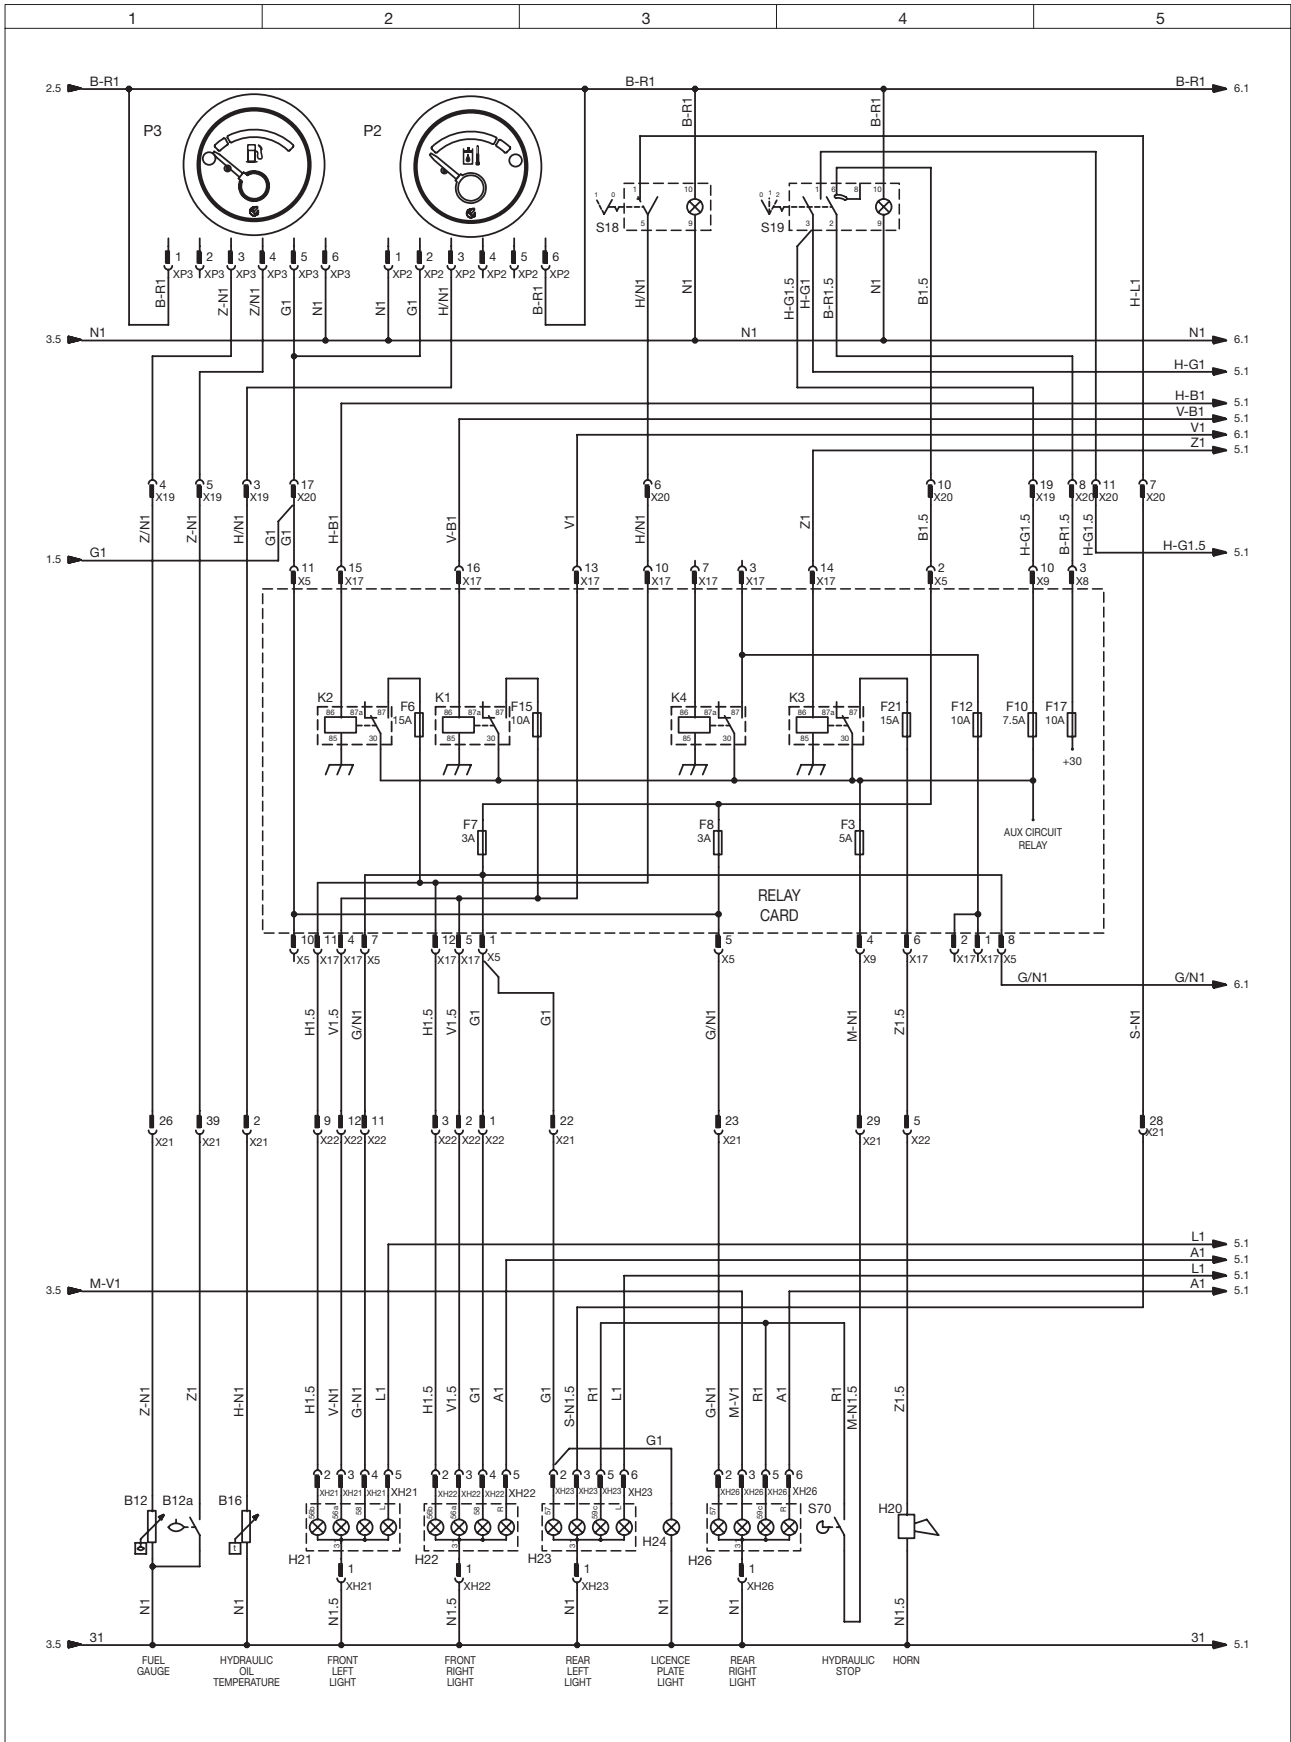


6.4.6 Sheet 6 of 9

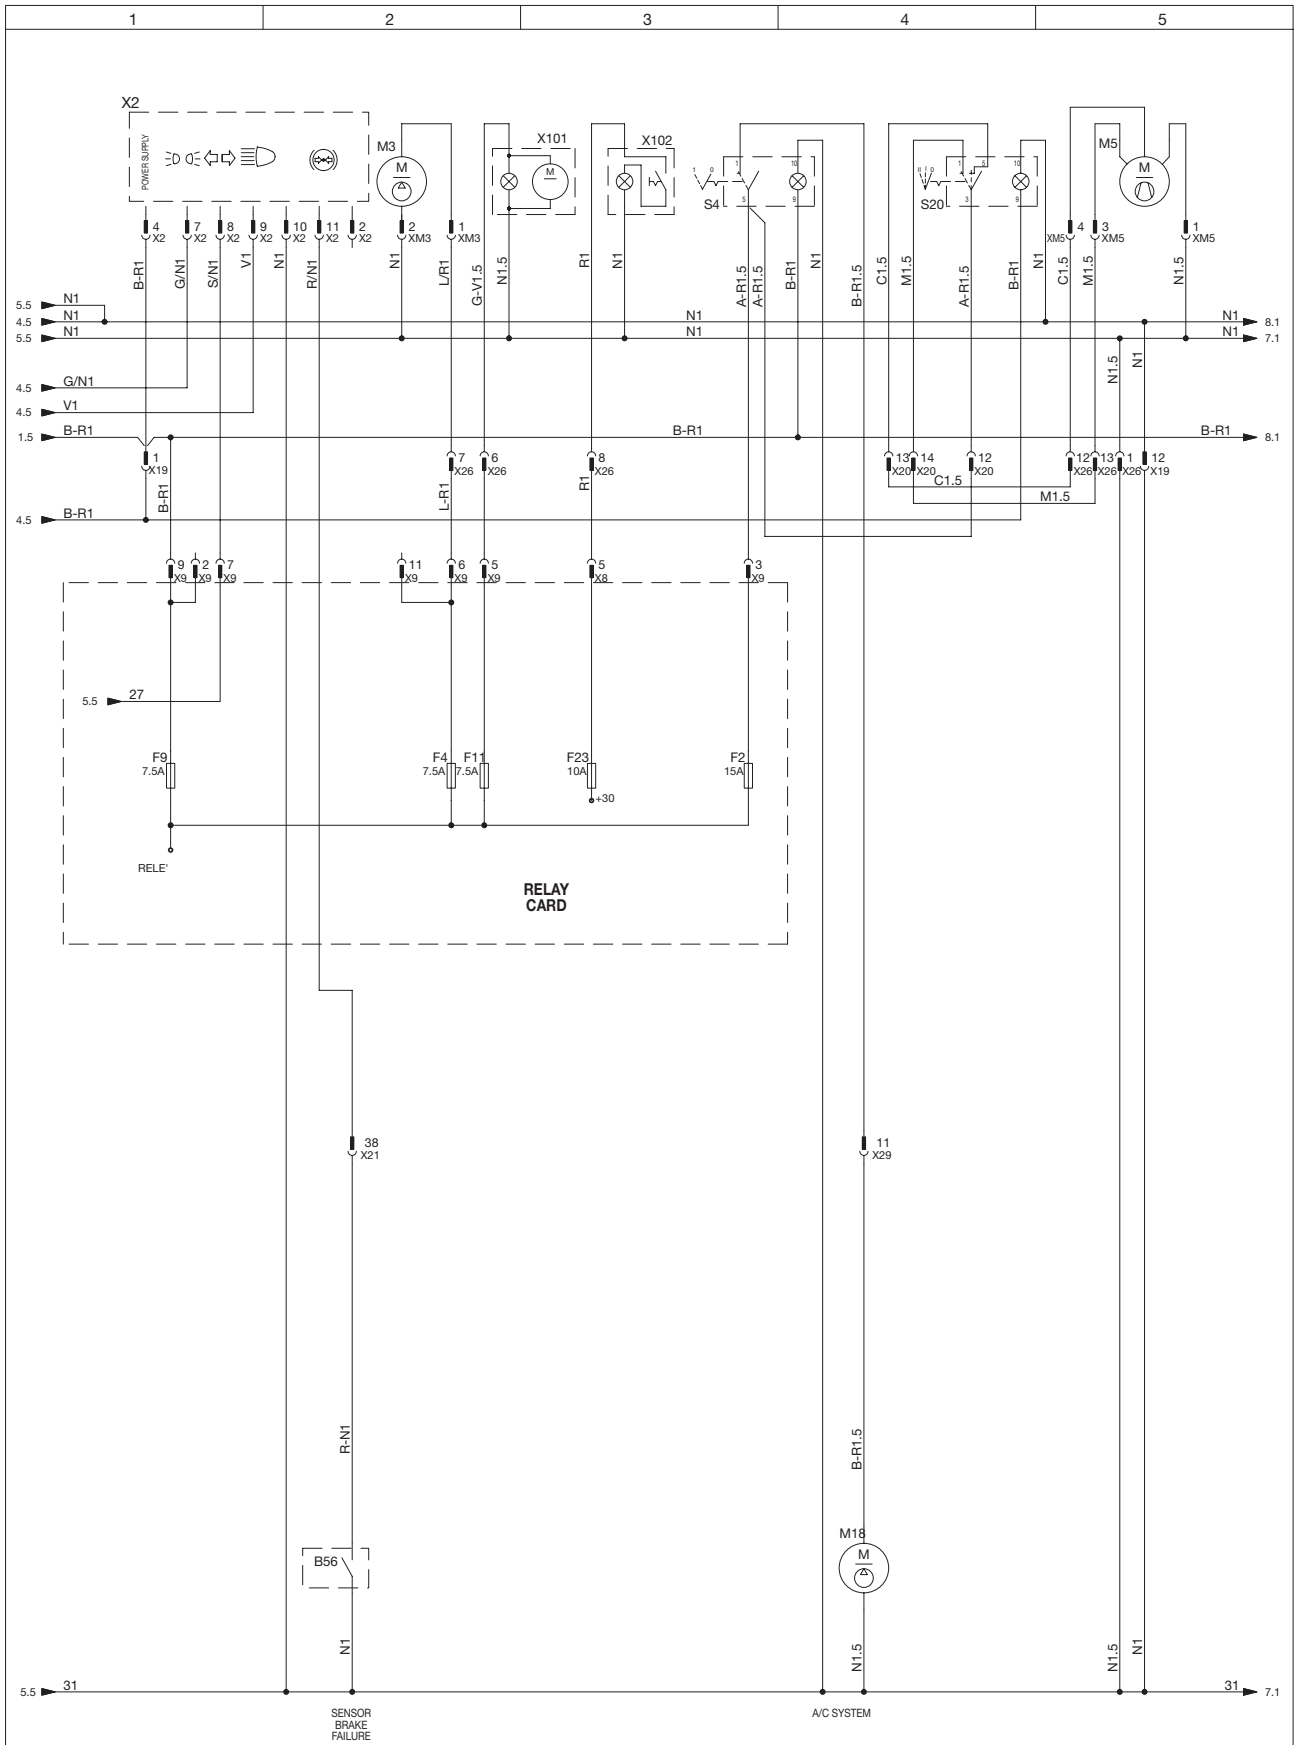

6.4.7 Sheet 7 of 9

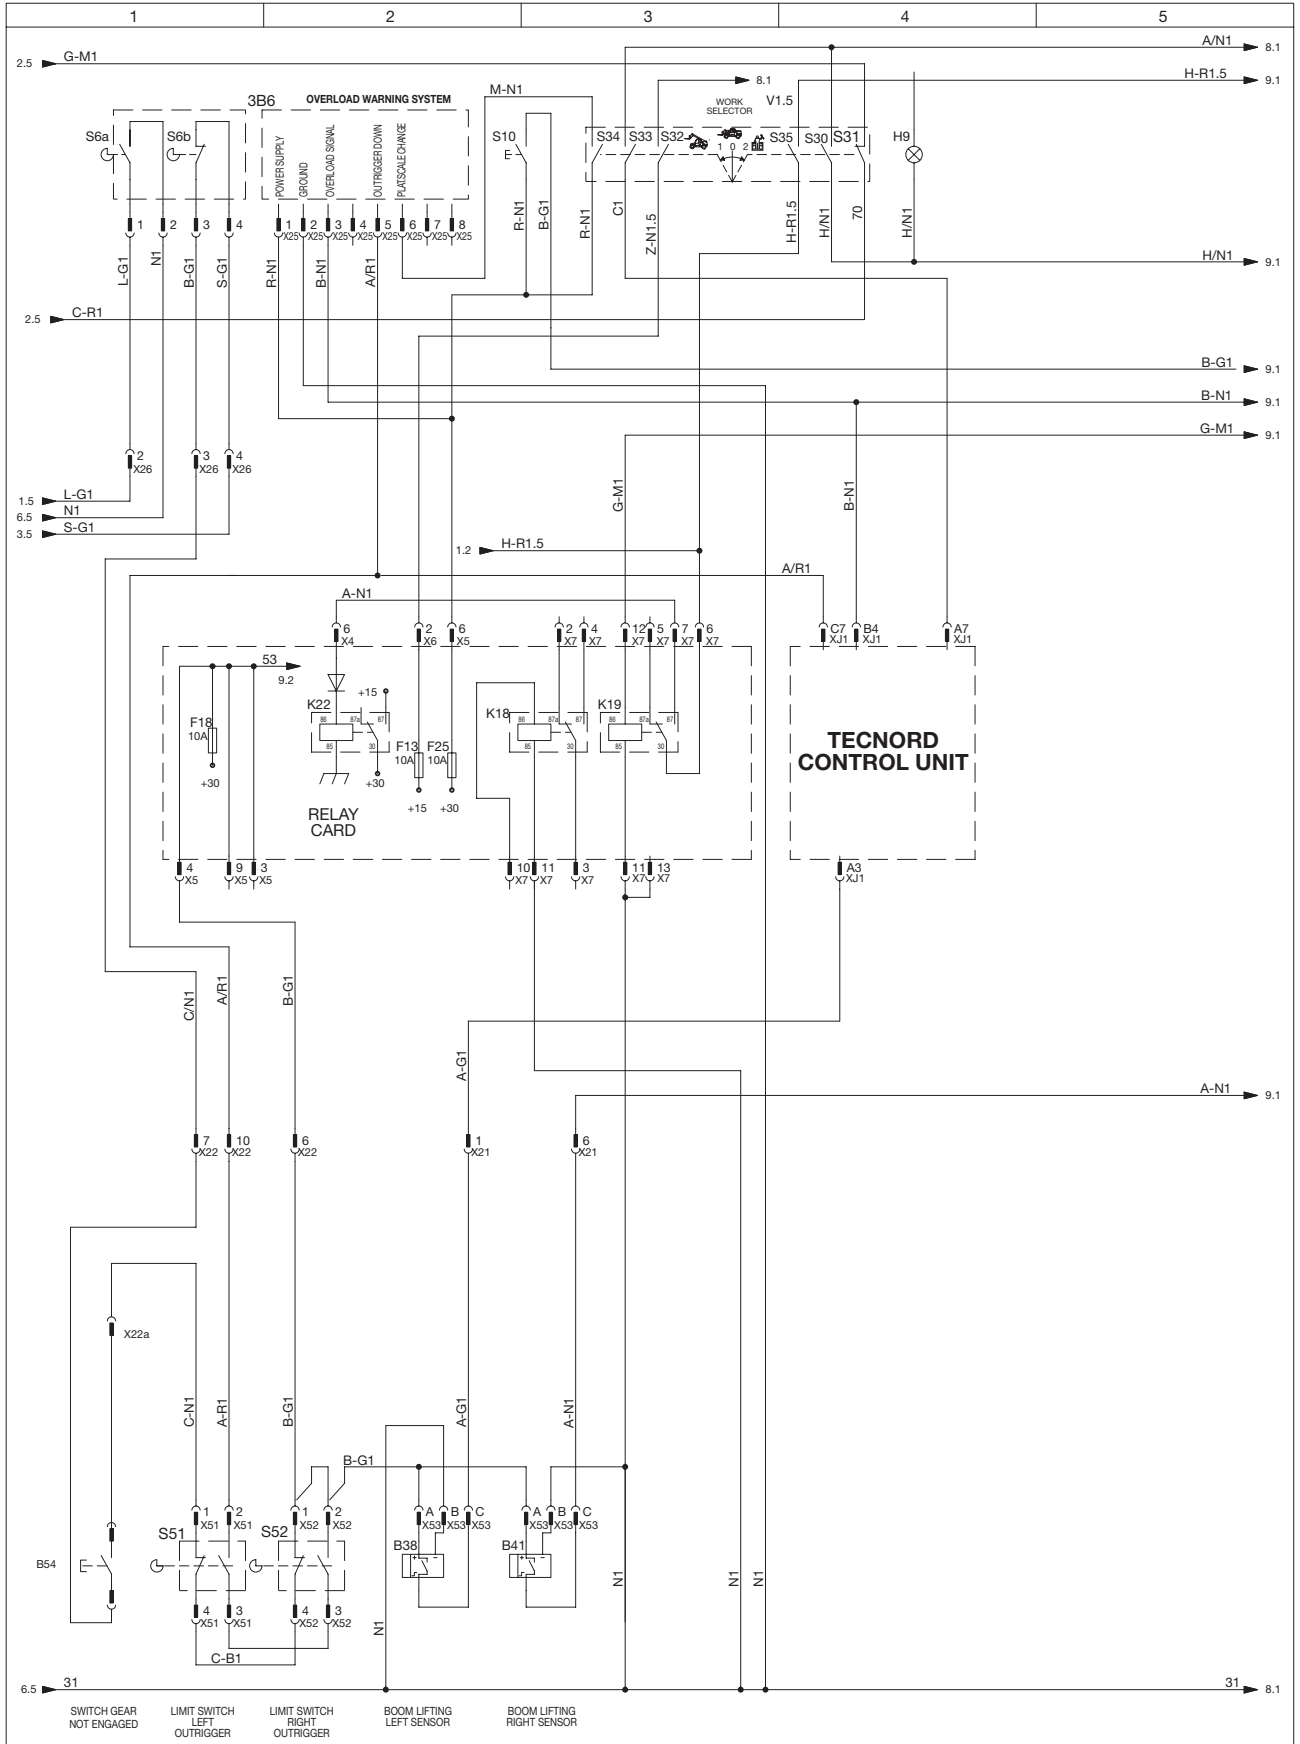

6.4.8 Sheet 8 of 9

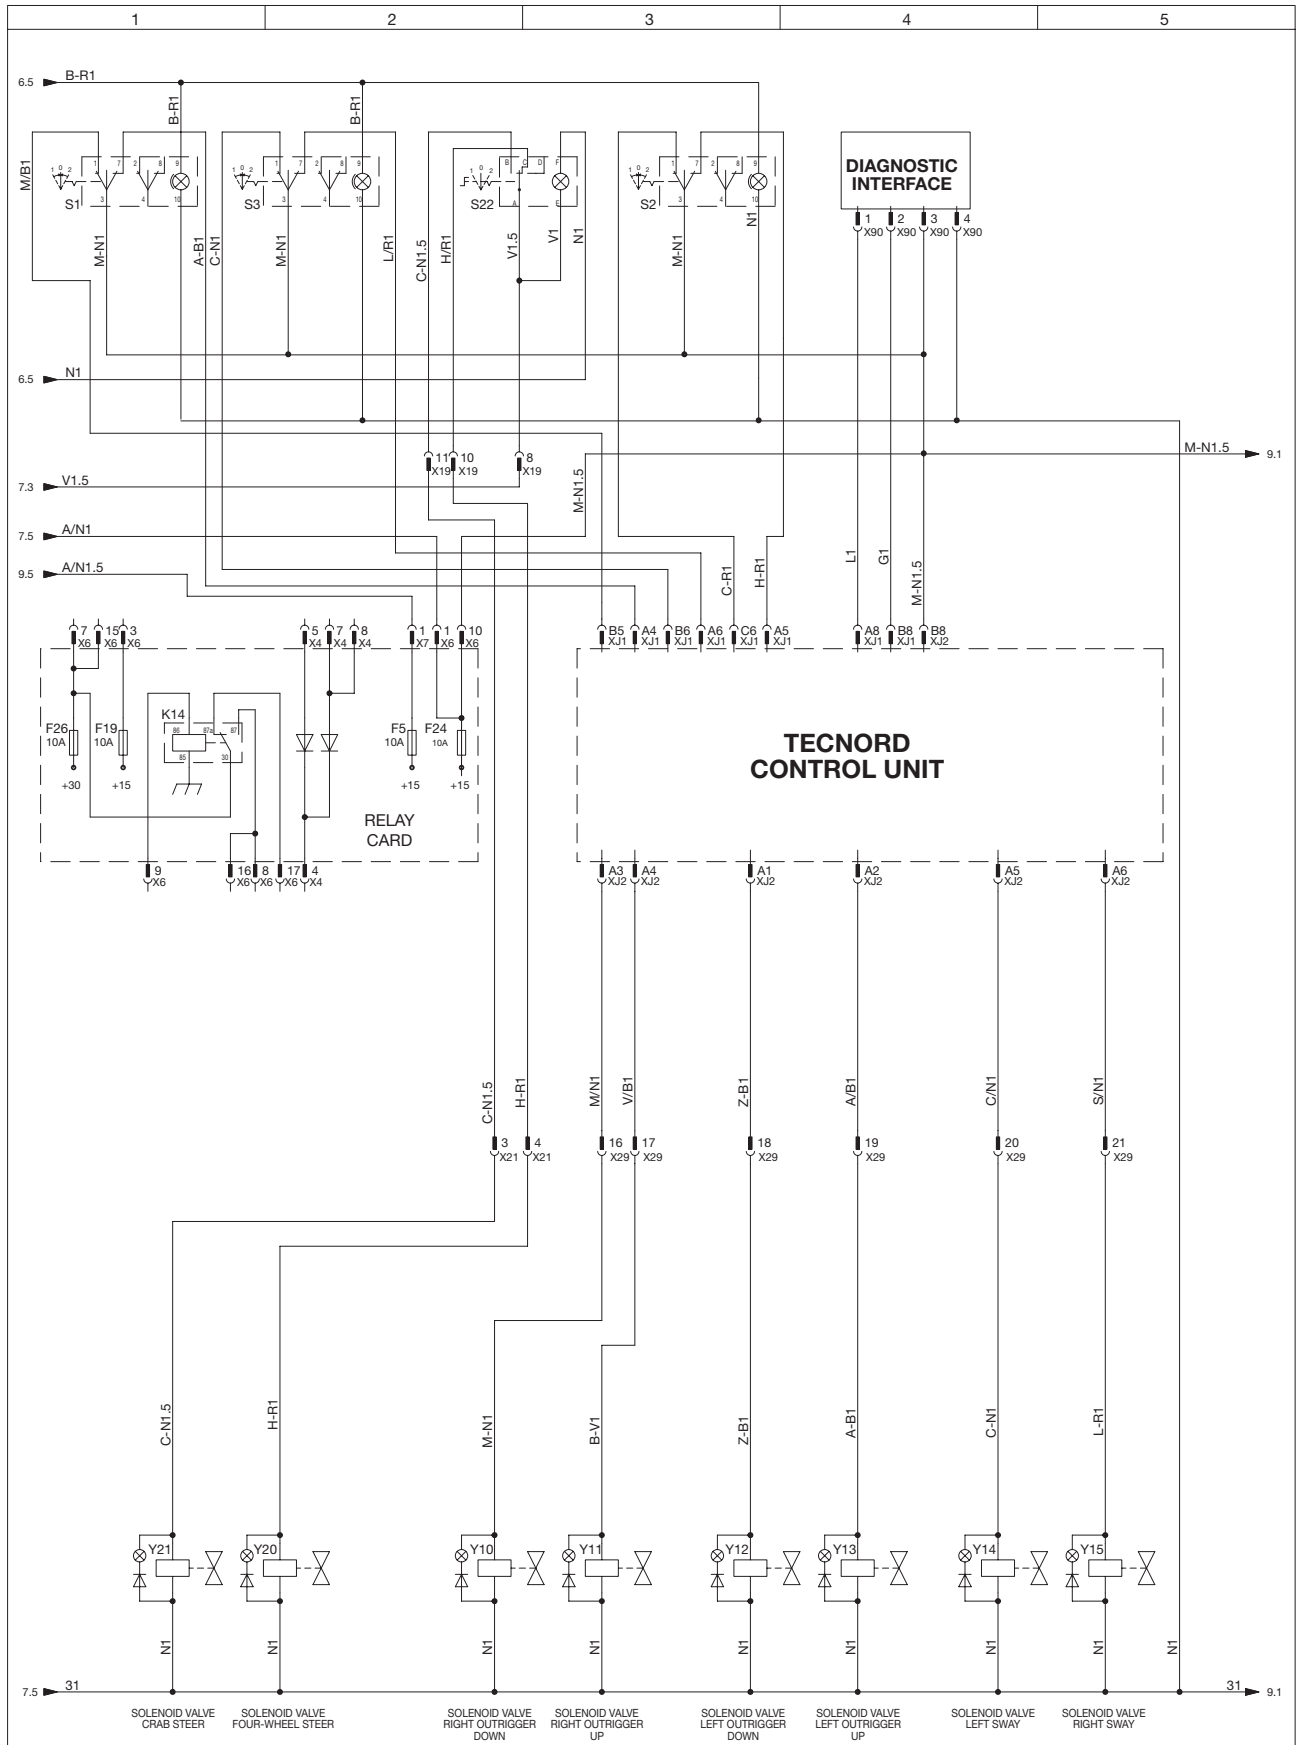

6.4.10 Wiring diagram - Component description

<i>Ref</i>	<i>Description</i>	<i>Sheet</i>	<i>Ref</i>	<i>Description</i>	<i>Sheet</i>
A1	ALTERNATOR	1	H21	FRONT LEFT LIGHT	4
B1	BATTERY	1	H22	FRONT RIGHT LIGHT	4
B11	PRESSURE SWITCH - ENGINE OIL FILTER	1	H23	REAR LEFT LIGHT	4
B12	FUEL GAUGE	4	H24	LICENCE PLATE LIGHT	4
B12a	FUEL RESERVE	4	H25	BACK-UP HORN	3
B13	THERMOSTAT - HIGH ENGINE WATER TEMPERATURE	1	H26	REAR RIGHT LIGHT	4
B14	THERMOMETER - HIGH ENGINE WATER TEMPERATURE	1	K01	RELAY - START-UP	1
B15	MICRO-SWITCH - AIR FILTER CLOGGED	1	K02	RELAY - PRE-HEATING	1
B16	HYDRAULIC OIL THERMOMETER - HIGH TEMPERATURE	4	K03	RELAY - ENGINE STOP	1
B38	RIGHT BOOM LIFTING SENSOR	7	K04	RELAY - EMERGENCY PUMP	1
B41	LEFT BOOM LIFTING SENSOR	8	K05	RELAY - AUX CIRCUIT MAIN LINE	2
B54	SWITCH - GEAR NOT ENGAGED	7	K1	RELAY - HIGH BEAM	2
F1	10A FUSE - EMERGENCY LIGHT	5	K2	RELAY - LOW BEAM	4
F1G	50A MAIN FUSE	1	K3	RELAY - HORN	4
F2	15A FUSE - HEATING	6	K4	RELAY - OPTIONAL	4
F2G	50A MAIN FUSE	1	K5	RELAY - 1 st -2 nd SPEED	3
F3	5A FUSE - STOP LIGHTS MICRO-SWITCH	4	K6	RELAY - OPTIONAL	1
F3G	50A MAIN FUSE	1	K7	RELAY - FORWARD SPEED	3
F4	7.5A FUSE - REAR WINDSCREEN WIPER	6	K8	RELAY - REVERSE SPEED	3
F4G	15A MAIN FUSE	1	K9	RELAY - TRANSMISSION DISCONNECTED	3
F5	10A FUSE - OPT.	8	K10	RELAY - TRANSMISSION DISCONNECTED	3
F5G	15A MAIN FUSE	1	K11	RELAY - START-UP ENABLING COMMAND	1
F6	15A FUSE - LOW BEAM SWITCH	4	K12	SOLENOID VALVE - 1 st SPEED	2
F7	3A FUSE - RIGHT POSITION LIGHTS	4	K13	SOLENOID VALVE - 2 nd SPEED	2
F8	3A FUSE - INSTRUMENTS LIGHTING	4	K14	RELAY - OPTIONAL	8
F9	7.5A FUSE - INDICATOR LIGHTS POWER SUPPLY	6	K15	RELAY - FORK IN/OUT	9
F10	7.5A FUSE - LIGHTS SWITCH	4	K16	RELAY - ATTACHMENT UP/DOWWN	9
F11	7.5A FUSE - BEACON	6	K17	RELAY - OPTIONAL	9
F12	10A FUSE - WORK LIGHTS	4	K18	RELAY - OPTIONAL	7
F13	10A FUSE - STEER MODE ACTIVATION	7	K19	RELAY - FORK COUPLING	9
F14	10A FUSE - DRIVE SWITCH	3	K20	RELAY - OPTIONAL	9
F15	10A FUSE - HIGH BEAM	4	K21	RELAY - BOOM LIFTING	9
F16	15A FUSE - EMERGENCY	5	K23	INTERMITTENCE	5
F17	10A FUSE - LIGHTS AND FLASHING	4	K24	MECH. GEARBOX CONTROL UNIT	3
F18	10A FUSE - OUTRIGGERS	7	M1	STARTING MOTOR	1
F19	10A FUSE - OPT.	8	M2	EMERGENCY PUMP	1
F20	10A FUSE - PLATFORM EMERGENCY BUTTON	2	M3	REAR WINDSCREEN WIPER/WASHER MOTOR	6
F21	15A FUSE - HORN	4	M5	HEATING	6
F22	15A FUSE - MAN-PLATFORM POWER SUPPLY	1	M13	WINDSCREEN WIPER/WASHER MOTOR	5
F23	10A FUSE - CAB LIGHTS	6	M18	A/C SYSTEM	6
F24	10A FUSE - WORK MODE POWER SUPPLY	8	M91	PUMP MOTOR	5
F25	10A FUSE - 3B6 CONTROL UNIT	7	P1	ENGINE WATER THERMOSTAT	1
F26	10A FUSE - OPT.	8	P2	HYDRAULIC OIL TEMPERATURE	4
F27	10A FUSE - OPT.	5	P3	FUEL GAUGE	4
H9	LIGHT INDICATOR - BASKET ENABLED	7	P4	HOUR-METER	1
H20	HORN	4	R0	GLOW PLUGS	1
			R1	LOAD RESISTANCE	1
			S0	COLD STARTING TEMPERATURE SENSOR	1
			S1	SWITCH - LH FRONT OUTRIGGER	8
			S2	SWITCH - RH FRONT OUTRIGGER	8
			S3	SWAY FUNCTION SWITCH	9

<i>Ref</i>	<i>Description</i>	<i>Sheet</i>	<i>Ref</i>	<i>Description</i>	<i>Sheet</i>
S4	SWITCH - A/C SYSTEM	6	Y51	SOLENOID VALVE - STEERING AXLE LOCKED	9
S6a	PARKING BRAKE MICRO-SWITCH	7	X1	CONNECTOR - LIGHT INDICATORS	
S6b	PARKING BRAKE MICRO-SWITCH	7	X2	CONNECTOR - LIGHT INDICATORS	
S7	SWITCH - A/C SYSTEM	6	X4	9-WAY MARK CONNECTOR	
S10	OVERLOAD CUTOUT	7	X5	11-WAY MARK CONNECTOR	
S11	START-UP PANEL	1	X6	17-WAY MARK CONNECTOR	
SX11	LIGHT SWITCH-WIPERS-HORN	5	X7	9-WAY MARK CONNECTOR	
SX12	SPEED SWICTH	3	X8	5-WAY MARK CONNECTOR	
S13	EMERGENCY MUSHROOM-HEAD PUSHBUTTON	2	X9	13-WAY MARK CONNECTOR	
S14	SWITCH - SPEED CHANGE	3	X10	TECNORD CONTROL LEVER	9
S16	WARNING SWITCH	5	X11	13-WAY MARK CONNECTOR	
S17	SWITCH - EMERGENCY PUMP	2	X12	5-WAY MARK CONNECTOR	
S18	BACK-UP LAMP SWITCH	4	X13	6-WAY CONNECTOR	
S19	SWITCH - LIGHTS	4	X16	13-WAY MARK CONNECTOR	
S20	SWITCH - HEATER	6	X17	17-WAY MARK CONNECTOR	
S21	BATTERY CUTOFF	1	X18	13-WAY MARK CONNECTOR	
S22	STEERING SELECTOR	8	X19	21-WAY MARK CONNECTOR	
S30	N.O. CONTACT - PLATFORM ENABLED	7	X20	17-WAY MARK CONNECTOR	
S31	N.C. CONTACT - PLATFORM EMERG. BUTTON POWER SUPPLY	7	X21	40-WAY DEUTSCH CONNECTOR - TYPE B	
S32	N.O. CONTACT - STEER SELECTOR	7	X22	12-WAY DEUTSCH CONNECTOR	
S33	N.O. CONTACT - WORK MODE	7	X25	8-WAY CONNECTOR	
S34	N.O. CONTACT - PLATFORM SCALE CUTOUT	7	X26	17-WAY MARK CONNECTOR	
S35	N.O. CONTACT - PLATFORM SENSOR POWER SUPPLY	7	X28	MAN PLATFORM CONNECTOR	9
S53	MOVEMENT SIGNAL	3	X29	24-WAY DEUTSCH CONNECTOR	
S70	HYDRAULIC STOP	4	X30	2-WAY CONNECTOR	
Y0	SOLENOID VALVE - COLD STARTING	1	X34	2-WAY 90° CONNECTOR	
Y00	SOLENOID VALVE - ENGINE STOP	1	X44	4-WAY CONNECTOR Y44	9
Y01	SOLENOID VALVE - FORWARD SPEED	3	X45	4-WAY CONNECTOR Y45	9
Y02	SOLENOID VALVE - REVERSE SPEED	3	X46	4-WAY CONNECTOR Y46	9
Y8	SOLENOID VALVE - 1 st SPEED	3	X47	4-WAY CONNECTOR Y47	9
Y9	SOLENOID VALVE - 2 nd SPEED	3	X51	4-WAY DEUTSCH CONNECTOR	
Y10	SOLENOID VALVE - RIGHT OUTRIGGER DOWN	8	X52	4-WAY DEUTSCH CONNECTOR	
Y11	SOLENOID VALVE - RIGHT OUTRIGGER UP	9	X53	3-WAY DEUTSCH CONNECTOR	
Y12	SOLENOID VALVE - LEFT OUTRIGGER DOWN	9	X90	DIAGNOSTIC INTERFACE	8
Y13	SOLENOID VALVE - LEFT OUTRIGGER UP	9	X91	2-WAY 90° CONNECTOR	
Y14	SOLENOID VALVE - LEFT SWAY	8	X101	BEACON	6
Y15	SOLENOID VALVE - RIGHT SWAY	8	X102	CAB INTERIOR LIGHTS	6
Y20	SOLENOID VALVE - FOUR-WHEEL STEER	8	XH21	6-WAY DEUTSCH CONNECTOR	
Y21	SOLENOID VALVE - CRAB STEER	8	XH22	6-WAY DEUTSCH CONNECTOR	
Y44	SOLENOID VALVE - FORK ROTATION	9	XH23	6-WAY DEUTSCH CONNECTOR	
Y45	SOLENOID VALVE - FORK IN/OUT MOV.	9	XH26	6-WAY DEUTSCH CONNECTOR	
Y46	SOLENOID VALVE - UP/DOWN MOV.	9	XM3	2-WAY CONNECTOR	
Y47	SOLENOID VALVE - ATTACHMENT LOCKED-UNLOCKED	9	XM5	4-WAY CONNECTOR	
Y43	MAIN SOLENOID VALVE	9	XP1	6-WAY CONNECTOR	
Y46	SOLENOID VALVE - UP/DOWN MOV.	9	XP2	6-WAY CONNECTOR	
Y50	SOLENOID VALVE - STEERING AXLE LOCKED	9	XP3	6-WAY CONNECTOR	
			XV1	3-WAY CONNECTOR	
			XJ1	TECNORD CONTROL UNIT CONNECTOR	
			XJ2	TECNORD CONTROL UNIT CONNECTOR	

WIRE COLOURS

- A** LIGHT BLUE
- B** WHITE
- C** ORANGE
- G** YELLOW
- H** GREY
- L** BLUE
- M** BROWN
- N** BLACK
- R** RED
- S** PINK
- V** GREEN
- Z** PURPLE

REMARK: Two-colour wires are indicated through a combination of the aforesaid initials as follows:

G/V = YELLOW/GREEN (crosswise colouring)

G-V = YELLOW-GREEN (lengthwise colouring)

6.4.11 Fuses and relays wiring diagram



X5 - MARK 21

POS.	FUNCTION DESCRIPTION	COL
1	Front/rear RH light	G
2	Power supply - Pos. lights fuse	B
3	Power supply - Danfoss power unit	2R-V
4	Power supply - Danfoss power unit	R-V
5	Front LH pos.light	G-N
6	Power supply - 386 control unit	2R-N
7	Rear LH pos.light	G-N
8	Position light indicator	G-N
9	Outriggers switch Sensor power supply	2R-V
10	N.C.	
11	Instruments warning light	G

X6 - MARK 17

POS.	FUNCTION DESCRIPTION	COL
1	N.C.	R
2	Power supply - steer. accum. SV	S/N
3	Power supply - differential locking switch	Z/N
4	Power supply - emergency pump	L-N
5	Power supply - platform mushroom-head button	C-R
6	Platform mushroom-head button out.	B-R
7	Power supply - work mode selector	B-R
8	N.C.	S/N
9	N.C.	G-N
10	N.C.	H-R
11	Power supply - platform mushroom-head button	M
12	Power supply - cab mushroom-head button	A/G
13	Electrostop from jobsite	G-M
14	Electrostop	M
15	N.C.	N
16	N.C.	M-V
17	Rear axle locking SV	H-R

X7 - MARK 17

POS.	FUNCTION DESCRIPTION	COL
1	Power supply - left high beam	V
2	Stab. sig. - overload warning system	L-R
3	Power supply - outriggers sensor	R-V
4	Stab. signal - drive disengagement	B-G
5	Cardan sensor	A-B
6	1st speed sensor	A-V
7	2nd speed sensor	A-R
8	Low beam	H
9	Low beam	H
10	High beam	V
11	Power supply - displacement change SV	V
12	Left turn signals	L
13	Right turn signals	A
14	Optional	L-G
15	Left position lights	G-N
16	Power supply 30 relay kc9-kc10 axle leveling unlocking	H-R
17	Right position lights	2 G

X9 - MARK 13

POS.	FUNCTION DESCRIPTION	COL
1	Power supply - wiper switch	L/N
2	N.C.	
3	Power supply - A/C system switch	A
4	Power supply - stop lights switch	R
5	Power supply - beacon	G-V
6	Power supply - rear wiper switch	L-R
7	Spia luci direzione	S/N
8	Power supply - front wiper switch	L/N
9	Power supply - switches lamps Power supply - instruments	2B-R
10	Power supply - hazard warning lights	H-L
11	N.C.	
12	Power supply - flashing	A-R
13	48	A-N

X18 - MARK 13

POS.	FUNCTION DESCRIPTION	COL
1	Power supply - Platform potentiometer	G-R
2	Turret rotation SV signal	L/G
3	Overload warning signal	B-N
4	Turret rotation signal	L-G
5	Boom out/in signal	M/B
6	Boom up/down signal	A/V
7	Boom up/down signal	A-V
8	GND	N
9	88 Basket relay	N-Z
10	Overload warning signal	B-N
11	Boom out/in signal	M-B
12	Locking/unlocking signal	R-G
13	Attachment locking/unlocking signal	G-R

X17 - MARK 17

POS.	FUNCTION DESCRIPTION	COL
1	Work light	G-N
2	Work light	G-V
3	Power supply - work light switch	G/R
4	LH high beam	V
5	RH high beam	V
6	Horn	Z
7	Work lights switch	L/G
8	Start enabling command	C-B
9	Start from platform 50 Board	2B-R
10	Power supply - fog lamp switch	H/N
11	Left low beam	H
12	Right low beam	H
13	High beam warn. light	V
14	Horn Horn	2Z
15	Low beam switch common line	H-B
16	High beam common line	V-B
17	Mechanical gear	G-R

X8 - MARK 5

POS.	FUNCTION DESCRIPTION	COL
1	58 BOARD	R
2	Power supply - basket	R-N
3	Power supply - position lights switch	B-R
4	Power supply - hazard warn.lights switch	R
5	Power supply - cab interior lights	R

X4 - MARK 9

POS.	FUNCTION DESCRIPTION	COL
1	Power supply - Overload warning system	L-G
2	86 aux. circuits relay	M
3	N.C.	C
4	Steering locking/unlocking switch	A-G
5	Jobsite function enabled	A-V
6	Platform enabled Platform enabling	A-N
7	Steering locking/unlocking	Z
8	N.C.	
9	86 aux. circuits relay	G-R

X7 - MARK 13

POS.	FUNCTION DESCRIPTION
	optional for all positions

X16 - MARK 13

POS.	FUNCTION DESCRIPTION	COL
1	N.C.	
2	Forward speed	S-N
3	Back-up horn	H-R
4	Power supply - Gear select./change	H/R
5	2nd hydr. speed	A-G
6	1st mech. speed SV	M-B
7	2nd mech. speed SV	H-N
8	Drive disengagement	2 H
9	Reverse speed solenoid	H-L
10	Displacement change solenoid	C-N
11	Forward speed solenoid	H-R
12	Reverse speed	S-G
13	Cardan sensor	L-G


WIRE COLOURS

A	LIGHT BLUE	M	BROWN
B	WHITE	N	BLACK
C	ORANGE	R	RED
G	YELLOW	S	PINK
H	GREY	V	GREEN
L	BLUE	Z	PURPLE


REMARK: TWO-COLOUR WIRES ARE INDICATED THROUGH A COMBINATION OF THE AFORESAID INITIALS
 EXAMPLE:
 G/V ->YELLOW/GREEN (CROSSWISE COLOURING)
 G-V ->YELLOW-GREEN (LENGTHWISE COLOURING)

6.4.12 Engine compartment fuses and relays

Ref.	Circuit	Amp.
F1G	MAIN FUSE	50
F2G	MAIN FUSE	50
F3G	MAIN FUSE	50
F4G	MAIN FUSE	15
F5G	MAIN FUSE	15
K01	RELAY - START-UP	
K02	RELAY - PRE-HEATING	
K03	RELAY - ENGINE STOP	
K04	RELAY - EMERGENCY PUMP	
K05	RELAY - AUX CIRCUIT MAIN LINE (Fuse compartment)	

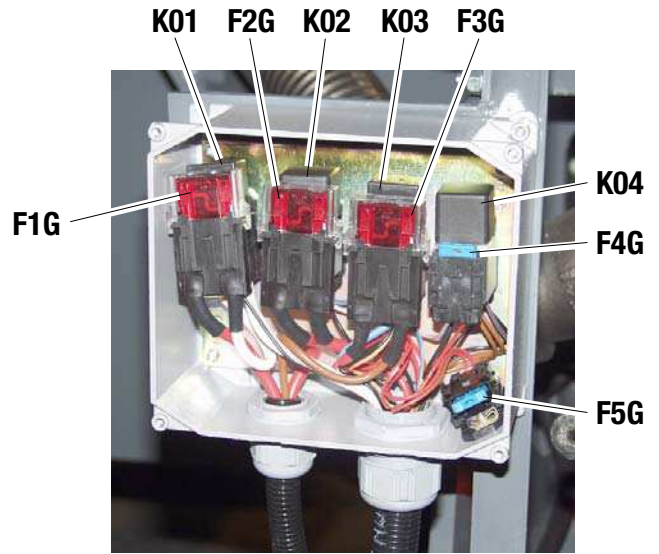


6.5 POSITION OF THE ELECTRICAL AND HYDRAULICAL COMPONENTS ON THE MACHINE
Telelift 3713 Elite

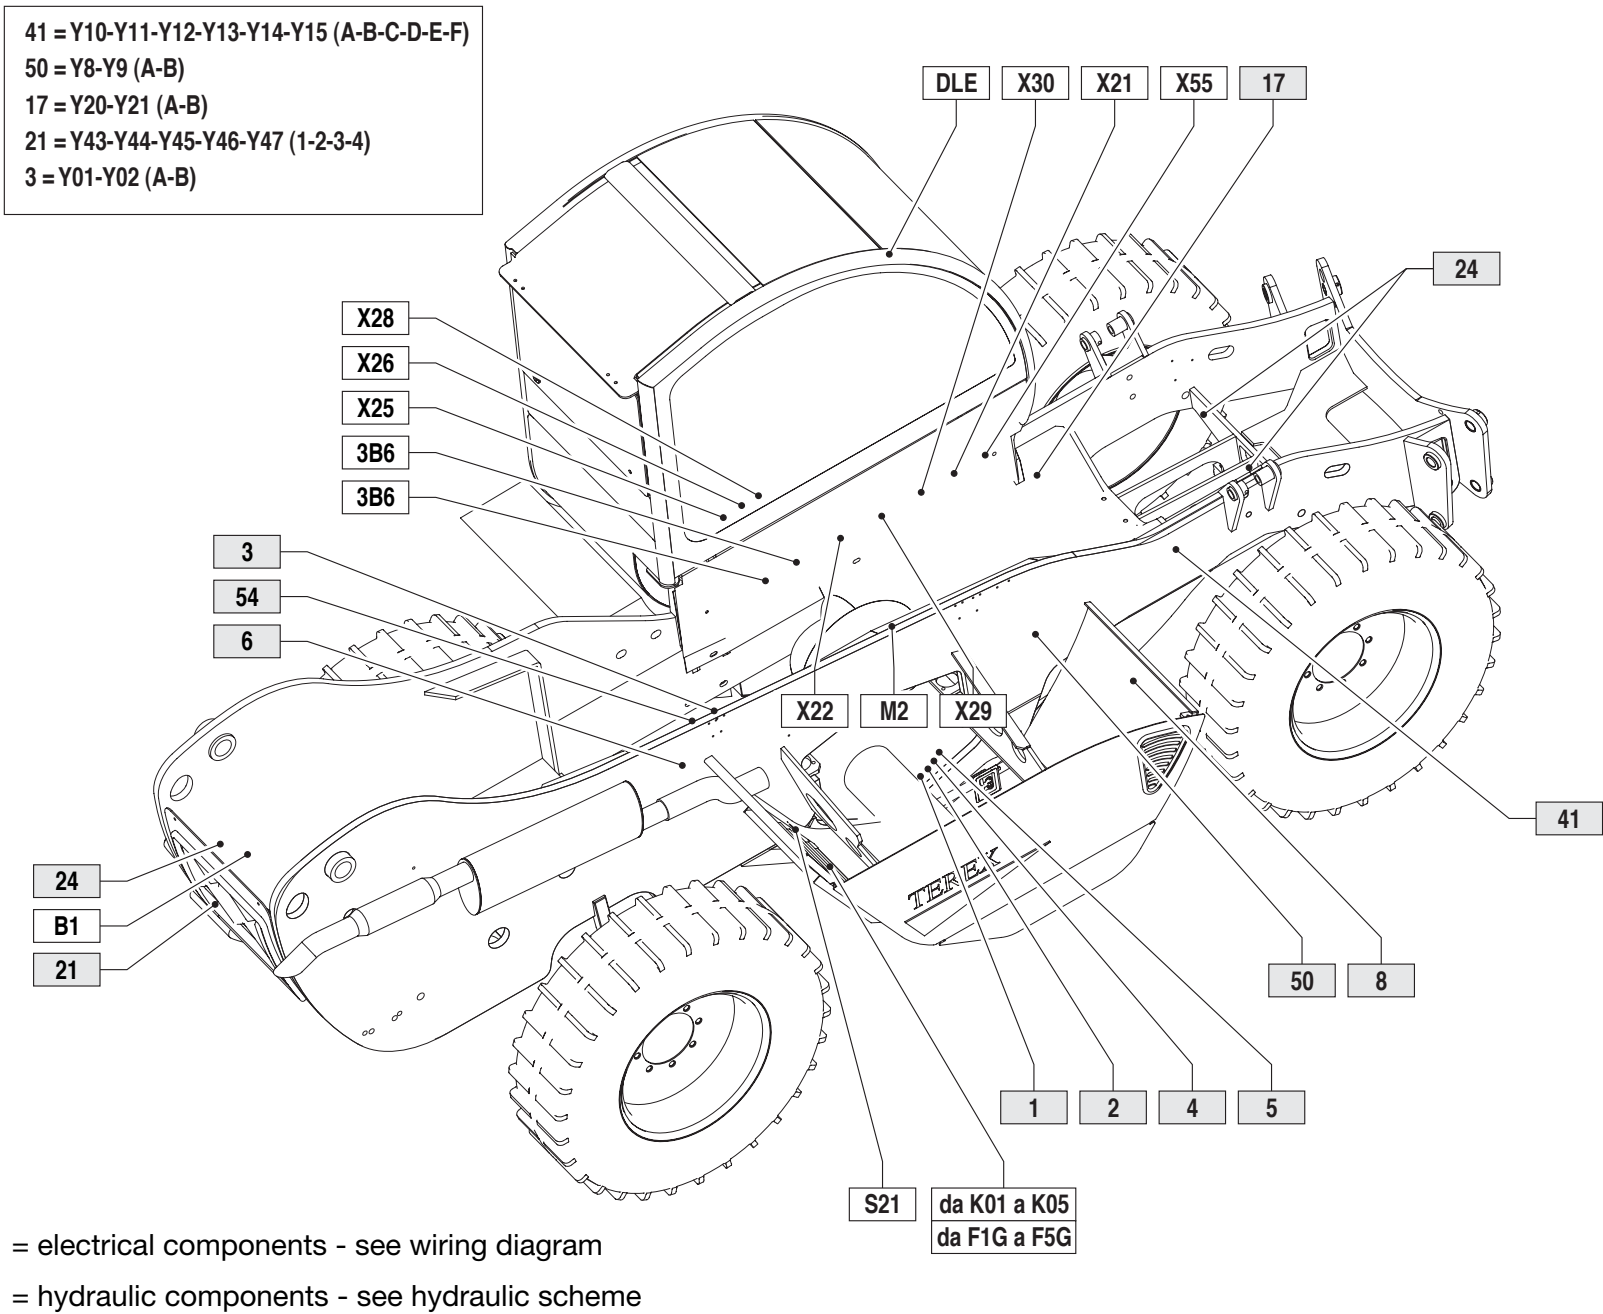




Telelift 3713 Elite

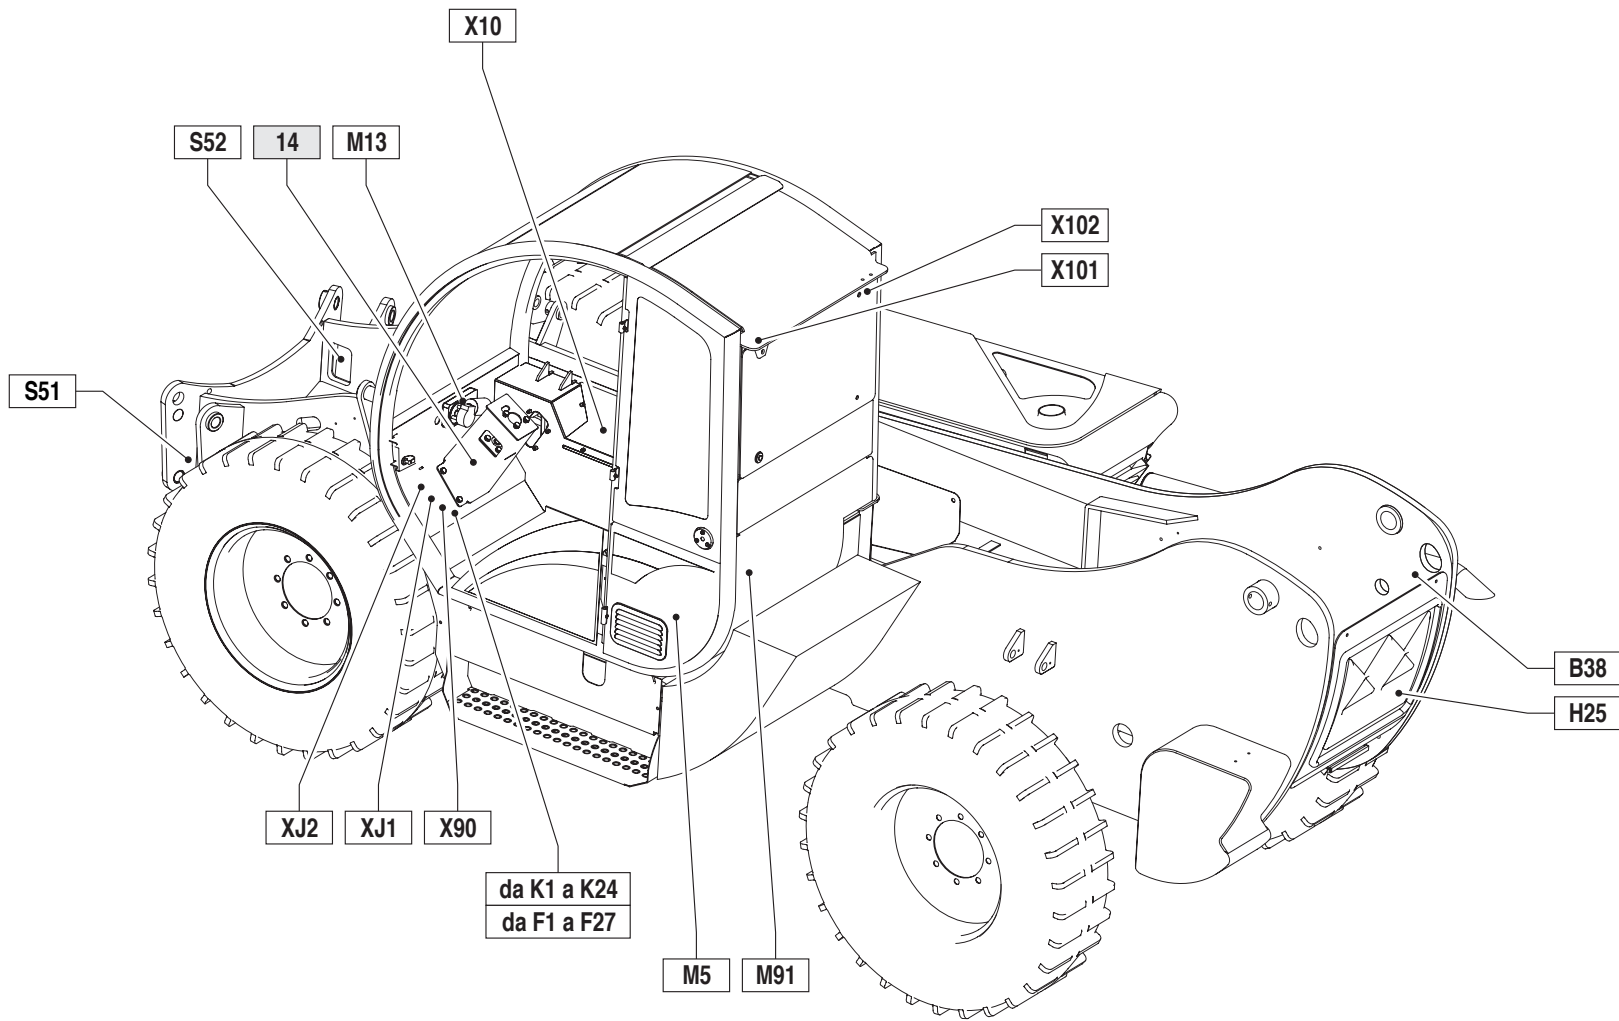

- = electrical components - see wiring diagram
- = hydraulic components - see hydraulic scheme

Telelift 4017 - 4514


- 41 = Y10-Y11-Y12-Y13-Y14-Y15 (A-B-C-D-E-F)
- 50 = Y8-Y9 (A-B)
- 17 = Y20-Y21 (A-B)
- 21 = Y43-Y44-Y45-Y46-Y47 (1-2-3-4)
- 3 = Y01-Y02 (A-B)
- 37 = Y50-Y51

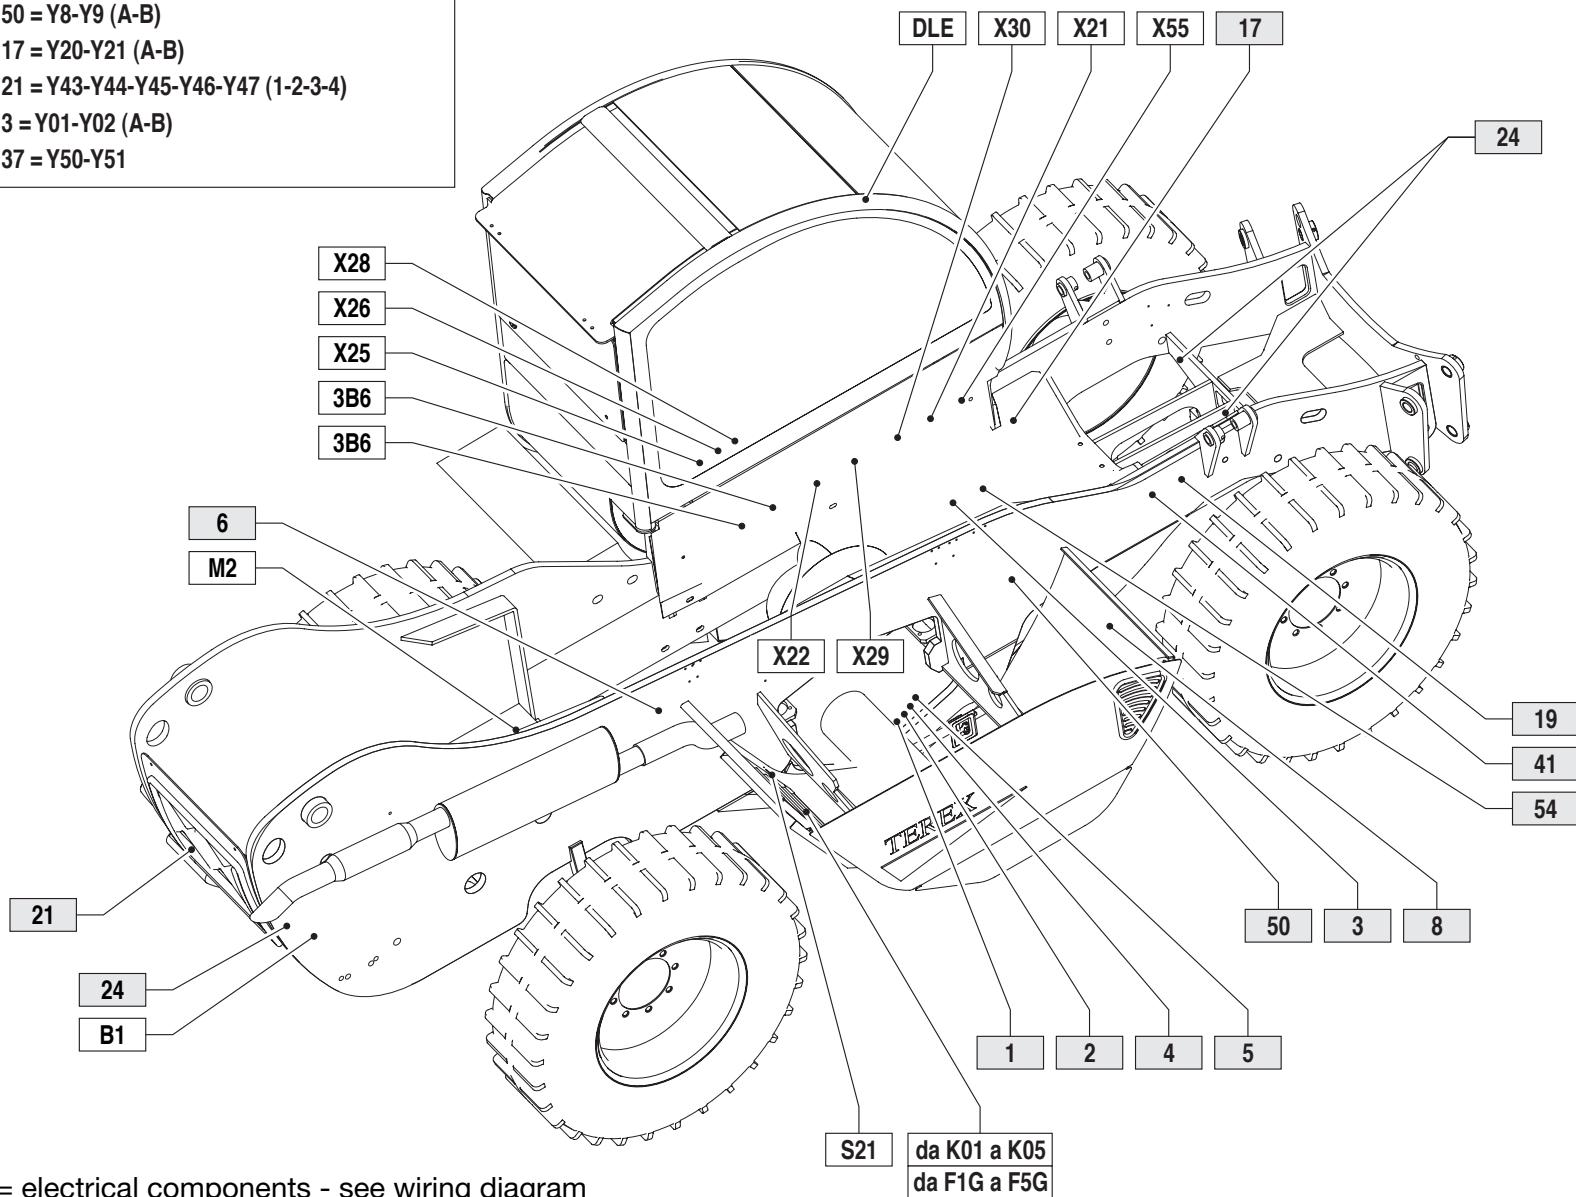


- = electrical components - see wiring diagram
- = hydraulic components - see hydraulic scheme




Telelift 4017 - 4514

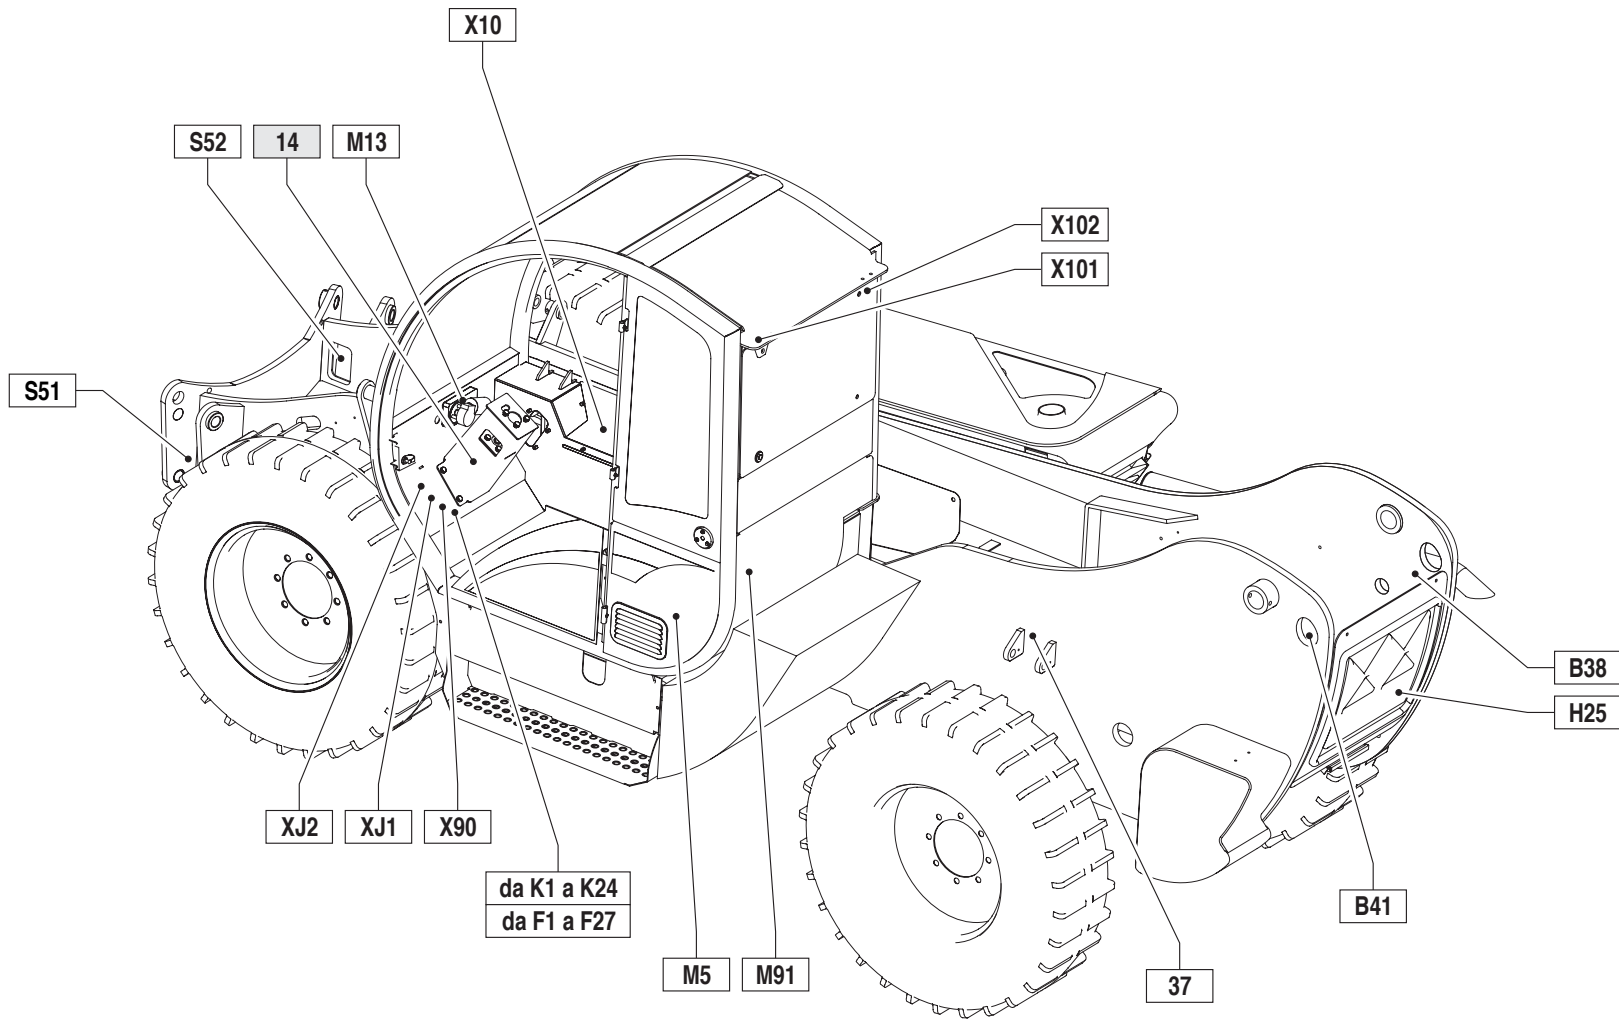

- = electrical components - see wiring diagram
- = hydraulic components - see hydraulic scheme

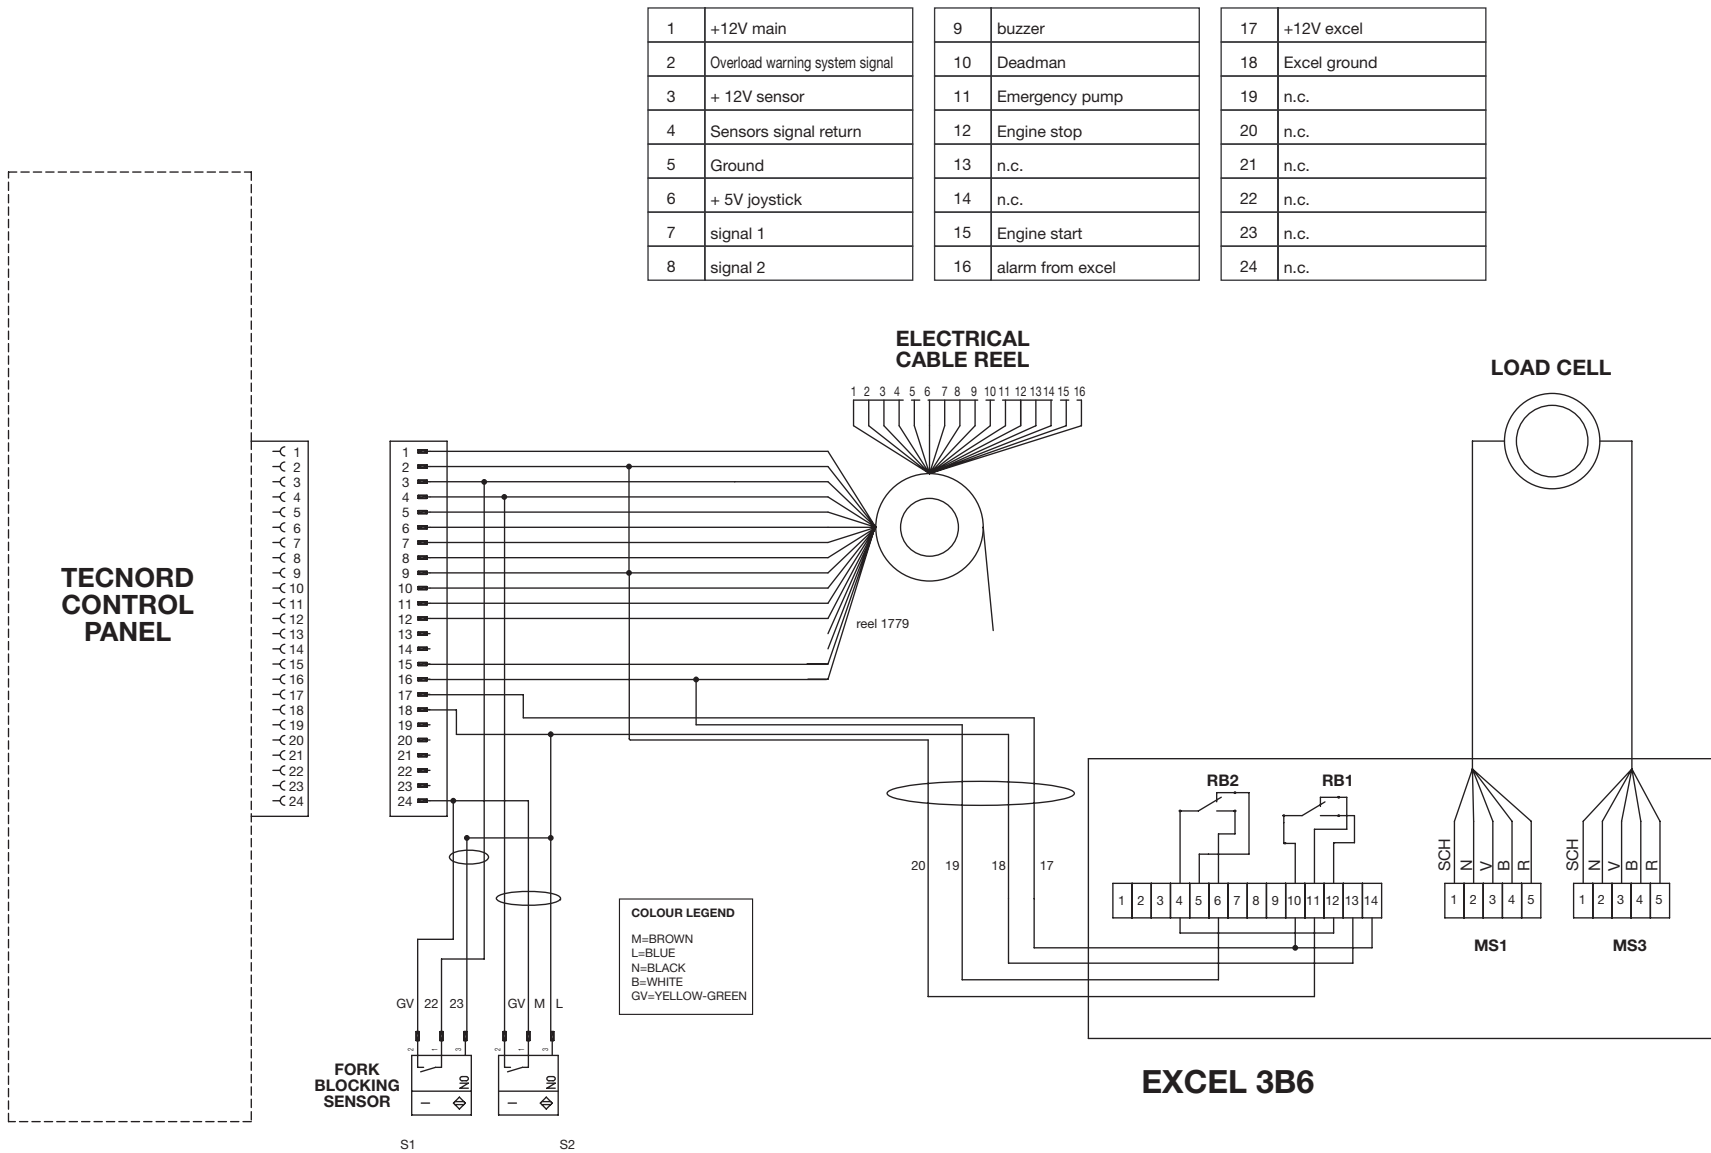6.6 WIRING DIAGRAM - PLATFORM/BOOM CONNECTION

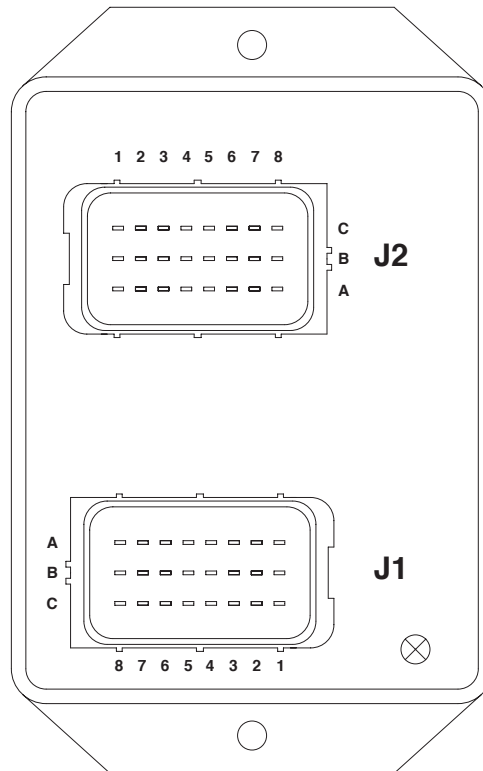
6.7 TECNORD CONTROL UNIT CONNECTIONS

Connector J1 - input signals

- | | |
|--|---|
| 1A = boom out/in signal | 1C = fork rotation signal |
| 2A = dead man from cabin (+12 V with button pressed down) | 2C = boom up/down signal from platform |
| 3A = low boom signal (+12 V with boom at less than 2 metres and sensor excited) | 3C = movement selector button (+12 V with white button pressed down) |
| 4A = left outrigger up | 4C = potentiometer common line (+5V) |
| 5A = right outrigger up | 5C = ground |
| 6A = sway right | 6C = right outrigger down |
| 7A = road/site selector (+12V with selector turned to site) | 7C = feet down signal (+12V with outriggers lowered to the ground) |
| 8A = TX RS232 | 8C = platform overload signal |
| 1B = boom up/down signal | |
| 2B = boom out/in signal from platform | |
| 3B = road/site selector (+12V with selector turned to platform) | |
| 4B = overload signal (+12 V when the machine is not in alarm) | |
| 5B = left outrigger down | |
| 6B = sway left | |
| 7B = dead man from platform | |
| 8B = RX RS232 | |


Connector J2 - output signals

- | | |
|----------------------------------|---|
| 1A = left outrigger up | 1C = attachment unlocking signal |
| 2A = left outrigger down | 2C = +12 V for alarm indicator on platform |
| 3A = right outrigger up | 3C = +12 V with operated joystick |
| 4A = right outrigger down | 4C = N.C. |
| 5A = sway left | 5C = +12 V for sound alarm on platform |
| 6A = sway right | 6C = N.C. |
| 7A = boom out/in signal | 7C = N.C. |
| 8A = ground | 8C = boom lift/lower signal |
-
- | |
|---|
| 1B = attachment locking/unlocking signal |
| 2B = joystick button common line (+12 V) |
| 3B = N.C. |
| 4B = N.C. |
| 5B = fork rotation signal |
| 6B = N.C. |
| 7B = N.C. |
| 8B = +12 V battery |

Summarising table of the voltage values of the boom movements


	Up	Down	Out	In	Fork rotation - Open	Fork rotation - Close
Joystick in rest position (2.5 V)	•	•	•	•	•	•
0.7 V		•		•		•
4.25 V	•		•		•	

6.8 TECNORD BUTTON PANEL CONNECTIONS

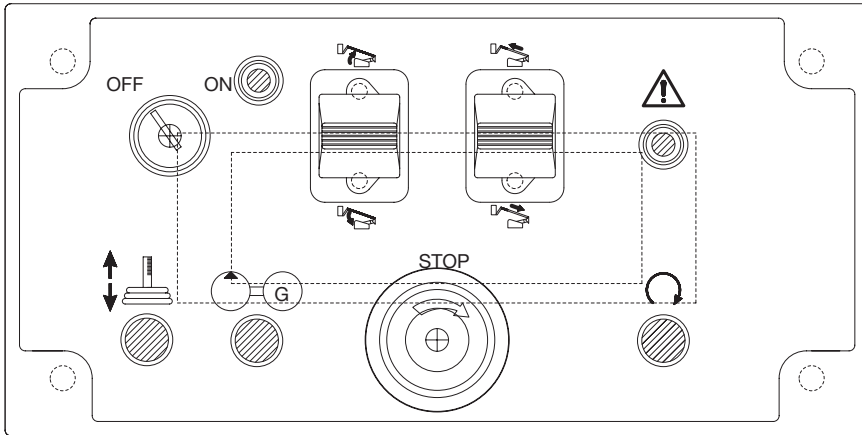


CONNECTIONS:

- 1) +POWER (+12VDC)
- 2) LIMITER INDICATOR
- 3) NOT USED
- 4) NOT USED
- 5) GND (0VDC)
- 6) + POTENT. (+5VDC)
- 7) FUNCTION 1 SIGNAL
- 8) FUNCTION 2 SIGNAL
- 9) BUZZER
- 10) DEAD MAN
- 11) EL. PUMP COMMAND
- 12) STOP COMMAND
- 13) START COMMAND
- 14) OVERLOAD (SIGNAL FROM EXCEL)
- 15) EXCEL POWER SUPPLY
- 16) EXCEL GND

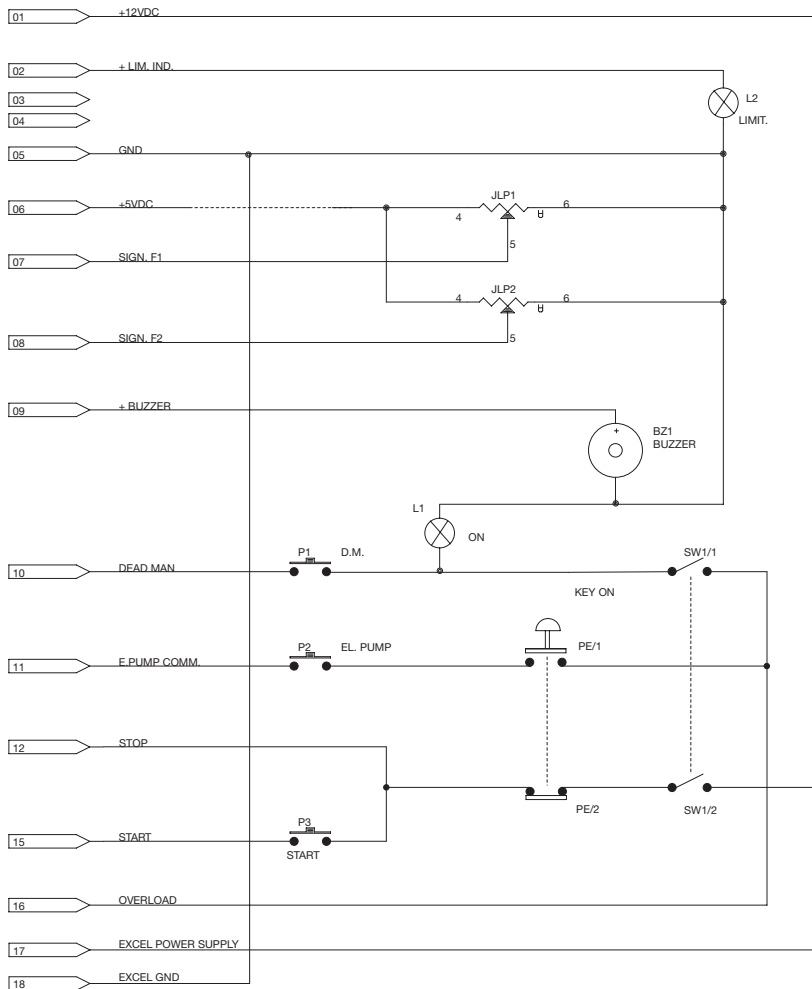


P.N.	Function	Description
JLP1	BOOM UP/DOWN	JLP 80%
JLP2	BOOM OUT/IN	
PE	EMERGENCY STOP	Mushroom-head emerg.button
L1	POWER WARNING LIGHT	Green LED indicator 12VDC
L2	LIM. WARNING LIGHT	Red LED indicator 12VDC
P1	U.P. BUTTON	Button, instable, 1NO
P2	EL. PUMP BUTTON	Button, instable, 1NO
P3	START BUTTON	Button, instable, 1NO
SW1	ENABLING KEY	Key-switch, stable, 2NO
BZ1	BUZZER (INTERNAL)	Buzzer 90db

6.9 DLE SYSTEM LAY-OUT

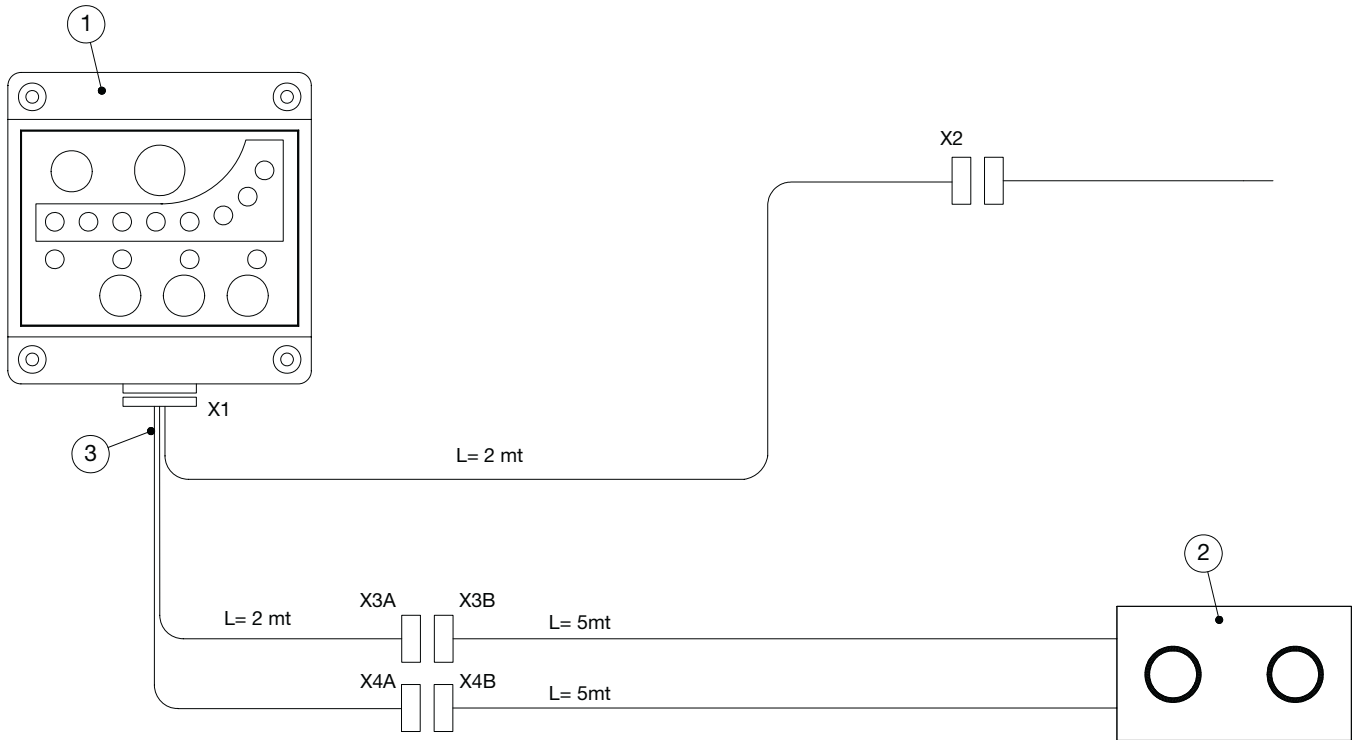

- 1** = main unit
- 2** = strain load cell double bridge
- 3** = connecting cable.

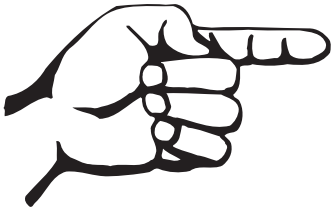

Intentionally blank page

Section 7

REPAIR PROCEDURES

SECTION INDEX

7.1	Time schedule	page	2
7.2	Disassembly and reassembly		5
7.2.1	Changing the internal flex hoses of the boom - Telelift 3713 Elite		5
7.2.2	Dismantling the hose holding chain - Telelift 4017		7
7.2.3	Strain load cell tightening (Telelift 4017-4514)		10

7.1 TIME SCHEDULE

Job	Operators needed	Expected time (h)
change the ignition key	1	1,00
change the speed switch	1	0,30
change the lights and horn switch	1	0,30
change the overload warning system display	1	0,15
re-calibrate the 3B6 system	1	1,00
change the load cell	1	2,00
change the overload warning system display and calibrate	1	1,00
change the joystick	1	1,30
change the deadman button	1	0,30
change the joystick movement switch pushbutton	1	0,30
change the brake pump	1	1,00
change the 2 gearbox sensors	1	0,30
change the cardan shaft sensor	1	0,15
change the low boom sensor (only Telelift 3713 Elite-4017)	1	0,15
change the high boom sensor (only Telelift 4017)	1	0,15
change the boom lifting cylinder	1	2,15
change the boom lifting cylinder kit (complete overhaul)	1	1,30
change the block valve of the boom lifting cylinder	1	0,30
change the cylinder inside the boom (only Telelift 3713 Elite)	1	2,50
change the extension cyl. kit inside the boom (only Telelift 3713 Elite)	1	1,30
change the block valve of the extension cylinder inside the boom (Telelift 3713 Elite)	1	0,30
change the extension cylinder on the boom	1	1,00
change the extension cylinder kit on the boom	1	1,30
change the valve of the extension cylinder on the boom	1	0,30
change the cylinder re-sequencing valve inside boom (Telelift 3713 Elite)	1	2,00
change the fork pitching cylinder	1	1,30
change the fork pitching cylinder kit	1	1,30
change the valve of the fork pitching cylinder	1	0,30
change the attachment locking cylinder	1	1,00
change the attachment locking cylinder kit	1	1,15
change the block valve of the attachment locking cylinder	1	0,30
change the outrigger up/down mov. cylinder	1	1,30
change the outrigger up/down mov. cylinder kit	1	1,30


Job	Operators needed	Expected time (h)
change the valve of the outrigger up/down mov. cylinder	1	0,30
change the fork compensation cylinder	1	2,00
change the fork compensation cylinder kit	1	1,30
change the valve of the fork compensation cylinder	1	0,45
check the one-way valves of the fork compensation cylinder	1	0,20
change the machine sway cylinder	1	1,30
change the machine sway cylinder kit	1	1,30
change the machine sway cylinder valve	1	0,30
change the boom internal line for the boom extension (only Telelift 3713 Elite)	1	1,00
change the boom internal line for the fork pitching (Telelift 3713 Elite-4514)	1	1,30
change the boom internal line for the fork locking (Telelift 3713 Elite-4514)	1	1,30
change the boom slide pads (Telelift 3713 Elite)	1	2,30
change the boom slide pads (Telelift 4514)	1	3,00
change the boom slide pads (Telelift 4017)	1	1,30
check the pressure of the drive pump	2	0,20 each
check the pressure of the main actuator operating the boom movements	2	0,20 each
check the pressure of brake pump and hydrostatic steering unit	1	0,15
check the safety valves	1	0,15
change the drive pump	1	2,00
change the drive motor	1	2,00
change and test motor, pump and transmission lines	1	5,00
change the actuator control pump	1	1,30
change and calibrate the actuator	1	2,00
change the pump on the engine injection line	1	1,00
change the electrical flow divider	1	0,30
change relays and fuses	1	0,10
change the windscreen wiper motor	1	1,00
change and test the emergency pump coil	1	0,30
change the emergency pump	1	1,00
change the boom chain (Telelift 4017)	2	8,00
change a solenoid valve	1	0,20
change the gas pedal complete with cord	1	1,00

Job	Operators needed	Expected time (h)
change the manual throttle complete with cord	1	0,30
change the front axle shaft	1	3,00
change the rear axle shaft	1	3,00
change 1 cardan joint	1	1,00
change the cardan joints	1	2,00
change the axle shaft hub	1	1,30
change the boom assy	2	5,00 each
change the boom anchoring pin	2	1,00 each
change the attachment locking cylinder pins	1	0,30
change the outrigger cylinder pin	1	0,20
change the platform power socket at the top of the boom	1	0,20
change the electrical reel (onlyTelelift 3713 Elite)	1	2,00
change the platform joystick	1	0,20
change a cab pushbutton	1	0,30
change the platform pushbuttons	1	0,10
change and test the actuator pressure relief valve or the sliders	1	0,30
change and test the actuator safety valve	1	0,30
change the one-way valve	1	0,20
change the maxi-fuses and search for troubles	1	0,10
bleed the braking system	2	0,15 each
change the hydraulic oil filter of the drive pump injection line	1	0,20
change the hydrostatic steering unit	1	1,30
change the beacon	1	0,20
change the battery	1	0,10
change the exhaust pipe	1	0,30
change the mud-guard supports	1	0,20
change the mud-guards	1	0,10
change the parking brake cord	1	0,30
change the steering wheel	1	0,10
dismantle the hydraulic oil tank	1	2,00
dismantle the fuel tank	1	2,00
change a wheel (n° 1)	1	0,15
change the rear axle locking cylinder (Telelift 4017-4514)	1	1,00
change the outriggers	1	1,00
change flexible hoses	1	0,15
change the parking brake lever	1	0,30

7.2 DISASSEMBLY AND REASSEMBLY

7.2.1 Changing the internal flex hoses of the boom - Telelift 3713 Elite

If you must change a damaged flex hose of the boom, obey the following instructions:

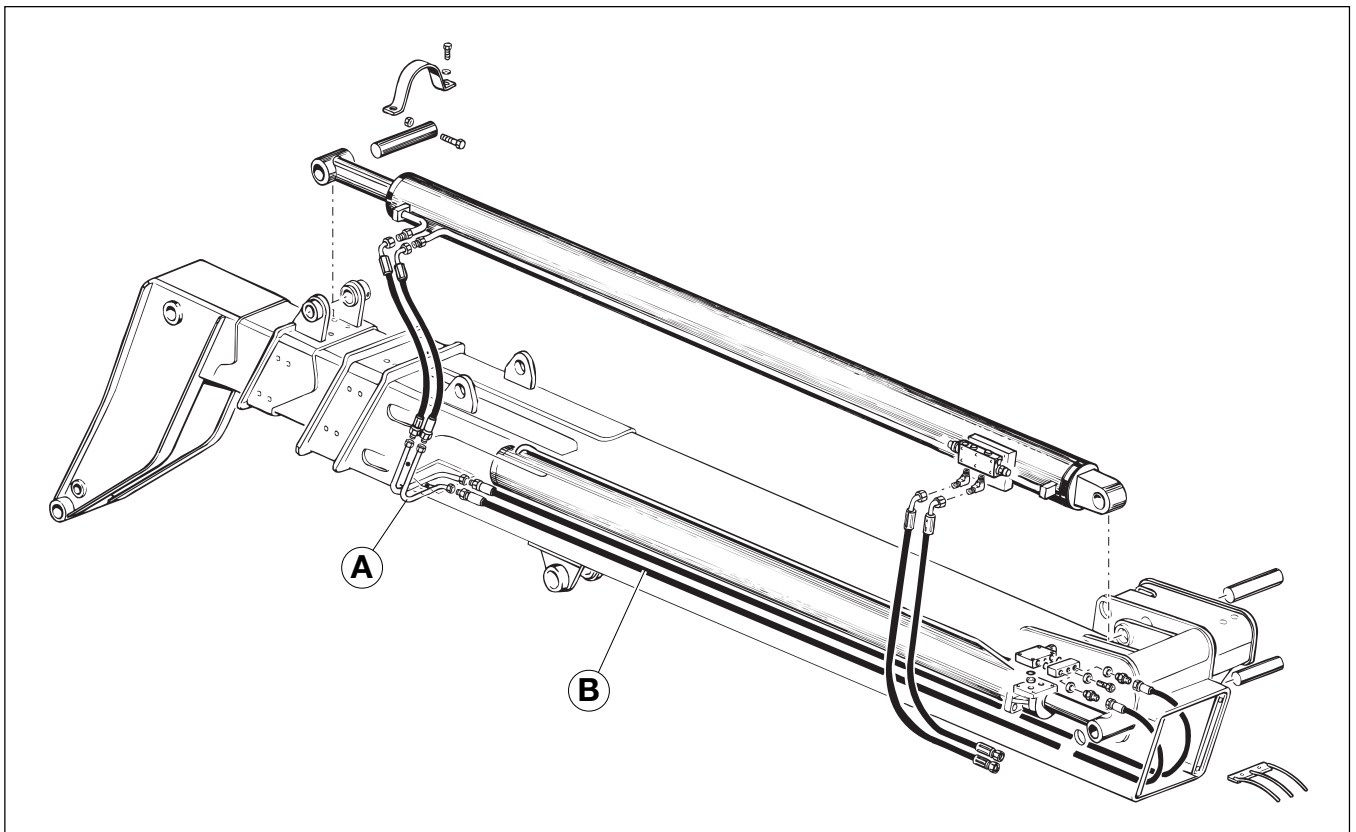

- Remove the rear closing cover of the boom.
- Find the defective hose inside the boom.

NOTICE


Before disconnecting the hydraulic piping, place containers of suitable size underneath to avoid oil spillage.

- Disconnect the hose **B** to be replaced from the fitting of the iron pipe **A** after fixing a string of adequate length to help the assembly of the new hose.
- Plug the fitting of pipe **A** to avoid that dirt and dust can enter the circuit.
- Disconnect also the second end of hose **B** and plug the block valve.
- Move to the rear side of the machine and pull off the disconnected hose.

- Remove the string from the old hose, connect it to one end of the new hose, and pull this hose into the boom.
- Reconnect the ends of the hose to the fitting and the valve and check for oil leaks.
- Refit the rear cover and test the boom operation.

7.2.2 Dismantling the hose guiding chain - Telelift 4017

If you have to remove the hose guiding chain from the boom, proceed as follows:

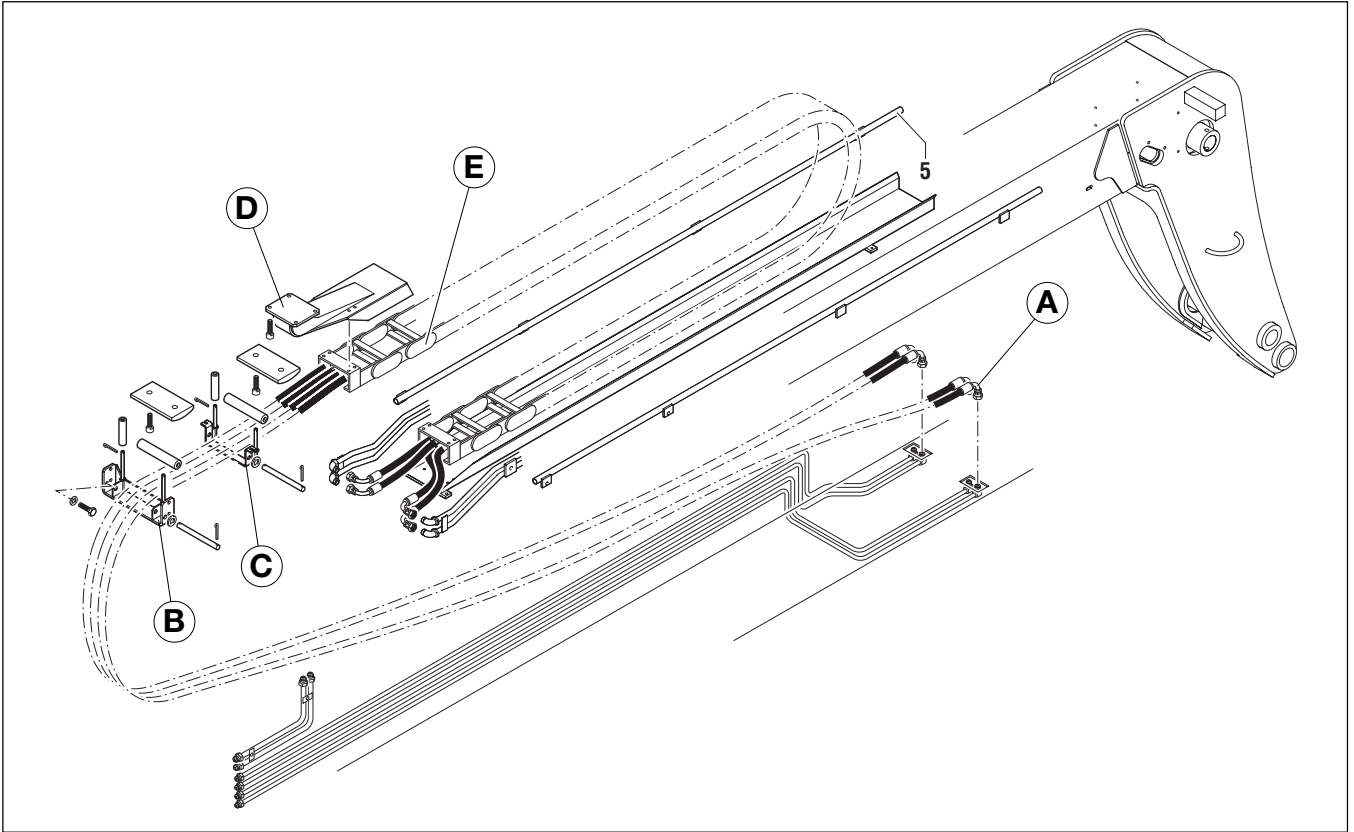


NOTICE


Before disconnecting the hydraulic piping, place containers of suitable size underneath to avoid oil spillage.

- Remove the 4 coupled hoses **A** connected to the iron pipes under the boom and place 4 plugs so you can move the machine without oil leaking.
- Remove the rear cover and extend the boom until the second telescope is beyond the two openings under the boom.
- Move to the rear side of the machine and pull the 4 hoses off the boom.
- Remove the first chain sliding roller **B** located on the third telescope, then remove the second roller **C** located on the fourth telescope.
- Disconnect the flex hoses from the pipes being careful to mark their position to help reassembly.

- Plug the fittings of the pipes to avoid that dirt and dust can enter the circuit.
- Remove the four fixing screws of the plastic chain from the raceway.
- Remove the three screws of bracket **D** supporting the chain.
- Pull the terminals of the hydraulic hoses outwards to pull the chain off the boom.
- Place the unwound chain on the ground and remove all crosspieces **E**.
- Replace any damaged hose.
- Space the internal spacers of the chain.
- Replace all of the crosspieces removed.
- Bend and prepare the chain for the assembly in the boom.
- Insert the holding chain into the boom so the four terminals are aligned with those of the fourth telescope.
- Connect the hoses to the pipes using the marks previously done as a reference.
- Replace the two sliding rollers **B-C** inside the boom.
- Connect the plastic chain to the raceway.
- Lock the chain bracket to the second telescope.
- Extend the boom so the four hoses can pass between the first and the second telescope.

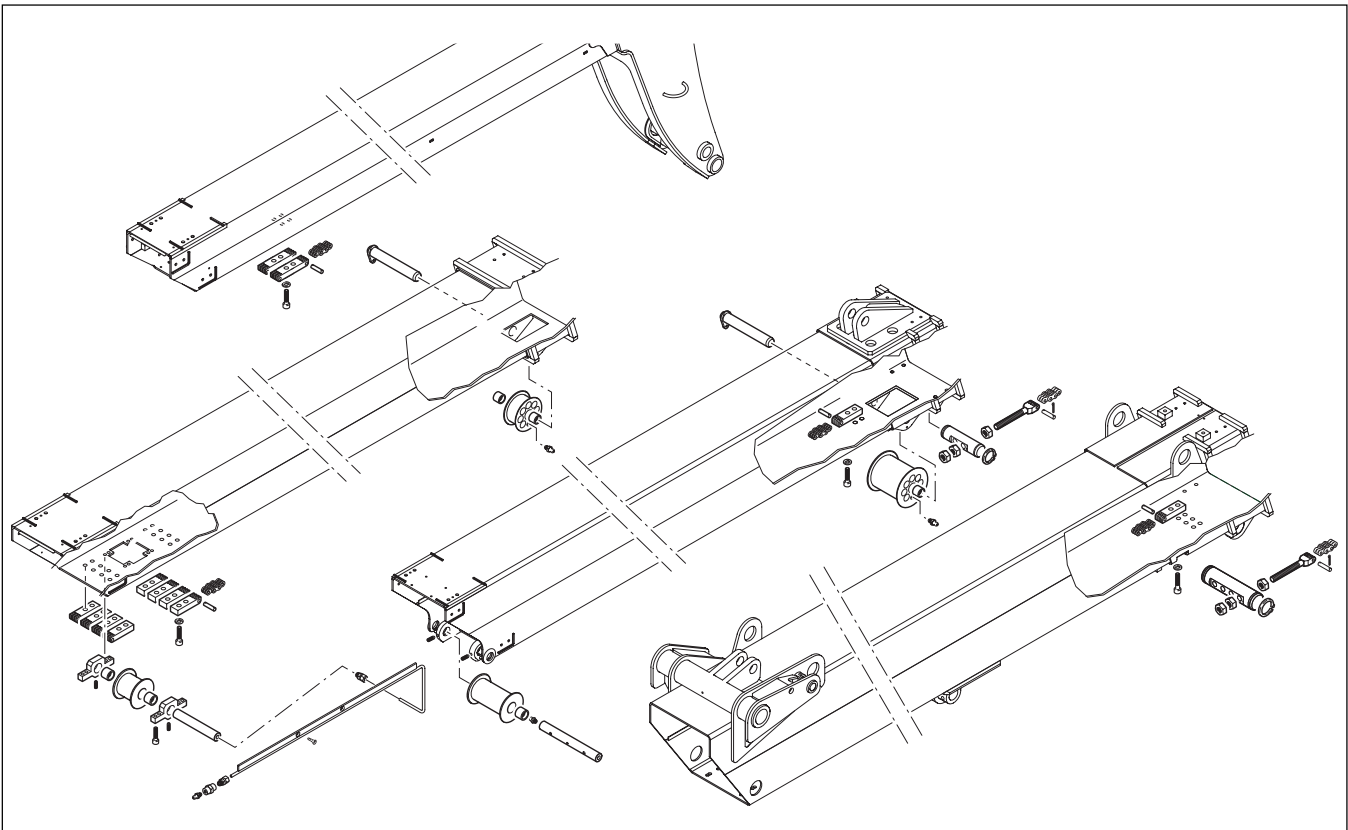

- Place the hoses into the boom.
- Remove the four plugs from the iron pipes and reconnect the hoses.
- Start the machine and check for oil leaks, then refit the rear cover.

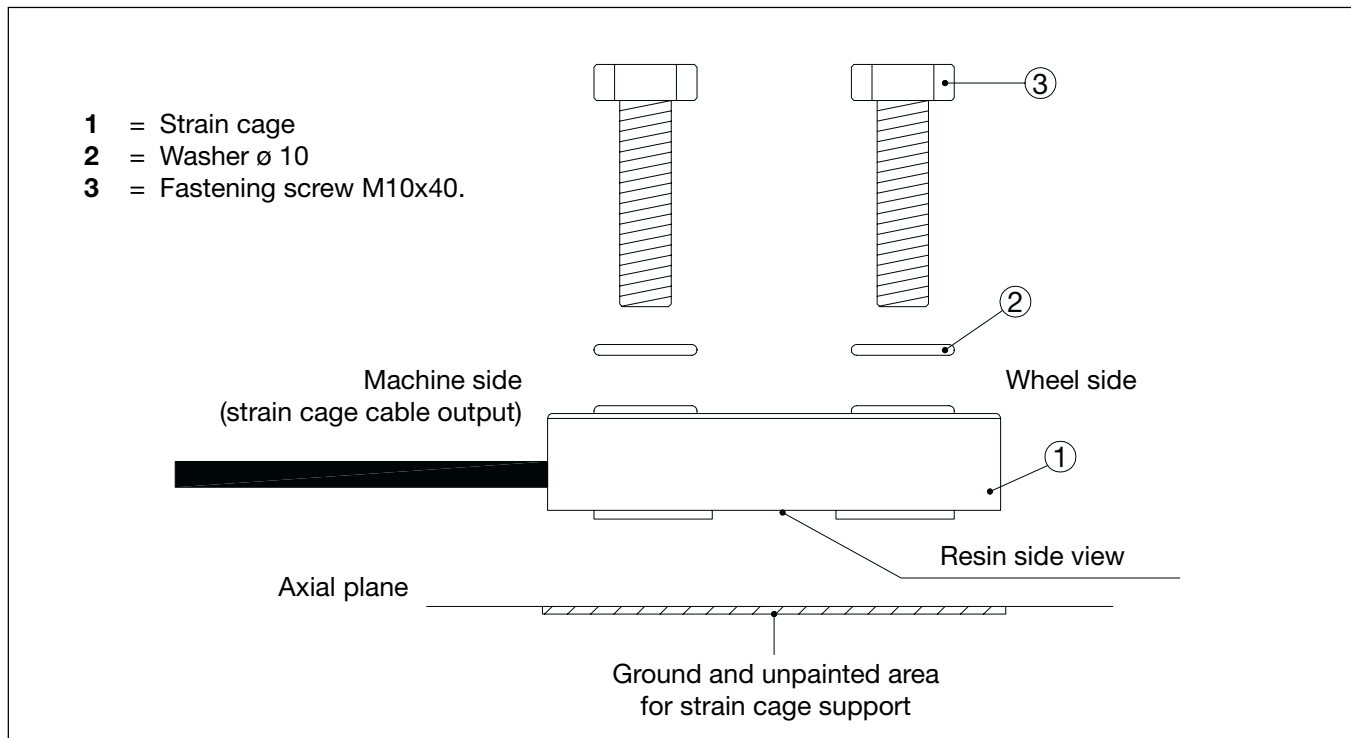7.2.3 Strain load cell tightening (Telelift 4017-4514)


In order to get the best results and avoid damaging the strain gage, follow these precautionary measures:

1 - PREPARATION:

- Thoroughly clean the whole tightening system, especially the ground and unpainted area.

2 - ASSEMBLY:

- Apply the strain gage with its resinated side facing the axle and holding the cable(s) toward the machine.
- Tighten the two screws with a torque wrench at 70 N/m.
- Mark the position of the screws with paint in order to make possible loosening visible to the eye.